




Additional Remote Pairing Procedures

Step 1

Identify your boards part number

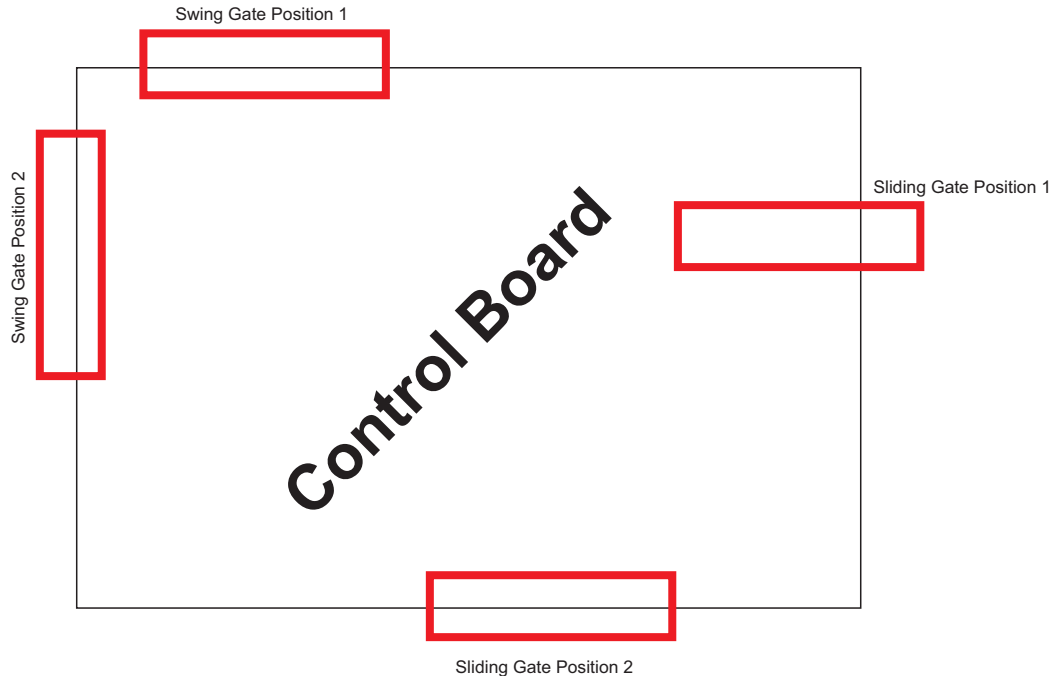

Step 2

Use the relevant instruction set located on one of the next two pages to pair your new remote.

Also note that if there is a QR code shown in the instruction set this can be scanned on your phone using a QR CODE scanner found through your app store to take you directly to a video link on pairing for your system.

You can re-order additional remote's at any time by visiting www.automotionplus.com.au



APC-RC4S
Keyring Remote



APC-RC450S
Long Range Remote



APC-RC4-SV
Sun Visor Remote + Clip

Also Available
ANT-1
Range Extending Antenna with
5 Metre Cable






Swing Gate Systems

APC-CBSW12 / APC-CBSW24

Pairing

- Press the small REMOTE button once on the circuit board and the LED Indicator will start to flash.
- Press (1 for DOUBLE gates) or (2 for SINGLE gates)
- Press (1 for DOUBLE gates) or (2 for SINGLE gates) again to test operation

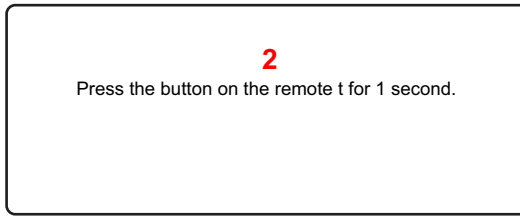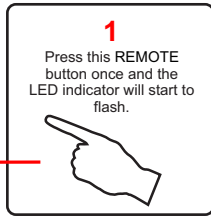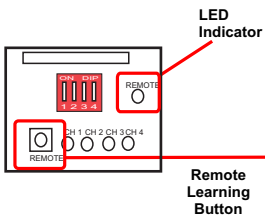

Scan Me

Deleting

- Press and hold the REMOTE button on the control board until the LED indicator is on solid then release the REMOTE button.

WARNING: This will delete all wireless equipment from the system.

APC-CB12-4CH / APC-CB24-4CH

Pairing


1. Press the LEARN CH button once for the channel group you wish to pair the remote too. (CH1/2 OR CH3/4).
2. Cycle to the desired channel by pressing the LEARN CH button. (The control panel indicates which channel you are on by flashing the channel's LED)
3. Press the desired button on the remote or the wireless button you wish to use for the channel.

- CH 1 Double Gate Opening
- CH 2 Single Gate Opening
- CH 3 Party Mode (Cancel Auto Close for one cycle)
- CH 4 Pedestrian Gate Unlock (Lock 2)

Repeat the above process for any additional remote's or wireless buttons that require programming.

Deleting

1. **PRESS AND HOLD** the LEARN CH button for the channel group you wish to delete until the channel groups LED's begin flashing simultaneously.
2. Release the LEARN CH button and wait for the LED's to stop flashing.
3. If the LED's Simultaneously flashed 3 times then stopped you have successfully deleted the remote's and/or buttons from this channel group..

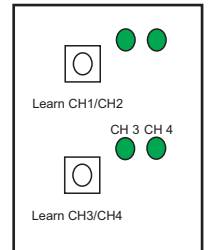

WARNING: This will delete all wireless equipment from the system.

APC-CBSW240AC

Pairing

1. Press SELECT button two/three times until cycled to the Learn Remote D-Gate (Double gates) or Learn Remote S-Gate (Single gates) LED.
2. Press the desired button on the wireless controller to be paired for double gate operation. Repeat for all necessary wireless controllers

Learn Single Single Gate
Learn Remote Double Gate



Deleting

1. Press SELECT button two/three time until cycled to the Learn Remote D-Gate (Double gates) or Learn Remote S-Gate (Single gates) LED
2. Press SET button to clear the memory




WARNING: This will delete all wireless equipment from the system.

Sliding Gate Systems

APC-CBSG12 / APC-CBSG24

Pairing

- Press the small REMOTE button once on the circuit board and the LED Indicator will start to flash.
- Press the Number 1 button on the remote for 1 second.
- Press the Number 1 remote button to test operation.

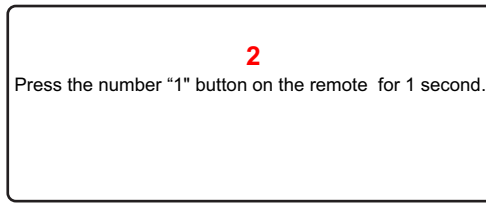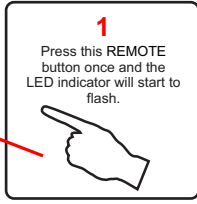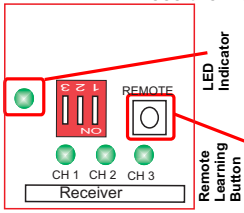

Scan Me

Deleting




- Press and hold the REMOTE button until the LED indicator is on solid then release the REMOTE button.

WARNING: This will delete all wireless equipment from the system.

APC-CBSG240AC V2

Pairing

- Press the small STUDY button for ONE SECOND then release.
- Press the NUMBER 1 button on the remote for 1 second.
- Press the remote button to test operation.

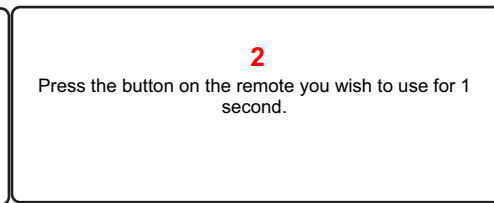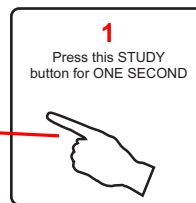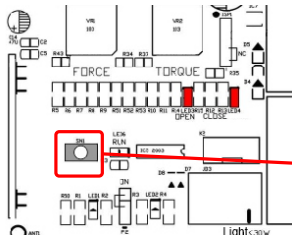

Deleting

Clearing the memory (Formatting)




- Press and hold the STUDY button for 5 seconds and a small BEEP will be heard. Release the STUDY button and all wireless equipment will be deleted.

WARNING: This will delete all wireless equipment from the system.

APC-CBSG240AC

Pairing

- Press the small AUTO LEARN button once and the AUTO LEARN Green LED will turn on.
- Press the button on the remote button you wish to use for 1 second.
- Press the remote button to test operation.

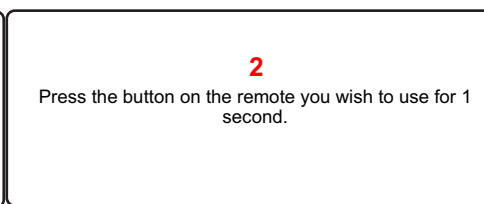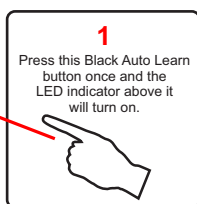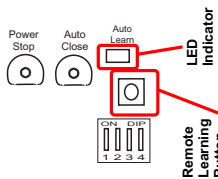

Deleting

Clearing the memory (Formatting)

- Press and hold the Auto Learn button for 7 seconds and the Green Auto Learn LED will start flashing, release the black button after 3 flashes and all wireless equipment will be cleared.

WARNING: This will delete all wireless equipment from the system.

CB-SGH/ CB-SG

Pairing

1. Press the LEARN CODE button once/twice to cycle to the function you wish to pair the remote button too.
2. Press the desired button on the remote or the wireless button you wish to use for the channel.

Repeat the above process for any additional remote's or wireless buttons that require programming.

Deleting

1. PRESS AND HOLD the LEARN CODE button until BOTH LED's begin to flash simultaneously then release.

WARNING: This will delete all wireless equipment from the system.

LED2 Full Gate Opening
LED1 Pedestrian Function/Party Mode (refer to installation manual)

