FW
r1.00



IS271 Rev.00 23/11/2023

B70/1T

centrale di comando 24Vdc per cancelli scorrevoli su colonna

ROGER BRUSHLESS

Istruzioni originali

IT - Istruzioni ed avvertenze per l'installatore
EN - Instructions and warnings for the installer
DE - Anweisungen und Hinweise für den Installateur
FR - Instructions et consignes pour l'installateur
ES - Instrucciones y advertencias para el instalador
PT - Instruções e advertências para o instalado
NL - Aanwijzingen en waarschuwingen voor de installateur
PL - Instrukcja i ostrzeżenia dla instalatora

ROGER TECHNOLOGY

INDICE • INDEX • INDEX • INDEXER • ÍNDICE • ÍNDICE • INDEX • INDEKS

ITALIANO

1 Simbologia 22
2 Descrizione prodotto 22
3 Caratteristiche tecniche prodotto 23
4 Descrizione dei collegamenti 23
5 Comandi e accessori 26
6 Tasti funzione e display 28
7 Accensione o messa in servizio 28
8 Modalità funzionamento display 29
9 Apprendimento della corsa 31
10 Indice dei parametri 34
11 Menù parametri 36
12 Parametri speciali serie High Speed 45
13 Parametri speciali serie Reversibile 46
14 Segnalazione degli ingressi di sicurezza e dei comandi (modalità TEST) 47
15 Segnalazione allarmi e anomalie 48
16 Diagnostica - Modalità INFO 50
17 Funzionamento in assenza di finecorsa 51
18 Sblocco meccanico 51
19 Modalità di recupero posizione 51
20 Collaudo 52
Dichiarazione CE di Conformità 52

ENGLISH

1 Symbols 53
2 Product description 53
3 Technical characteristics of product 54
4 Description of connections 54
5 Commands and Accessories 57
6 Function buttons and display 59
7 Switching on or commissioning 59
8 Display function modes 60
9 Travel acquisition 62
10 Index of parameters 65
11 Parameters menu 67
12 Special parameters for High Speed series 76
13 Special parameters for Reversible series 77
14 Safety input and command status (TEST mode) 78
15 Alarms and faults 79
16 Procedural verifications - INFO Mode 81
17 Operation without limit switches 82
18 Mechanical release 82
19 Position recovery mode 82
20 Initial testing 83
Declaration CE of Conformity 83

DEUTSCH

1 Symbole 84
2 Produktbeschreibung 84
3 Technische Daten des Produkts 85
4 Beschreibung der Anschlüsse 85
5 Befehle und Zubehör 88
6 Funktionstasten und Display 90
7 Einschalten oder Inbetriebnahme 90
8 Funktion Display 91
9 Einlernen des Torlaufs 92
10 Index der Parameter 95
11 Menü Parameter 98
12 Sonderparameter für die Baureihe High Speed 107
13 Sonderparameter für die Reversibel Motor 108
14 Meldung der Sicherheitseingänge und der Befehle (TEST-Modus) 109
15 Meldung von Alarmen und Störungen 110
16 Diagnostik - Betriebsart INFO 112
17 Betrieb ohne Endschalter 113
18 Mechanische Entriegelung 113
19 Modus zur Korrektur der Position 113
20 Modus zur Korrektur der Position 114
21 Abnahmeprüfung 114
Konformitätserklärung 115

FRANÇAIS

1 Symboles 116
2 Description produit 116
3 Caractéristiques techniques produit 117
4 Description des raccordements 117
5 Commandes et accessoires 120
6 Touches fonction et écran 122
7 Allumage ou mise en service 122
8 Modalités fonctionnement écran 123
9 Apprentissage de la course 125
10 Indice des paramètres 128
11 Menu paramètres 130
12 Paramètres spéciaux série High Speed 139
13 Paramètres spéciaux série Réversible 140
14 Signalisation des entrées de sécurité et des commandes (modalités TEST) 141
15 Signalisations alarmes et anomalies 142
16 Diagnostic - Modalité info 144
17 Fonctionnement sans fins de course 145
18 Déblocage mécanique 145
19 Modalités de récupération position 145
20 Test 146
Déclaration de conformité CE 146

ESPAÑOL

1 Símbolos 147
2 Descripción del producto 147
3 Características técnicas del producto 148
4 Descripción de las conexiones 148
5 Comandos y accesorios 151
6 Teclas de función y pantalla 153
7 Encendido o puesta en servicio 153
8 Modo de funcionamiento de la pantalla 154
9 Aprendizaje del recorrido 155
10 Índice de los parámetros 159
11 Menú de parámetros 161
12 Parámetros especiales de la serie High Speed 170
13 Parámetros especiales de la serie Reversible 171
14 Señalización de las entradas de seguridad y de los comandos (Modo TEST) 172
15 Señalización de alarmas y anomalías 173
16 Diagnostica - Modo Info 175
17 Funcionamiento sin finales de carrera 176
18 Desbloqueo mecánico 176
19 Modo de recuperación de la posición 176
20 Ensayo 177
Declaración CE de Conformidad 177

PORTUGUÊS

1 Simbologia 178
2 Descrição do produto 178
3 Caraterísticas técnicas do produto 179
4 Descrição das ligações 179
5 Comandos e acessórios 182
6 Teclas de função e display 184
7 Ignição ou comissionamento 184
8 Modalidade de funcionamento do display 185
9 Aprendizagem do curso 187
10 Índice dos parâmetros 190
11 Menu de parâmetros 192
12 Parâmetros especiais série HIGH SPEED 201
13 Parâmetros especiais série Reversível 202
14 Sinalização das entradas de segurança e dos comandos (modalidade TEST) 203
15 Sinalização de alarmes e anomalias 204
16 Diagnosticar - Modo INFO 206
17 Funcionamento sem interruptores de fim de curso 207
18 Desbloqueio mecânico 207
19 Modalidade de recuperação de posição 207
20 Teste 208
Declaração CE de conformidade 208

DUTCH


1 Symbolen 209
2 Beschrijving product 209
3 Technische kenmerken product 210
4 Beschrijving aansluitingen 210
5 Bedieningen en accessoires 213
6 Functietoetsen en display 215
7 Inschakeling en inbedrijfsstelling 215
8 Bedrijfsmodus display 216
9 Lering van de slag 218
10 Inhoudsopgave van de parameters 221
11 Menu parameters 223
12 Speciale parameters serie High Speed 232
13 Speciale parameters serie Omkeerbare 233
14 Signalering van de veiligheidsingangen en van de bedieningen (modus TEST) 234
15 Signalering alarmen en storingen 235
16 INFO Modus 237
17 Werking zonder eindschakelaars 238
18 Mechanische deblokkering 238
19 Modus terugwinning positie 238
20 Test 239
EG-verklaring van overeenstemming 239

POLSKI

1 Symbole 240
2 Opis urządzenia 240
3 Charakterystyka techniczna urządzenia 241
4 Opis połączeń 241
5 Elementy sterownicze i akcesoria 244
6 Przyciski funkcyjne i wyświetlacz 246
7 Włączanie lub uruchamianie 246
8 Tryby działania wyświetlacza 247
9 Programowanie ruchu 249
10 Spis parametrów 252
11 Menu parametrów 254
12 Parametry specjalne seria High Speed 263
13 Parametry specjalne seria Odwracalny 264
14 Sygnalizacja wejść bezpieczeństwa i sygnałów sterowniczych (tryb TEST) 265
15 Sygnalizacje alarmowe i błędy 266
16 Tryb INFO 268
17 Działanie bez wyłączników krańcowych 269
18 Odblokowanie mechaniczne 269
19 Tryb szukania pozycji 269
20 Testy odbiorcze 270
Deklaracja zgodności WE 270

FW
r1.00

Dispositivo IP B74/BCONNECT
B74/BCONNECT IP device

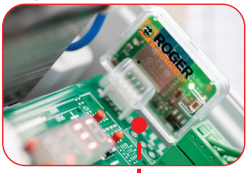

Connessione RS485 master/slave (utilizzo futuro)
RS485 master/slave connection (future use)

Display a 4 cifre e 6 tasti di programmazione
4 digit display and 6 programming buttons

Connettore ad innesto per radio ricevente
Plug-in connector for radio receiver

Morsettiere dei comandi e delle sicurezze
Commands and safeties terminal blocks

Connettore per applicazione WiFi B74/BCONNECT
Connector for B74/BCONNECT WiFi application

Microcontrollore DSP 70 MIPS
DSP CPU 70 MIPS

Connettori di collegamento encoder, finecorsa e sblocco
Plug for encoder, limit switch and unlock connection


Fusibile 2A
Fuse 2A


Collegamento MOTORE (cavo 3 fili)
MOTOR connection (3 wiring cable)

Luce di cortesia
Courtesy light

Ingresso alimentazione (secondario trasformatore)
Power supply input (transformer's secondary)

Fusibile 15A
Fuse 15A

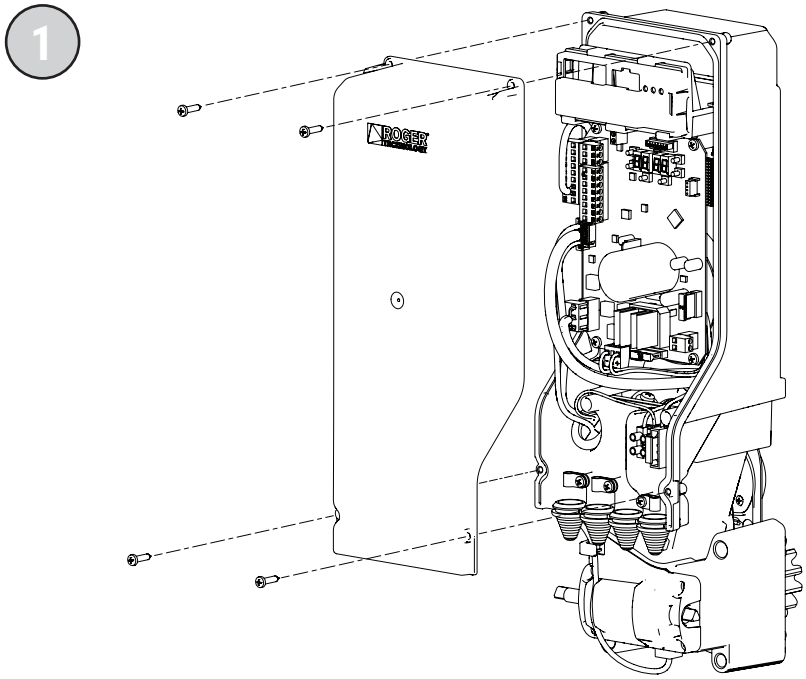
1
ROGER

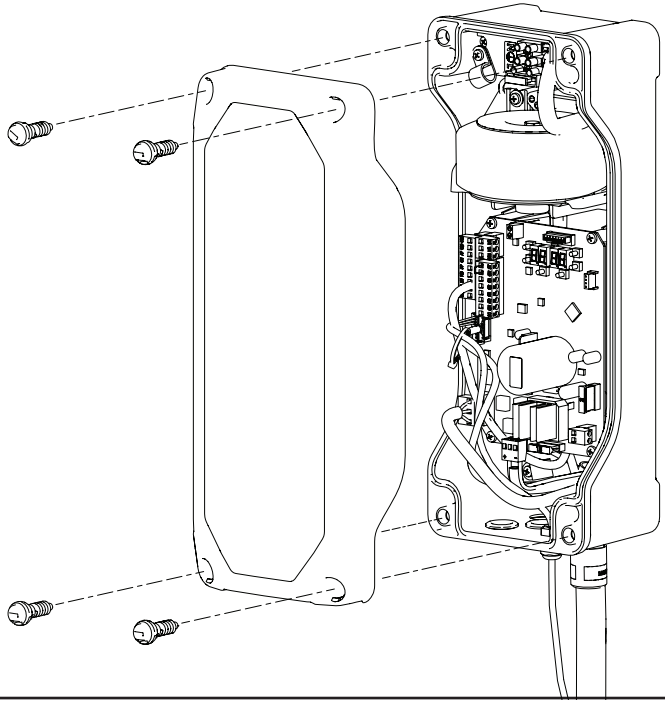


Scheda carica batteria **B71/BC** - **B71/BC** battery charger

TW90/800
TW90/600/HS
TW90/800/R


2


dal secondario del trasformatore
from the secondary of the transformer

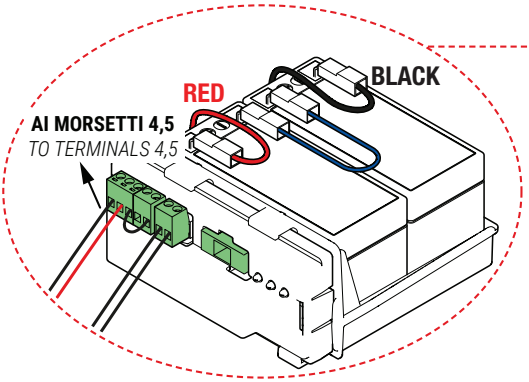


2 x 12V 1,2Ah


AGM Battery ONLY

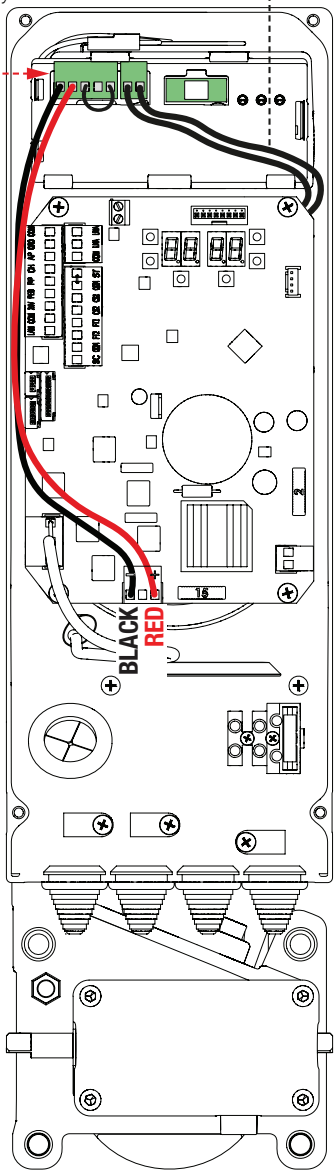

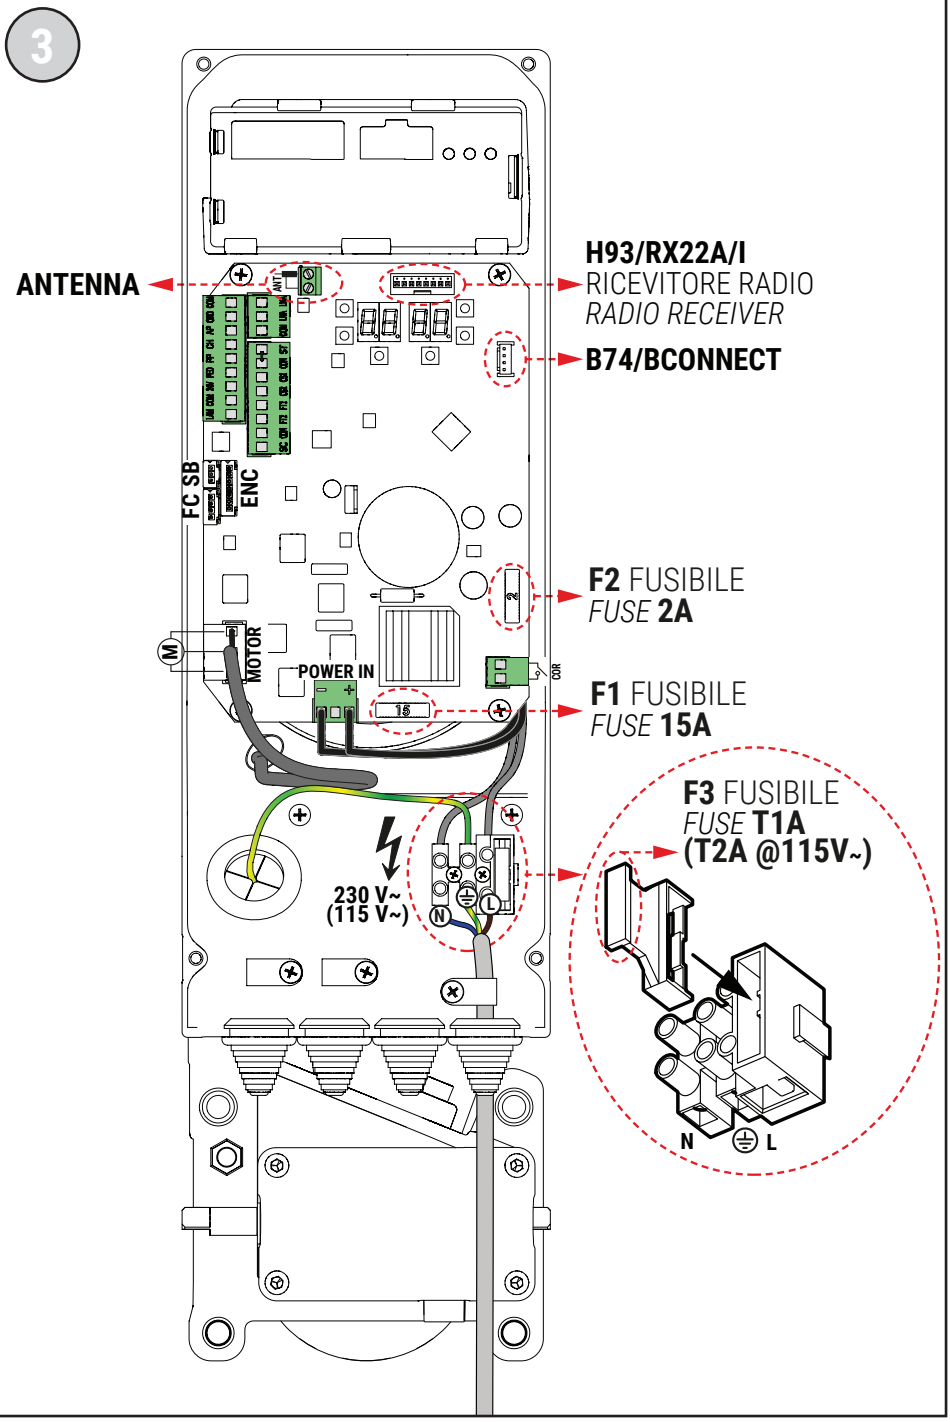

3
ANTENNA
H93/RX22A/I
RICEVITORE RADIO
RADIO RECEIVER
B74/BCONNECT
FC SB
ENC
F2 FUSIBILE
FUSE 2A
MOTOR
POWER IN
F1 FUSIBILE
FUSE 15A
F3 FUSIBILE
FUSE T1A
(T2A @115V~)
230 V~
(115 V~)
N
L

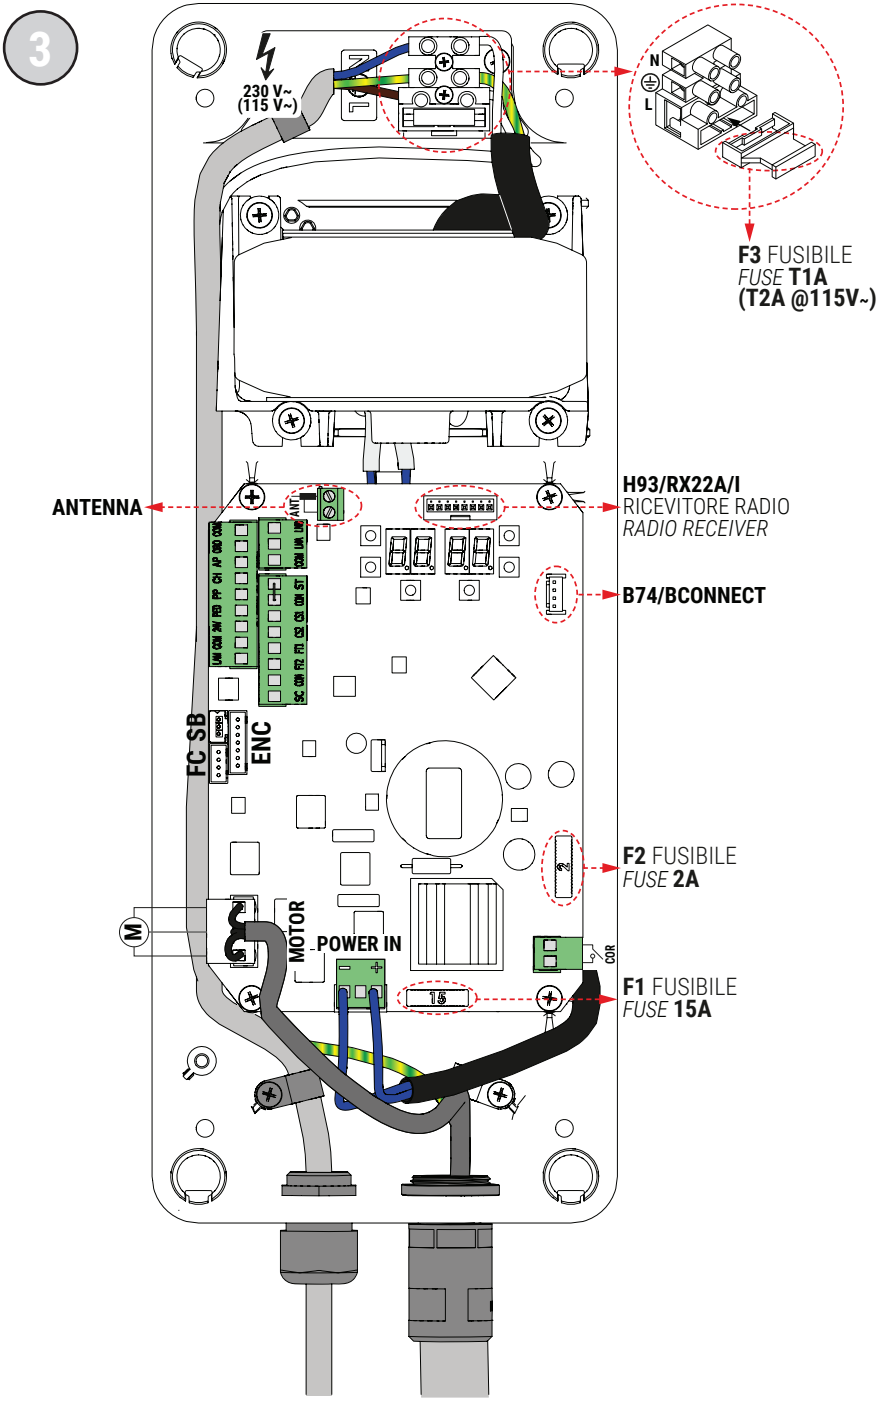

3
230 V~
(115 V~)
N
L
F3 FUSIBILE
FUSE T1A
(T2A @115V~)
ANTENNA
H93/RX22A/I
RICEVITORE RADIO
RADIO RECEIVER
B74/BCONNECT
FC SB
ENC
F2 FUSIBILE
FUSE 2A
M
MOTOR
POWER IN
COR
F1 FUSIBILE
FUSE 15A

TW90/600 High Speed

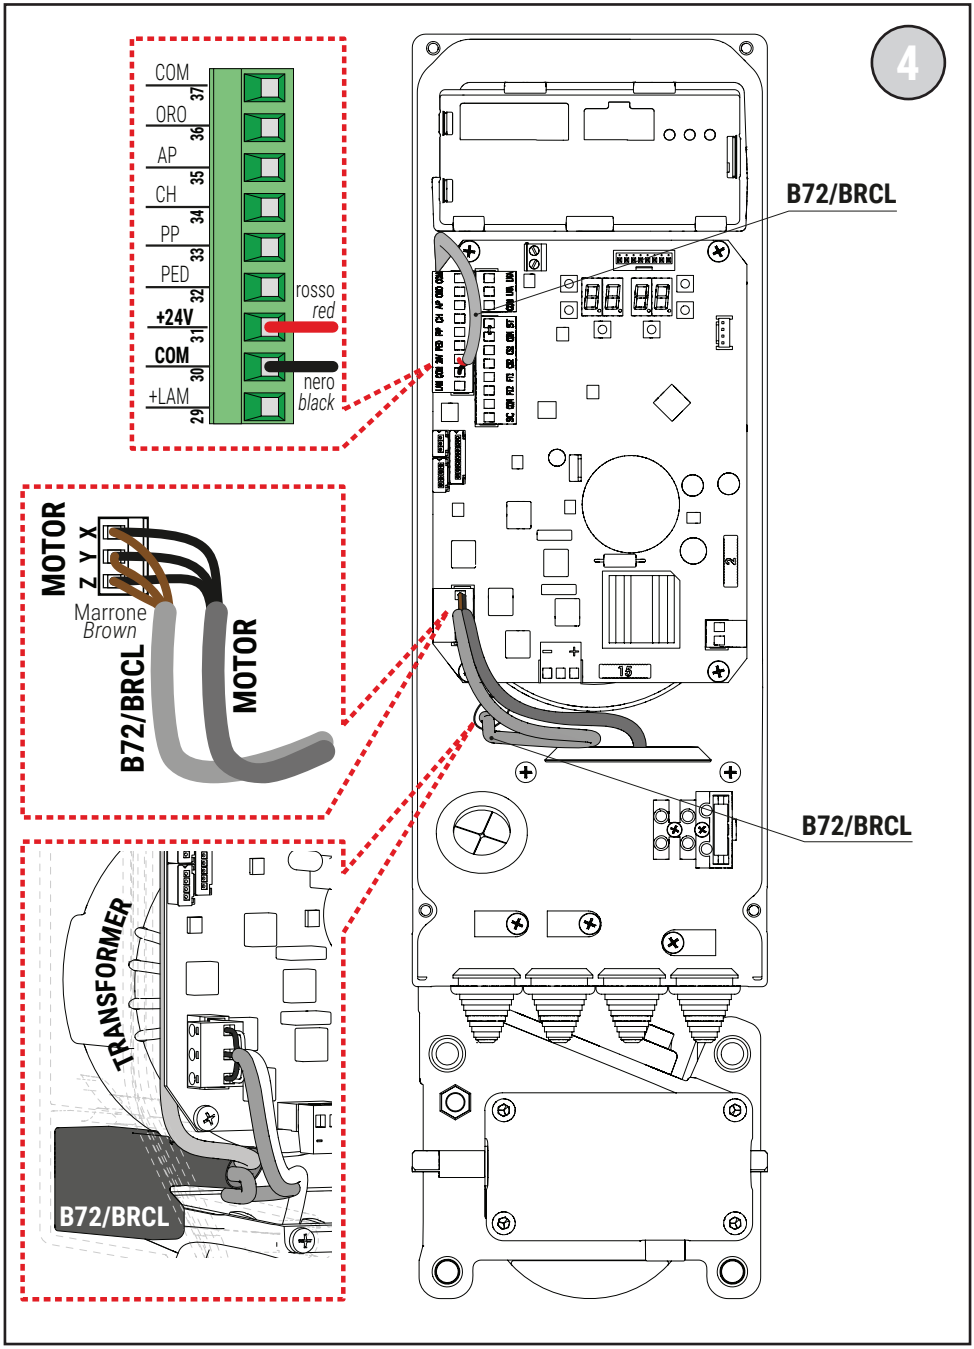


4

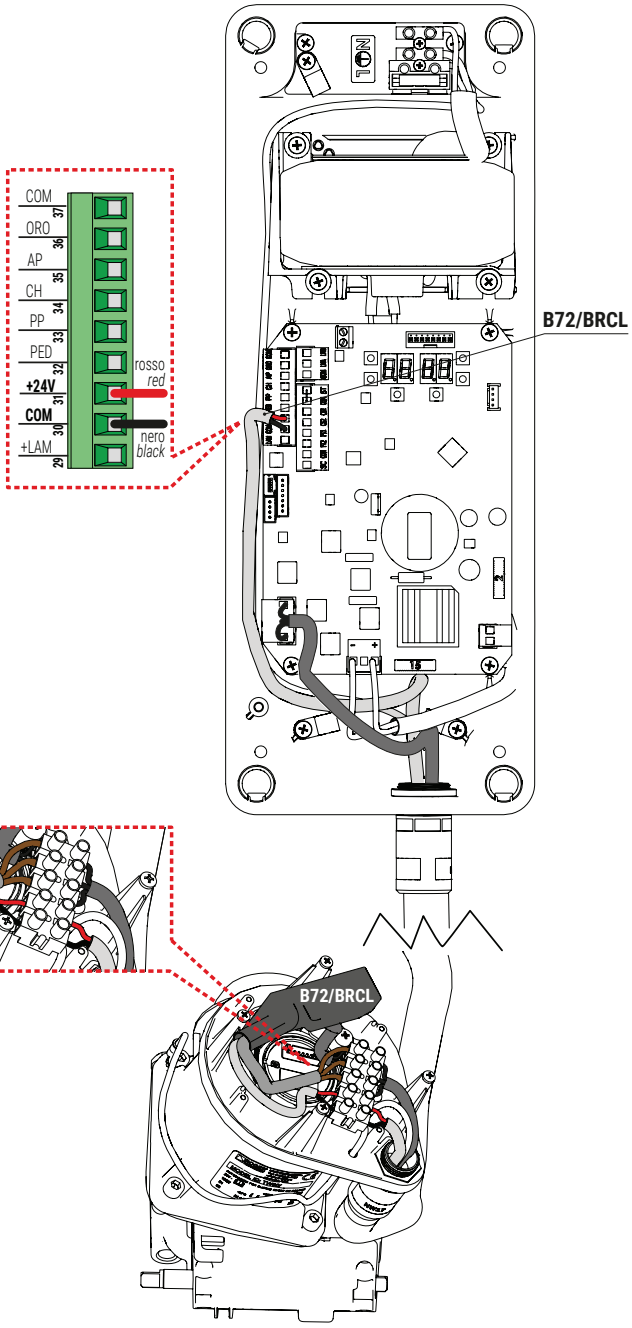

COM 37
ORO 36
AP 35
CH 34
PP 33
PED 32
+24V 31
COM 30
+LAM 29
rosso red
nero black
B72/BRCL
B72/BRCL

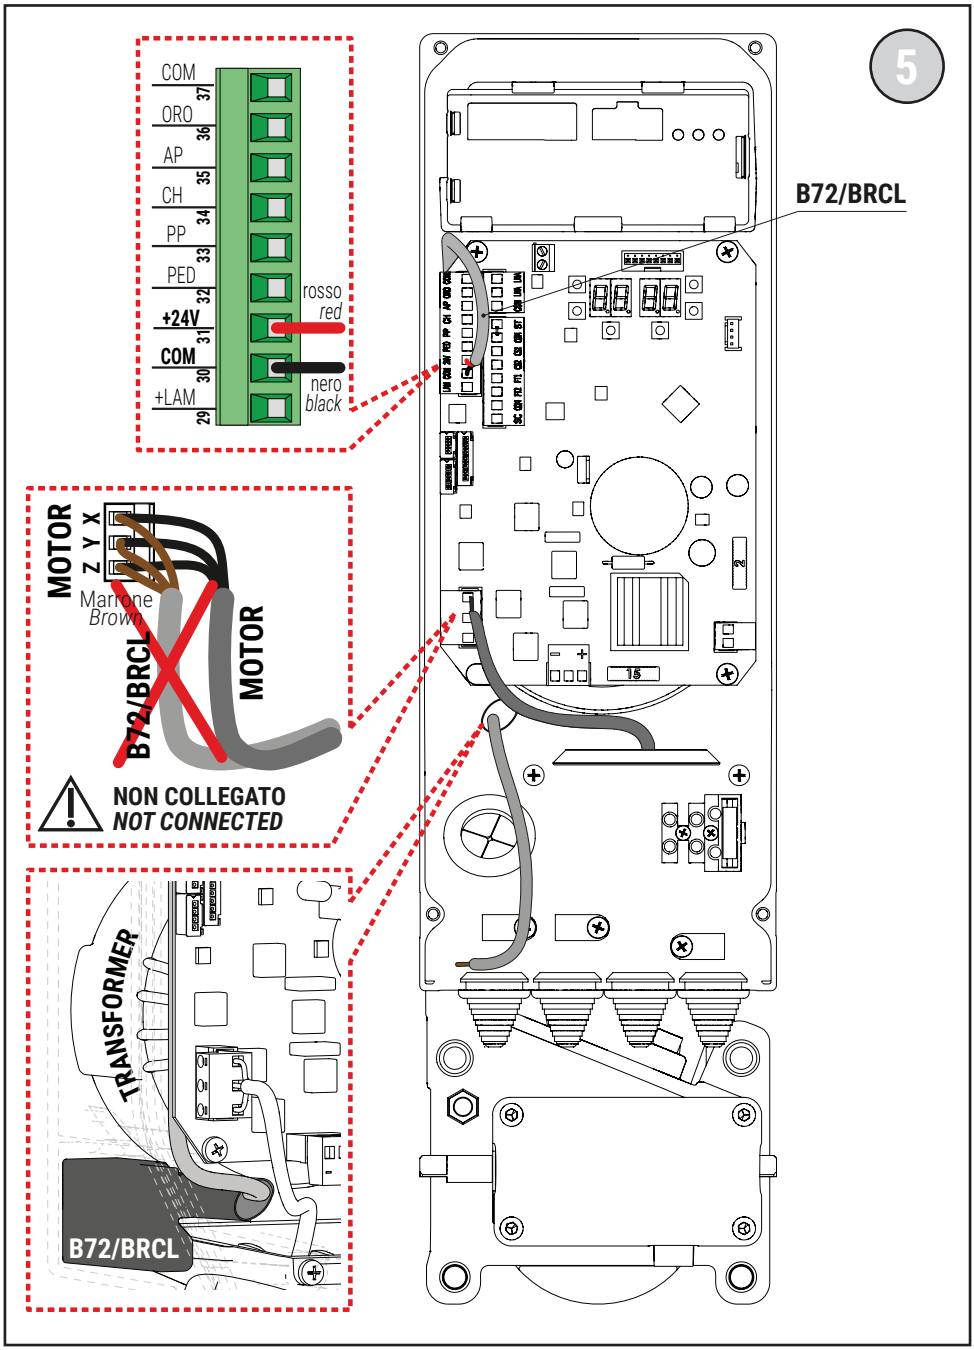
5
COM 37
ORO 36
AP 35
CH 34
PP 33
PED 32
+24V 31
COM 30
+LAM 29
rosso red
nero black
B72/BRCL
MOTOR
Z Y X
Marrone Brown
B72/BRCL
MOTOR
NON COLLEGATO
NOT CONNECTED
TRANSFORMER
B72/BRCL


5

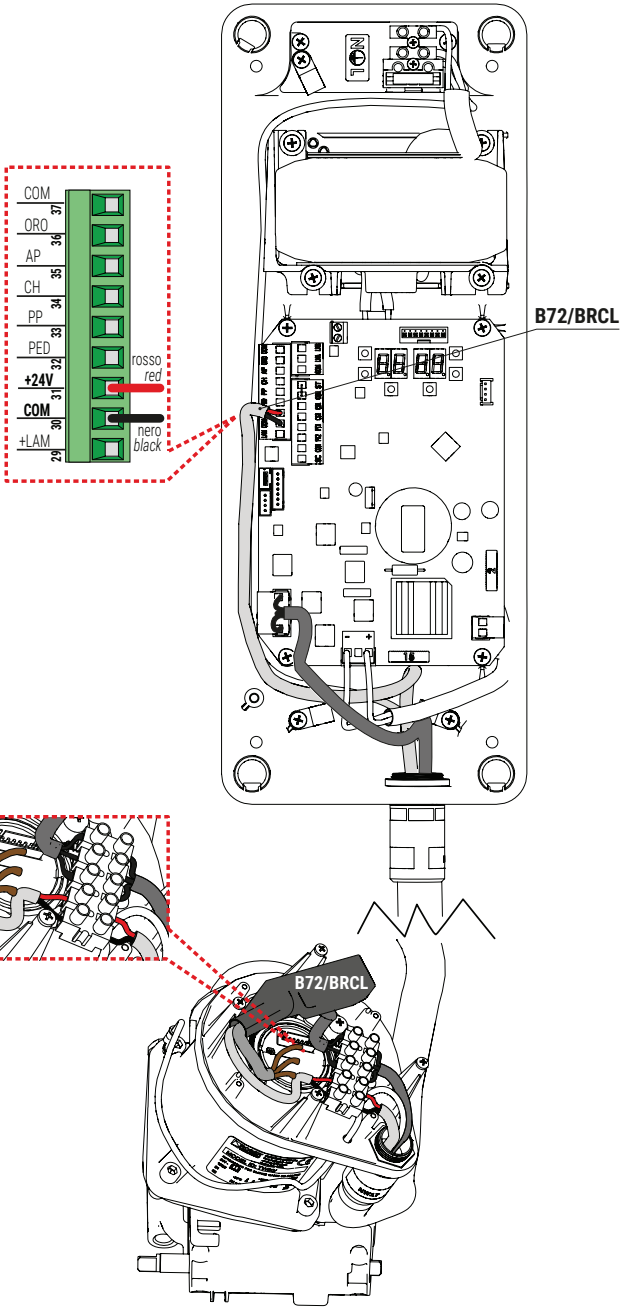
COM
ORO
AP
CH
PP
PED
+24V
COM
+LAM
37
36
35
34
33
32
31
30
29
rosso
red
nero
black
B72/BRCL
B72/BRCL

6

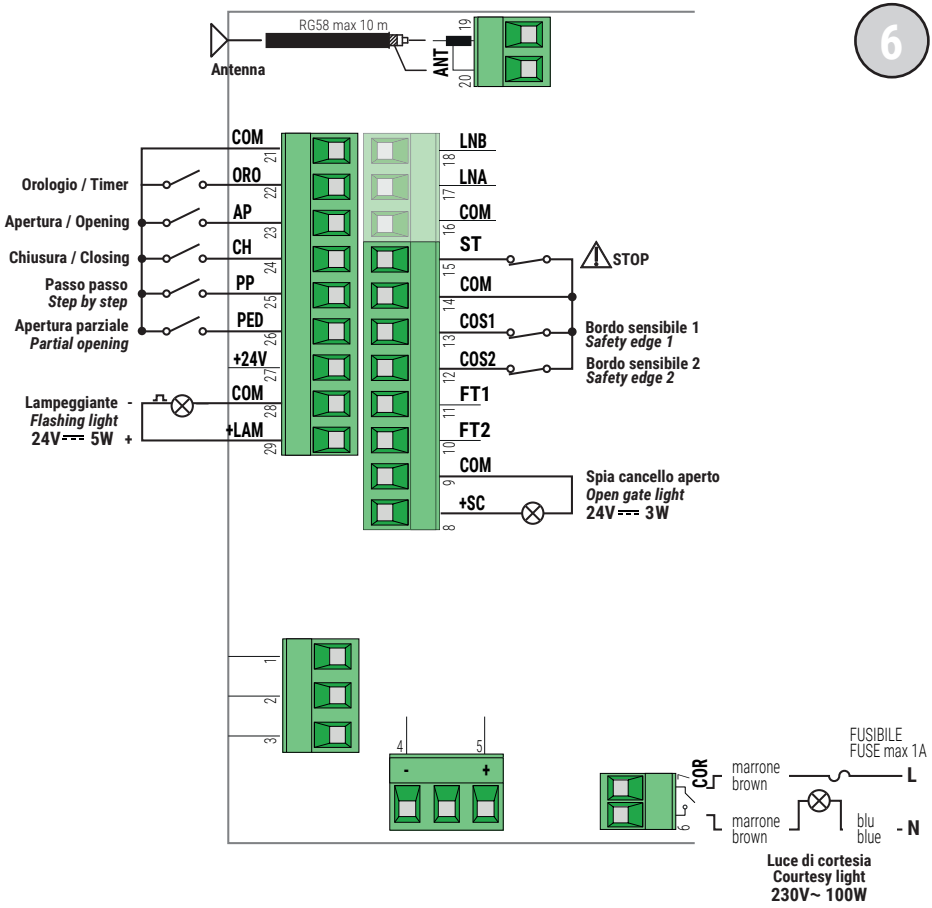
RG58 max 10 m
Antenna
ANT
19
20
COM
21
Orologio / Timer
ORO
22
Apertura / Opening
AP
23
Chiusura / Closing
CH
24
Passo passo
Step by step
PP
25
Apertura parziale
Partial opening
PED
26
+24V
27
Lampeggiante -
Flashing light
24V⎓ 5W +
COM
28
+LAM
29
LNB
18
LNA
17
COM
16
ST
15
STOP
COM
14
COS1
13
Bordo sensibile 1
Safety edge 1
COS2
12
Bordo sensibile 2
Safety edge 2
FT1
11
FT2
10
COM
9
+SC
8
Spia cancello aperto
Open gate light
24V⎓ 3W
1
2
3
4
5
-
+
COR
7
6
marrone
brown
FUSIBILE
FUSE max 1A
L
marrone
brown
blu
blue
- N
Luce di cortesia
Courtesy light
230V~ 100W


7

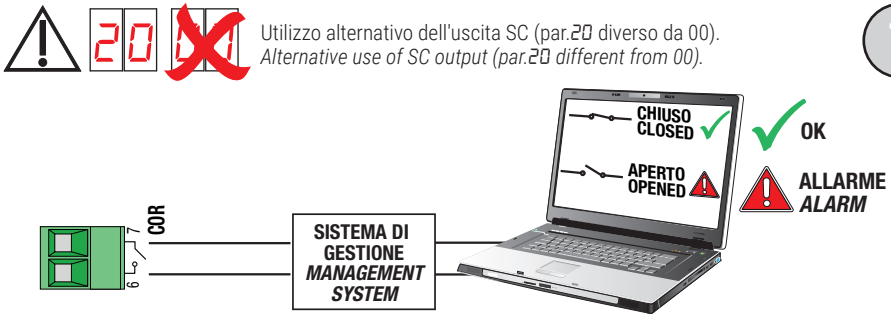

20
Utilizzo alternativo dell'uscita SC (par.20 diverso da 00).
Alternative use of SC output (par.20 different from 00).
COR
7
6
SISTEMA DI GESTIONE
MANAGEMENT SYSTEM
CHIUSO
CLOSED
APERTO
OPENED
OK
ALLARME
ALARM

COLLEGAMENTO CON 1 COPPIA FOTOCELLULE SINCRONIZZATE (MODALITÁ NORMALE, SOLO COPPIA MASTER)
CONNECTION WITH 1 SYNCHRONISED PHOTOCELL PAIR (NORMAL MODE, MASTER PAIR ONLY)


8

ROSSO = libero da jumper
RED = jumper free

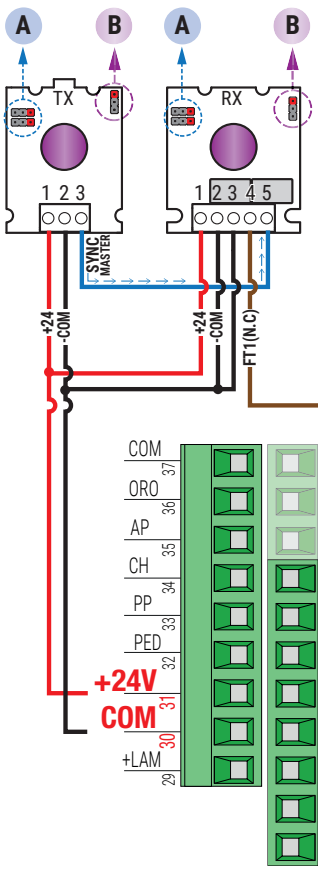

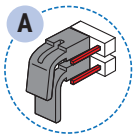



JUMPER DI SINCRONIZZAZIONE (PER MASTER)
SYNCHRONISATION JUMPER (FOR MASTER)



JUMPER DI ALLINEAMENTO (PER MASTER) OFF*
ALIGNMENT JUMPER (FOR MASTER) OFF*

*** Per eseguire la modalità in di allineamento ottico (NOTA: consultare le istruzioni delle fotocellule):**
**** To perform optical alignment mode (NOTE: refer to photocell instructions):***

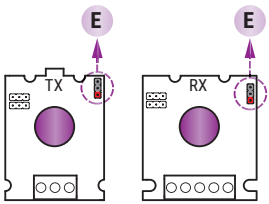



JUMPER DI ALLINEAMENTO ON*
ALIGNMENT JUMPER ON*


ATTENZIONE! Modificare la posizione dei jumper di sincronizzazione o di allineamento solamente quando le fotocellule sono **NON ALIMENTATE**! La configurazione scelta con i jumper viene memorizzata dalle fotocellule solamente all'accensione delle fotocellule.
Scollegare la morsettiera della centrale che fornisce alimentazione alle fotocellule, oppure togliere completamente la tensione al controller digitale (scollegando, se presenti, anche le batterie di backup) e verificare nella fotocellula TX / RX che il LED rosso di alimentazione sia spento; procedere soltanto ora all'impostazione della configurazione dei jumper.
ATTENTION! Please ensure that the photocell jumpers are only changed with the power to the control panel switched off, including the disconnection of any battery backup. Remove the terminal of the photocell inputs or completely remove the voltage from the digital controller (check that the digital controller is not powered by backup batteries) and check that the TX / RX photocell red power LED is off.

SI RACCOMANDA L' USO DI fotocellule Serie **F4ES - F4S / RECOMMENDED USE for** Series **F4ES - F4S** photocells

COLLEGAMENTO CON 2 COPPIE FOTOCELLULE SINCRONIZZATE (MODALITÁ NORMALE, 1 MASTER E 1 SLAVE)
CONNECTION WITH 2 SYNCHRONISED PHOTOCELL PAIRS (NORMAL MODE, 1 MASTER AND 1 SLAVE)

ROSSO = libero da jumper
RED = jumper free

9

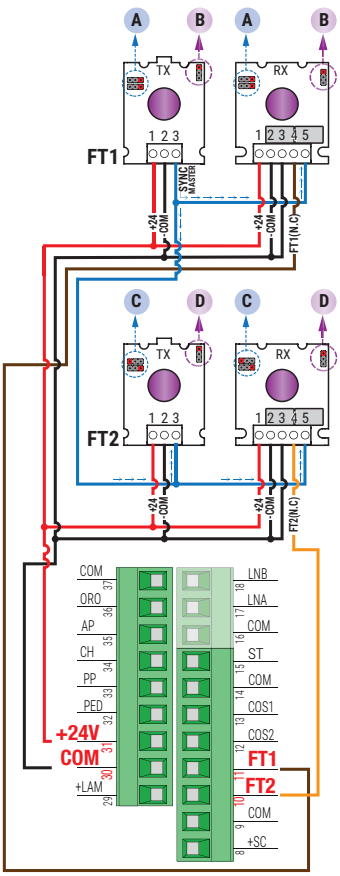



JUMPER DI SINCRONIZZAZIONE (PER MASTER)
SYNCHRONISATION JUMPER (FOR MASTER)



JUMPER DI ALLINEAMENTO (PER MASTER) OFF*
ALIGNMENT JUMPER (FOR MASTER) OFF





JUMPER DI SINCRONIZZAZIONE (PER SLAVE1)
SYNCHRONISATION JUMPER (FOR SLAVE1)



JUMPER DI ALLINEAMENTO (PER SLAVE1) OFF*
ALIGNMENT JUMPER (FOR SLAVE1) OFF

*** Per eseguire la modalità in di allineamento ottico (NOTA: consultare le istruzioni delle fotocellule):**
**** To perform optical alignment mode (NOTE: refer to photocell instructions):***

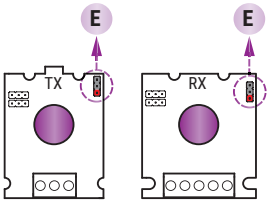



JUMPER DI ALLINEAMENTO ON*
ALIGNMENT JUMPER ON


ATTENZIONE! Modificare la posizione dei jumper di sincronizzazione o di allineamento solamente quando le fotocellule sono **NON ALIMENTATE**! La configurazione scelta con i jumper viene memorizzata dalle fotocellule solamente all'accensione delle fotocellule.
Scollegare la morsettiera della centrale che fornisce alimentazione alle fotocellule, oppure togliere completamente la tensione al controller digitale (scollegando, se presenti, anche le batterie di backup) e verificare nella fotocellula TX / RX che il LED rosso di alimentazione sia spento; procedere soltanto ora all'impostazione della configurazione dei jumper.
ATTENTION! Please ensure that the photocell jumpers are only changed with the power to the control panel switched off, including the disconnection of any battery backup. Remove the terminal of the photocell inputs or completely remove the voltage from the digital controller (check that the digital controller is not powered by backup batteries) and check that the TX / RX photocell red power LED is off.


SI RACCOMANDA L' USO DI fotocellule Serie **F4ES - F4S / RECOMMENDED USE for** Series **F4ES - F4S** photocells

COLLEGAMENTO CON 1 COPPIA FOTOCELLULE SINCRONIZZATE (MODALITÁ NORMALE, SOLO COPPIA MASTER)
CONNECTION WITH 1 SYNCHRONISED PHOTOCELL PAIR (NORMAL MODE, MASTER PAIR ONLY)


ROSSO = libero da jumper
RED = jumper free

10

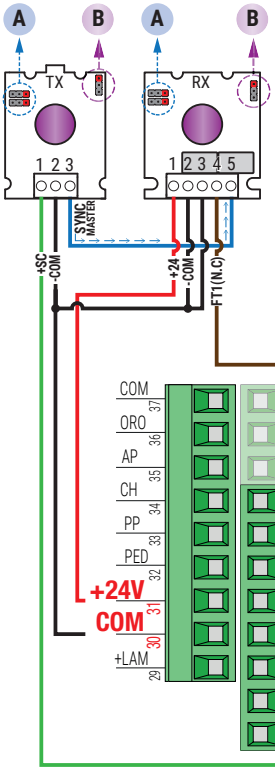





JUMPER DI SINCRONIZZAZIONE (PER MASTER)
SYNCHRONISATION JUMPER (FOR MASTER)



JUMPER DI ALLINEAMENTO (PER MASTER) OFF*
ALIGNMENT JUMPER (FOR MASTER) OFF*

*** Per eseguire la modalità in di allineamento ottico (NOTA: consultare le istruzioni delle fotocellule):**
**** To perform optical alignment mode (NOTE: refer to photocell instructions):***

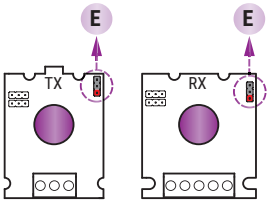



JUMPER DI ALLINEAMENTO ON*
ALIGNMENT JUMPER ON*


ATTENZIONE! Modificare la posizione dei jumper di sincronizzazione o di allineamento solamente quando le fotocellule sono **NON ALIMENTATE**! La configurazione scelta con i jumper viene memorizzata dalle fotocellule solamente all'accensione delle fotocellule.
Scollegare la morsettiera della centrale che fornisce alimentazione alle fotocellule, oppure togliere completamente la tensione al controller digitale (scollegando, se presenti, anche le batterie di backup) e verificare nella fotocellula TX / RX che il LED rosso di alimentazione sia spento; procedere soltanto ora all'impostazione della configurazione dei jumper.
ATTENTION! Please ensure that the photocell jumpers are only changed with the power to the control panel switched off, including the disconnection of any battery backup. Remove the terminal of the photocell inputs or completely remove the voltage from the digital controller (check that the digital controller is not powered by backup batteries) and check that the TX / RX photocell red power LED is off.

SI RACCOMANDA L' USO DI fotocellule Serie **F4ES - F4S / RECOMMENDED USE for** Series **F4ES - F4S** photocells

COLLEGAMENTO CON 2 COPPIE FOTOCELLULE SINCRONIZZATE (MODALITÁ NORMALE, 1 MASTER E 1 SLAVE)
CONNECTION WITH 2 SYNCHRONISED PHOTOCELL PAIRS (NORMAL MODE, 1 MASTER AND 1 SLAVE)

ROSSO = libero da jumper
RED = jumper free

11

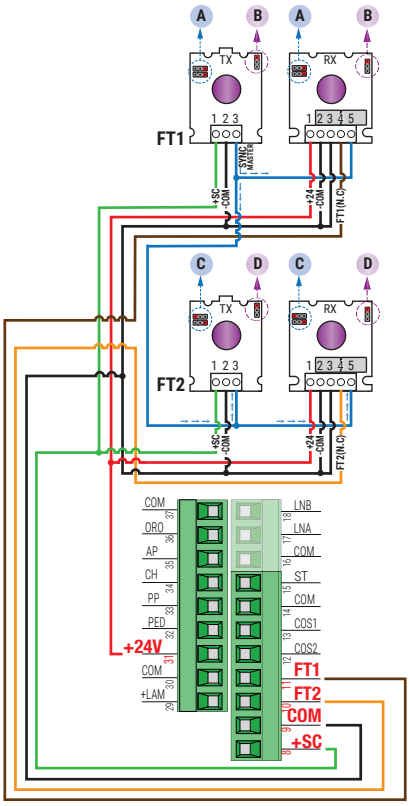




JUMPER DI SINCRONIZZAZIONE (PER MASTER)
SYNCHRONISATION JUMPER (FOR MASTER)



JUMPER DI ALLINEAMENTO (PER MASTER) OFF*
ALIGNMENT JUMPER (FOR MASTER) OFF*





JUMPER DI SINCRONIZZAZIONE (PER SLAVE1)
SYNCHRONISATION JUMPER (FOR SLAVE1)



JUMPER DI ALLINEAMENTO (PER SLAVE1) OFF*
ALIGNMENT JUMPER (FOR SLAVE1) OFF*

*** Per eseguire la modalità in di allineamento ottico (NOTA: consultare le istruzioni delle fotocellule):**
**** To perform optical alignment mode (NOTE: refer to photocell instructions):***

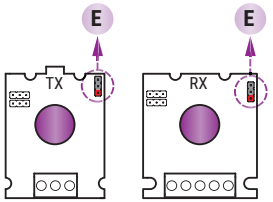



JUMPER DI ALLINEAMENTO ON*
ALIGNMENT JUMPER ON*

ATTENZIONE! Modificare la posizione dei jumper di sincronizzazione o di allineamento solamente quando le fotocellule sono **NON ALIMENTATE**! La configurazione scelta con i jumper viene memorizzata dalle fotocellule solamente all'accensione delle fotocellule.
Scollegare la morsettiera della centrale che fornisce alimentazione alle fotocellule, oppure togliere completamente la tensione al controller digitale (scollegando, se presenti, anche le batterie di backup) e verificare nella fotocellula TX / RX che il LED rosso di alimentazione sia spento; procedere soltanto ora all'impostazione della configurazione dei jumper.
ATTENTION! Please ensure that the photocell jumpers are only changed with the power to the control panel switched off, including the disconnection of any battery backup. Remove the terminal of the photocell inputs or completely remove the voltage from the digital controller (check that the digital controller is not powered by backup batteries) and check that the TX / RX photocell red power LED is off.


SI RACCOMANDA L' USO DI fotocellule Serie **F4ES - F4S / RECOMMENDED USE for** Series **F4ES - F4S** photocells

BATTERY SAVING (AB 03)
BATTERY SAVING + TEST FOTOCELLULE · PHOTOCELLS TEST (AB 04)

COLLEGAMENTO CON 1 COPPIA FOTOCELLULE SINCRONIZZATE (MODALITÁ NORMALE, SOLO COPPIA MASTER)
CONNECTION WITH 1 SYNCHRONISED PHOTOCELL PAIR (NORMAL MODE, MASTER PAIR ONLY)


ROSSO = libero da jumper
RED = jumper free

12

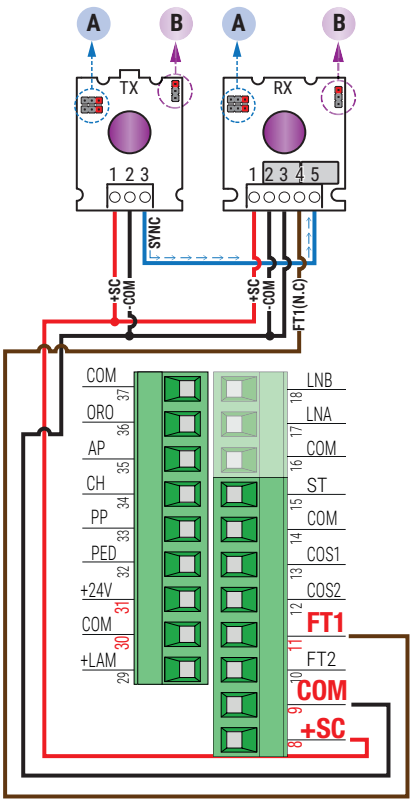





JUMPER DI SINCRONIZZAZIONE (PER MASTER)
SYNCHRONISATION JUMPER (FOR MASTER)



JUMPER DI ALLINEAMENTO (PER MASTER) OFF*
ALIGNMENT JUMPER (FOR MASTER) OFF*

*** Per eseguire la modalità in di allineamento ottico (NOTA: consultare le istruzioni delle fotocellule):**
**** To perform optical alignment mode (NOTE: refer to photocell instructions):***

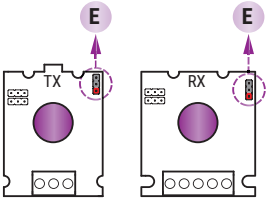



JUMPER DI ALLINEAMENTO ON*
ALIGNMENT JUMPER ON*

ATTENZIONE! Modificare la posizione dei jumper di sincronizzazione o di allineamento solamente quando le fotocellule sono **NON ALIMENTATE**! La configurazione scelta con i jumper viene memorizzata dalle fotocellule solamente all'accensione delle fotocellule.
Scollegare la morsettiera della centrale che fornisce alimentazione alle fotocellule, oppure togliere completamente la tensione al controller digitale (scollegando, se presenti, anche le batterie di backup) e verificare nella fotocellula TX / RX che il LED rosso di alimentazione sia spento; procedere soltanto ora all'impostazione della configurazione dei jumper.
ATTENTION! Please ensure that the photocell jumpers are only changed with the power to the control panel switched off, including the disconnection of any battery backup. Remove the terminal of the photocell inputs or completely remove the voltage from the digital controller (check that the digital controller is not powered by backup batteries) and check that the TX / RX photocell red power LED is off.


SI RACCOMANDA L' USO DI fotocellule Serie **F4ES - F4S / RECOMMENDED USE for** Series **F4ES - F4S** photocells


BATTERY SAVING (A8 03)
BATTERY SAVING + TEST FOTOCELLULE · PHOTOCELLS TEST (A8 04)

COLLEGAMENTO CON 2 COPPIE FOTOCELLULE SINCRONIZZATE (MODALITÁ NORMALE, 1 MASTER E 1 SLAVE)
CONNECTION WITH 2 SYNCHRONISED PHOTOCELL PAIRS (NORMAL MODE, 1 MASTER AND 1 SLAVE)

ROSSO = libero da jumper
RED = jumper free

13

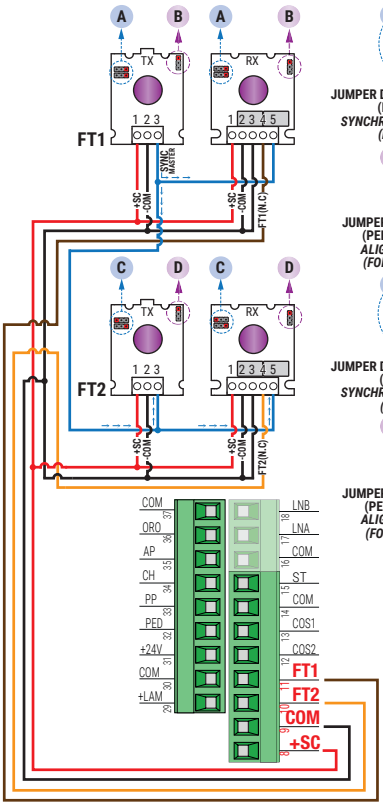

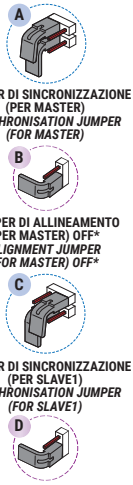


JUMPER DI SINCRONIZZAZIONE (PER MASTER)
SYNCHRONISATION JUMPER (FOR MASTER)


JUMPER DI ALLINEAMENTO (PER MASTER) OFF*
ALIGNMENT JUMPER (FOR MASTER) OFF*

JUMPER DI SINCRONIZZAZIONE (PER SLAVE1)
SYNCHRONISATION JUMPER (FOR SLAVE1)

JUMPER DI ALLINEAMENTO (PER SLAVE1) OFF*
ALIGNMENT JUMPER (FOR SLAVE1) OFF*

*** Per eseguire la modalità in di allineamento ottico (NOTA: consultare le istruzioni delle fotocellule):**
**** To perform optical alignment mode (NOTE: refer to photocell instructions):***

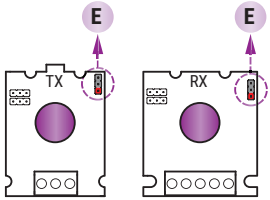



JUMPER DI ALLINEAMENTO ON*
ALIGNMENT JUMPER ON*

ATTENZIONE! Modificare la posizione dei jumper di sincronizzazione o di allineamento solamente quando le fotocellule sono **NON ALIMENTATE**! La configurazione scelta con i jumper viene memorizzata dalle fotocellule solamente all'accensione delle fotocellule.
Scollegare la morsettiera della centrale che fornisce alimentazione alle fotocellule, oppure togliere completamente la tensione al controller digitale (scollegando, se presenti, anche le batterie di backup) e verificare nella fotocellula TX / RX che il LED rosso di alimentazione sia spento; procedere soltanto ora all'impostazione della configurazione dei jumper.
ATTENTION! Please ensure that the photocell jumpers are only changed with the power to the control panel switched off, including the disconnection of any battery backup. Remove the terminal of the photocell inputs or completely remove the voltage from the digital controller (check that the digital controller is not powered by backup batteries) and check that the TX / RX photocell red power LED is off.


SI RACCOMANDA L' USO DI fotocellule Serie **F4ES - F4S / RECOMMENDED USE for** Series **F4ES - F4S** photocells

F

14

SENSORE MAGNETICO DI SBLOCCO
MAGNETIC UNLOCKING SENSOR


TW90/800
TW90/600/HS
TW90/800/R

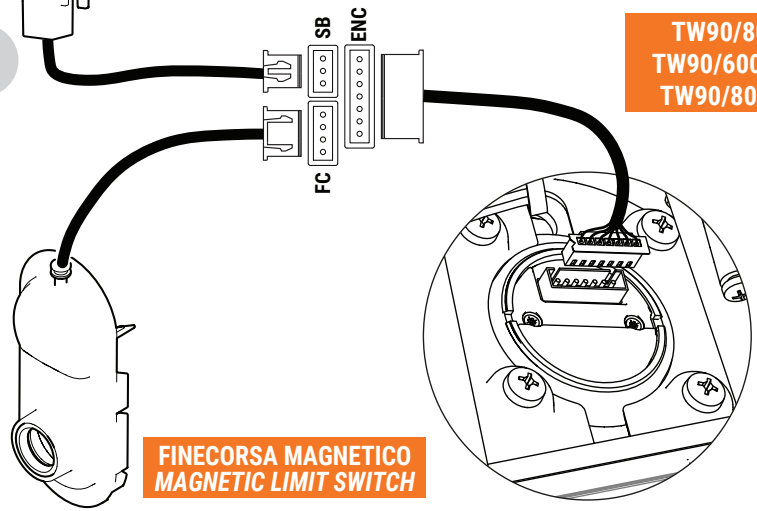

è possibile acquistare il finecorsa separatamente
it is possible to purchase the limit switch separately (**cod. MC784 / MC785**)

SENSORE MAGNETICO DI SBLOCCO
MAGNETIC UNLOCKING SENSOR

TW90/820
TW90/620/HS
TW90/820/R

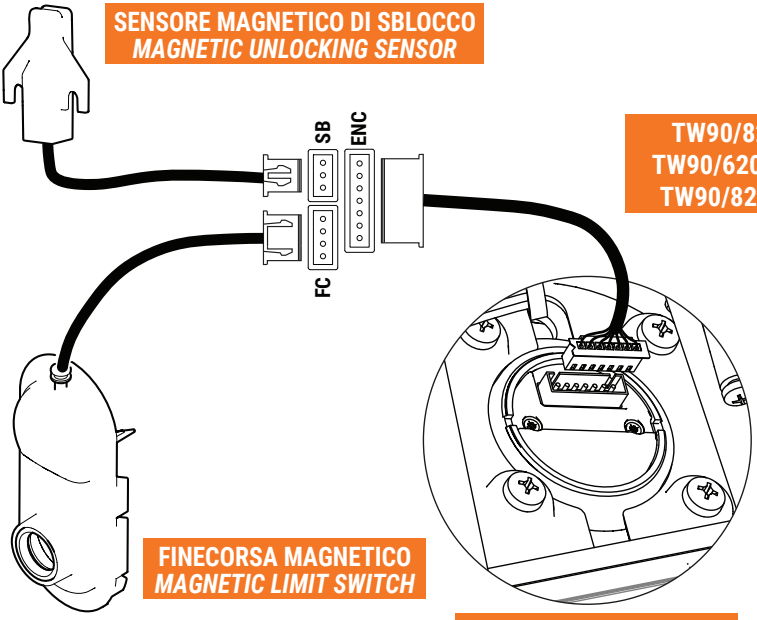

è possibile acquistare il finecorsa separatamente
it is possible to purchase the limit switch separately (**cod. MC788 / MC789**)

In assenza di finecorsa (60 00)
- L'esecuzione di una corsa completa, da una battuta meccanica all'altra, permette il recupero della posizione. L'anta arretra del numero di giri scelto ai par. 25, 26.

Solo per motore **TW90/800/R - TW90/820/R**. Se la centrale rileva uno spostamento manuale di più di 3 cm dalla posizione iniziale, lancia un comando di movimento che riporta l'anta in posizione.

20 Collaudo

⚠ Il collaudo deve essere effettuato da personale tecnico qualificato.
L'installatore è tenuto ad eseguire la misurazione delle forze di impatto e a selezionare sulla centrale di comando i valori della velocità e della coppia che permettano alla porta o cancello motorizzati di rientrare nei limiti stabiliti dalle norme EN 12453 e EN 12445.

Accertarsi che siano rispettate le indicazioni nel manuale "AVVERTENZE GENERALI".
- Dare alimentazione.
- Verificare il corretto funzionamento di tutti i comandi collegati.
- Verificare il corretto funzionamento del perno di sblocco. Sul display deve apparire STOP lampeggiante.
- Verificare la corsa e i rallentamenti.
- Verificare il rispetto delle forze di impatto ai sensi delle normative EN 12453 e EN 12445.
- Verificare il corretto intervento delle sicurezze.
- Nel caso sia installato il kit batterie, togliere alimentazione di rete e verificarne il funzionamento.
- Togliere alimentazione di rete e batterie (se presenti) e ridarla. Verificare, con cancello fermo in posizione intermedia, il corretto completamento della fase di recupero posizione sia in apertura che in chiusura.
- Verificare la regolazione e il corretto intervento dei finecorsa (se installati). Se necessario, modificare l'impostazione del parametro che determina la posizione del motore (a destra, a sinistra).
- Verificare che a fine manovra tra il cancello e la battuta meccanica ci siano almeno 2-3 cm di distanza.
- **Solo per TW90/800/R - TW90/820/R.** Verificare che, in assenza di tensione di rete e di alimentazione a batteria, muovendo a mano l'anta, la centrale si alimenti e sul display appaia il messaggio "SELF".
- **Solo per TW90/800/R - TW90/820/R.** In presenza di batterie, togliere alimentazione di rete e verificare che sul display appaia bAtt. Se appare SELF seguito da ALIN, modificare il collegamento dei fili rosso e nero ai morsetti POWER-IN come indicato in fig 2.

Dichiarazione CE di Conformità

Il sottoscritto Dino Florian, legale rappresentante di Roger Technology - Via Botticelli 8, 31021 Mogliano V.to (TV) DICHIARA che la centrale di comando **B70/1T** è conforme ai requisiti essenziali e alle altre disposizioni pertinenti, stabilite dalle seguenti direttive CE:

– 2014/35/UE Direttiva LVD
– 2014/30/UE Direttiva EMC
– 2014/53/UE Direttica RED
– 2011/65/UE Direttiva RoHS

E che sono state applicate tutte le norme e/o specifiche tecniche di seguito indicate:
EN 61000-6-3
EN IEC 61000-6-2
EN 60335-1

Luogo: Mogliano V.to Data: 03/06/2023 Firma

1 Symbols

The symbols and their meaning in the manual or on the product label are indicated below.

	**Generic danger** Important safety information. Indicates operations and situations in which the personnel involved must pay close attention.
	**Dangerous voltage risk** Indicates operations and situations in which the personnel involved must pay close attention to dangerous voltages.
	**Useful information** Indicates useful information for the installation.
	**Refer to the Installation and use instructions** Indicates the obligation to refer to the manual or original document, which must be available for future use and must not be damaged in any way.
	Protective earth connection point.
	Indicates the admissible temperature range.
	Alternating current (AC)
	Direct current (DC)
	Symbol for the product disposal according to the WEEE directive.

2 Product description

The **B70/1T** controller is a unit for the SENSORED control, with a high resolution encoder, of a ROGER Brushless motor for automated sliding gates integrated in the column.

 **Ensure that the parameter** *A I* **is set correctly.** If this parameter is not set correctly, the automation system may not function properly.

ROGER TECHNOLOGY cannot be held responsible for any damage or injury due to improper use or any use other than the intended usage indicated in this manual.

We recommend using only ROGER TECHNOLOGY accessories and control and safety devices. Specifically, we recommend installing **F4ES** or **F4S** series photocells.

 For further information, refer to the installation manual of the **TW90** automation system.

3 Technical characteristics of product

	TW90/800 TW90/820	TW90/600/HS TW90/620/HS	TW90/800/R TW90/820/R
MAINS POWER VOLTAGE	230 V~ ± 10% 50 Hz (115 V~ ± 10% 60 Hz) (1)		
MAXIMUM MAINS POWER ABSORPTION (FROM NETWORK)	180 W		
INRUSH POWER (FROM NETWORK)	315 W	295 W	345 W
FUSES	**F1** = 15A (ATO257) motor power circuit protection **F2** = 2A (ATO257) accessories power supply protection **F3** = T1A (5x20 mm) (**B70/1T/115**: T2A (5x20 mm)) primary transformer protection		
CONNECTABLE MOTORS	1		
MOTOR POWER SUPPLY	24 V~, variable frequency, with self-protected inverter		
MOTOR TYPE	sinusoidal drive Brushless (ROGER BRUSHLESS)		
MOTOR CONTROL TYPE	field-oriented (FOC), sensored with high-resolution encoder		
RATED MOTOR POWER	120 W	100 W	85 W
STARTING MOTOR POWER	290 W	270 W	320 W
MAXIMUM POWER, FLASHING LIGHT	25 W (24 V⎓)		
FLASHING LIGHT DUTY CYCLE	50%		
MAXIMUM POWER	100 W 230 V~ - 40 W 24 V~/⎓ (potential free contact)		
GATE OPEN LIGHT POWER	3 W (24 V⎓)		
MAXIMUM ACCESSORY CURRENT ABSORPTION	10 W (24 V⎓)		
OPERATING TEMPERATURE	-20°C +55°C		
SOUND PRESSURE DURING USE	<70 dB(A)		
PRODUCT DIMENSIONS	dimensions in mm 165x117 weight: 0,233 kg		

ROGER 115V AC

(1) **TW90/800/115 - TW90/820/115 - TW90/600/HS/115 - TW90/620/HS/115**

The total of the absorption values of all the accessories connected must not exceed the maximum power values shown in the table. The values are guaranteed with original ROGER TECHNOLOGY accessories ONLY. The use of non-original accessories may lead to malfunctioning. ROGER TECHNOLOGY declines all responsibility for incorrect or non-conforming installations.
All the connections are protected by fuses (refer to the table). The courtesy light requires an external fuse.


4 Description of connections

To access the control connection terminal board, remove the motor cover as shown in figure 1:
- remove the four screws and lift the cover

If the **B71/BC** charger is installed, refer to figure 2:
- pull out the drawer containing the charger and batteries.

Figure 3-4-5-6-7 shows connection diagrams for connecting mains voltage to the motor control unit (**B70/1T**).

4.1 Typical installation

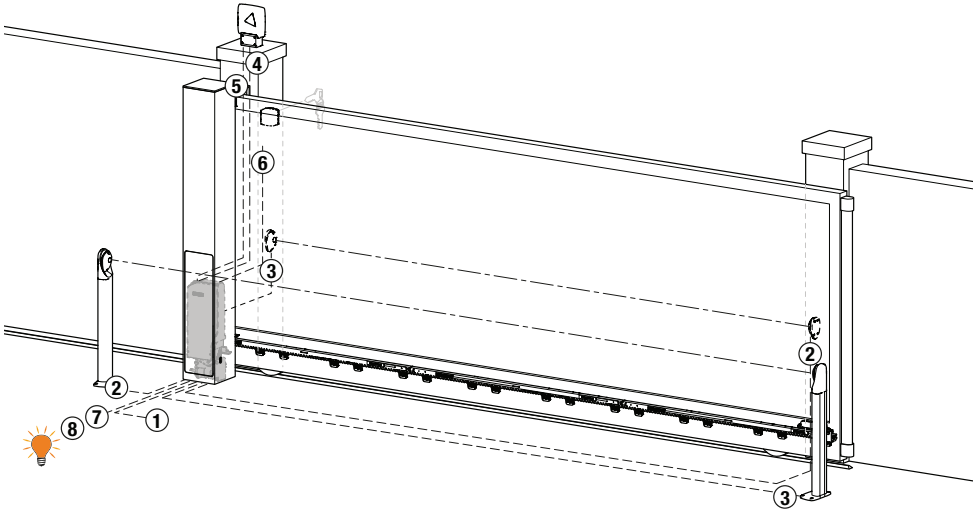


It is the installer's responsibility to verify the adequacy of the cables in relation to the devices used in the installation and their technical characteristics.

		Recommended cable
1	Power supply	H07RN-F 3x1,5 mm² double insulated cable
2	Photocell - Receiver **F4ES/F4S**	Cable 5x0,5 mm² (max 20 m)
3	Photocell - Transmitter **F4ES/F4S**	Cable 3x0,5 mm² (max 20 m)
4	LED Flashing light **R92/LED24 - FIFTHY/24** Power supply 24V⎓	Cable 2x1 mm² (max 10 m)
5	Antenna	Cable 50 Ohm RG58 (max 10 m)
6	Key selector **R85/60**	Cable 3x0,5 mm² (max 20 m)
	Key pad **H85/TTD - H85/TDS** (connecting to **H85/DEC - H85/DEC2**)	Cable 2x0,5 mm² (max 30 m)
	H85/DEC - H85/DEC2 (connecting to control unit)	Cable 4x0,5 mm² (max 20 m) The number of conductors increases when using more than one output contact on **H85/DEC - H85/DEC2**
7	Gate open indicator Power supply 24V⎓ 3W max	Cable 2x0,5 mm² (max 20 m)
8	Courtesy light (Potential free contact) Power supply 230 V~ (100 W max)	Cable 2x1 mm² (max 20 m)

SUGGESTIONS: with existing installations, we recommend checking the cross section of the cables and that the cables themselves are in good condition.

4.2 Electrical connections



A switch or an omnipolar cut-off switch with a contact opening of at least 3 mm must be installed on the mains power line; put the cut-off switch in OFF position and disconnect any buffer batteries before performing any cleaning or maintenance operations.
Ensure that an adequate residual current circuit breaker with a 0.03 A threshold and a suitable overcurrent cut-out are installed upstream the electrical installation in accordance with best practices and in compliance with applicable legislation.
For power supply, use a H07RN-F 3G1.5 type electric cable and connect it to the terminals L (brown), N (blue), ⏚ (yellow/green), located inside the automation system.
Strip the insulation from the ends of the power cable wires which will be connected to the terminal (fig. 3-7), and secure the cable with the cable retainer.
Measure the voltage on the primary mains power connection with a tester.

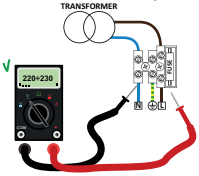

For the Brushless automation system to function correctly, the mains power voltage must be:
- 230V~ ±10% for the B70/1T control unit.
- 115V~ ±10% for the B70/1T/115 control unit.







If the detected value does not comply with the above specified values or is not stable, the automation system may NOT operate efficiently.

Connections to the electrical distribution network and to any other low-voltage conductors in the external section to the electrical panel must be on an independent path and separate from the connections to the command and safety devices (SELV = Safety Extra Low Voltage).
Make sure that the mains power conductors and the accessory wires (24 V) are separated.
The cables must be double insulated, strip them near the relevant connection terminals and lock them with clamps (not supplied).


	DESCRIPTION
	Mains power supply 230 V~ ±10%, fuse 5x20 T1A connection (115 V~ ±10% fuse T2A).
POWER IN 	Power feed input from transformer (or from **B71/BC** battery charger - if used, fig. 2). ***N.B.: Ready wired in factory by ROGER TECHNOLOGY.*** ***WARNING! With the board powered the battery connected, pay maximum attention to the polarity (see fig. 2).***
	Connection to ROGER Brushless motor. Connecting **B72/BRCL** controller for TW90/600/HS - TW90/620/HS High Speed (fig. 4). **N.B.: Ready wired in factory by ROGER TECHNOLOGY.** ***WARNING! If the motor wires become disconnected from the terminal board, after reconnecting correctly, the gate travel must be acquired again as described in chapter 10.***

5 Commands and Accessories


If not installed, safety devices with NC contacts must be jumpered at the COM terminals, or disabled by modifying the parameters 50, 51, 53, 54, 60, 73 and 74.
KEY:
N.A. (Normally Open) .
N.C. (Normally Closed).

CONTACT	DESCRIPTION
6 **7(COR)** 	Output (potential free contact) for connecting courtesy light. 230 V~ 100 W - 24 V~/⎓ 40 W (fig. 7). **NOTE: Provide a protective fuse.**
6 **7(COR)**	Error alert contact only, for: • Unlocked gate / battery supply error (low battery); • Gate completely open / gate completely closed (fig. 7). The COR output operating mode is managed by parameter 20. The voltage level of the battery can be set via parameter 85.
8(+SC) **9(COM)** 	Connection for gate open indicator lamp. 24 V⎓ 3 W. The function of the indicator lamp is determined by parameter 88.
8(+SC) **9(COM)**	Photocell test connection and/or battery saving (fig. 10-11-12-13) The power feed for the photocell transmitters (TX) may be connected to **8(SC)**. Set the parameter 88 02 to enable the test function. Each time a command is received, the control unit switches the photocells off and on to check that the contact changes state correctly. Power feeds for all external devices may be connected to reduce battery consumption (if batteries are used). Set 88 03 or 88 04. **WARNING!** If contact **8(SC)** is used for the photocell test function or battery saving function, a gate open indicator lamp cannot be connected.
10(FT2) **30(COM)** 	Input (NC) for connecting photocells **FT2** (fig. 8-9-10-11-12-13). The photocells **FT2** are configured by default with the following settings: – 53 00. Photocell FT2 disabled when gate is opening. – 54 00. Photocell FT2 disabled when gate is closing. – 55 01. The gate opens when an open command is received if photocell FT2 is obstructed. If the photocells are not installed, jumper the terminals **30(COM) - 10(FT2)** or set the parameters 53 00 and 54 00. **WARNING!** Use **F4ES** or **F4S** series photocells.
11(FT1) **30(COM)** 	Input (NC) for connecting photocells **FT1** (fig. 11-12-13-14-15-16). The photocells **FT1** are configured by default with the following settings: – 50 00. Photocell triggers only during gate closure. Photocell is ignored during gate opening. – 51 02. Movement is reversed if the photocell is triggered during gate closure. – 52 01. The gate opens when an open command is received if photocell FT1 is obstructed. If the photocells are not installed, jumper the terminals **30(COM) - 11(FT1)** or set the parameters 50 00 and 51 00. **WARNING!** Use **F4ES** or **F4S** series photocells.
12(COS2) **14(COM)** 	Input (NC or 8 kOhm) for connecting sensing edge **COS2** (fig. 9). The sensing edge is configured by default with the following settings: – 7400. The sensing edge COS2 (NC contact) is disabled. If the sensing edge is not installed, jumper the terminals **12(COS2) - 14(COM)** or set the parameter 74 00.
13(COS1) **14(COM)**	Input (NC or 8 kOhm) for connecting sensing edge **COS1** (fig. 9). The sensing edge is configured by default with the following settings: – 7300 . The sensing edge COS1 (NC contact) is disabled. If the sensing edge is not installed, jumper the terminals **13(COS1) - 14(COM)** or set the parameter 73 00.
15(ST) **14(COM)** 	STOP command input (NC). The current manoeuvre is arrested if the safety contact opens. **N.B.:** the controller is supplied with this contact already jumpered by ROGER TECHNOLOGY.
20 **19(ANT)** 	Antenna connector for slot-in radio receiver board. Use RG58 if an external antenna is used; maximum recommended length: 10 m. **N.B.**: do not make joints in cable.
22(ORO) **21(COM)** 	Clock timer contact input (N.O.). When the clock function is active, the gate opens and remains open. At the end of the programmed time set with the external device (clock), the gate closes. The function of this command is determined by parameter 80.

EN

CONTACT	DESCRIPTION
23(AP) 21(COM) 	Open control signal input (N.O.). **WARNING:** persistent activation of the opening command prevents automatic reclosure; the automatic reclosure time count is resumed when the opening command is released.
24(CH) 21(COM) 	Close command input (N.O.).
25(PP) 21(COM) 	Step by step mode command input (N.O.). The function of the control is determined by parameter *A4*.
26(PED) 21(COM) 	Partial open control signal input (N.O.). Set by default to 50% of completely open position.
27(+24V) 28(COM)	Power feed for external devices. See technical characteristics. Connecting **B72/BRCL** power unit for High Speed versions (fig. 5)
29(LAM) 28(COM) 	Connection for flashing light (24 V⎓ - duty cycle 50%). The settings for the pre-manoeuvre flashing warning signal may be selected with parameter *A5*, while the flashing mode is set with parameter *78*.
ENC	Connector for connecting to encoder installed on motor. **WARNING!** Always disconnect from electrical power before disconnecting or connecting the encoder cable. **In case of encoder replacement, repeat the acquisition procedure.** **N.B.**: Ready wired in factory by ROGER TECHNOLOGY.
FC	Connector (N.C. contacts) for connecting magnetic limit switch (see figure 14 - detail **F**). The gate stops when the limit switch is activated. **WARNING**: repeat the travel acquisition procedure after each adjustment to the limit switches. **N.B.**: Ready wired in factory by ROGER TECHNOLOGY.
SB	Connector (N.C.) for connecting release contact. Turning the motor release pin stops the gate stops and no command signals are accepted. **WARNING!** Once the release pin has been reset, if the gate is in an intermediate position, without activating a limit switch (if one is installed), the control unit starts a position recovery procedure (see chapter 20) **N.B.**: Ready wired in factory by ROGER TECHNOLOGY.
RECEIVER CARD	Connector for plug-in radio receiver board. The control unit has two radio remote control functions by default: • PR1 - step mode command (modifiable with parameter *76*). • PR2 - partial opening command (modifiable with parameter *77*). The programming buttons **PR1** and **PR2** are also accessible with the cover closed (see fig. 17).
BATTERY CHARGER B71/BC	In the event of a mains power loss, the controller unit is powered by the batteries. When battery power is used, *bAtt* is shown on the display and the flashing light flashes briefly at intervals until mains power is restored or until the battery voltage drops below the minimum permissible limit. In this case, *bttO* (Battery Low) is shown on the display and the controller unit accepts no commands. **WARNING!** the batteries must always be connected to the electronic controller unit in order to charge. Periodically (at least every 6 months), check that the battery is in good working order.
2x12 V⎓ 1,2 Ah. **or** **2x12 V⎓ 4,5 Ah** Only **AGM** type	Two battery kits are available: • Two 12 V⎓, 1.2 Ah batteries installed in the automation system itself. • Two 12 V⎓, 4.5 Ah batteries installed in an external case. For more information, refer to the installation manual for the **B71/BC** battery charger.
BATTERY CHARGER B71/BC	To install the charger and 12V 1.2 Ah batteries: • Remove the cover. • Pull out the tray located above the control unit. • Insert the B71/BC charger board into the prepared slot. • Disconnect the cables coming from the transformer from the POWER IN terminal of the control unit and connect them to the charger terminal. • Connect the red-black cables of the wiring, supplied with the battery, to the POWER IN terminal of the control unit. • Place the 12V 1.2 Ah batteries in the prepared compartment, paying attention to the polarities. • Close the cover. To reduce battery consumption, the positive power supply of the photocell transmitters can be connected to the **SC** terminal (see fig. 13-14-15-16). Set *AB 03* or *AB 04*. In this way, when the gate is fully open or fully closed, the control unit removes power from the devices.
WIFI	Connector for B74/BCONNECT WiFi IP device. This IP device allows, using any internet browser, the complete management of the control panel both in proximity (point-to-point connection) and via cloud (remote connection).

6 Function buttons and display

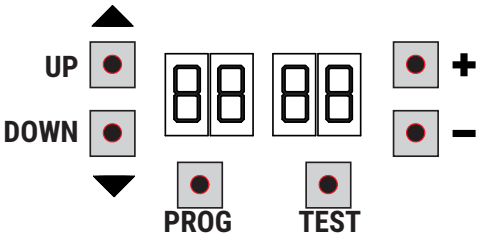


BUTTON	DESCRIPTION
UP ▲	Next parameter
DOWN ▼	Previous parameter
+	Increase value of parameter by 1
-	Decrease value of parameter by 1
PROG	Travel acquisition
TEST	Activate TEST mode

- Press the UP ▲ and/or DOWN ▼ buttons to view the parameter you intend to modify.
- Use the + and - buttons to modify the value of the parameter. The value starts to flash.
- Press and hold the **+** or **-** button to scroll quickly through values, to modify the parameter more quickly.
- To save the new value, wait a few seconds or move onto another parameter with the UP ▲ or DOWN ▼ button. The display flashes rapidly to indicate that the new value has been saved.
- Parameters can only be modified while the motor is not running. Parameters can be viewed at any time.

7 Switching on or commissioning


Power the control unit.
The firmware version of the control unit is displayed briefly.
Version installed r1.00.

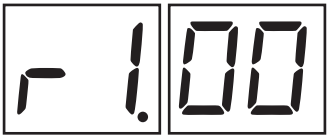

Immediately afterwards, the displays enters the commands and safety device status mode. See chapter 9.


8 Display function modes

8.1 Parameter display mode

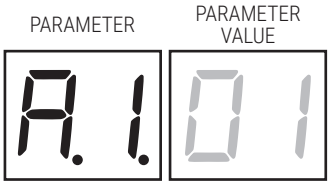

See chapter 12 for detailed descriptions of the parameters.

8.2 Command and safety device status display mode

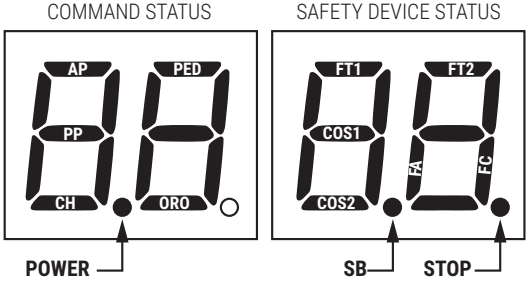

COMMAND STATUS:
The command status indicators on the display are normally OFF.
They ILLUMINATE when a command is received (e.g.: when a step mode command is received, the segment PP illuminates).


SEGMENT	COMMAND
AP	open
PP	step-by-step mode
CH	close
PEd	partial opening
OrO	clock

SAFETY DEVICE STATUS:
The safety device status indicators ON the display .
If an indicator is OFF, the relative device is in alarm state or is not connected.
The an indicator is FLASHING, the relative device has been disabled with a specific parameter.


SEGMENT	SAFETY
Ft 1	FT1 photocells
Ft2	FT2 photocells
COS 1	COS1 sensing edge
COS2	COS2 sensing edge
FA	gate open limit switch
FC	gate closed limit switch
Sb	release pin rotated

8.3 TEST mode

The TEST mode is used to test activation of the commands and safety devices with visual confirmation.
To activate the mode, press the TEST button with the automatic door system at rest. If the gate is moving, pressing TEST stops the gate. Pressing the button again enables TEST mode.
If the flashing light and the gate open indicator lamp illuminate for one second each time a control is used or a safety device is activated.

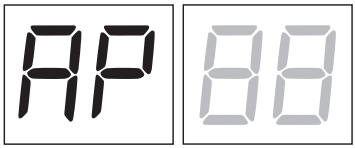

The command signal status is shown on the left hand side of the display for 5 seconds, ONLY when the respective command signal is active (AP, CH, PP, PE, OR). For example, if the gate open command is activated, the letters AP appear on the display.

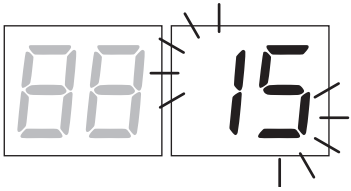


The status of the safety devices/inputs is shown on the right hand side of the display. The number of the terminal relative to the safety device in alarm state flashes.
When the gate is completely open or completely closed, FA or FC is shown on the display to indicate that the gate has reached the gate open limit switch FA or gate closed limit switch FC.
Example: STOP contact in alarm state

00	No safety device in alarm state and no limit switch activated.
5b (Sb)	Release pin rotated.
15	STOP contact (N.C.) open. If there is no STOP switch, jumper the contact.
13	Sensing edge contact COS1 (N.C.) is open. Check connection. If sensing edge is not installed, disable with 73 00.
12	Sensing edge contact COS2 (N.C.) is open. Check connection. If sensing edge is not installed, disable with 74 00.
11	Photocell contact FT1 (N.C.) is open. Check connection. If photocell is not installed, disable with 50 00.
10	Photocell contact FT2 (N.C.) is open. Check connection. If photocell is not installed, disable with 53 00.
FE	Both limit switches in error state. Check connections and settings of limit switches.
FA	If gate is open, gate open limit switch is detected.
FC	If gate is closed, gate closed limit switch is detected.

NOTA: If one or more contacts are open, the gate will not open or close. This does not apply for the limit switch signal state, however, which is shown on the display but does not prevent normal operation of the gate.
If more than one safety device is in alarm state, once the problem relative to the first device is resolved, the alarm for the next device is displayed. Any further alarm states are also displayed with the same logic.
Press the TEST button again to exit test mode.
After 10 seconds with no user input, the display returns to command and safety device state display mode.

8.4 Standby mode

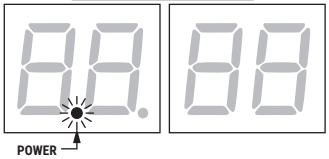

This mode is activated after 30 minutes with no user input. The POWER LED flashes slowly.
Press UP ▲, DOWN ▼, **+** , **-** to reactivate the control unit.

NOTE: If a safety password (only if active) is unlocked, to adjust the parameter settings, the password is automatically reactivated in Stand By mode.

9 Travel acquisition

For the system to function correctly, the gate travel must be acquired by the control.


9.1 Before starting:

1. Select the automation system model installed with the parameter A 1.


KEY: **HIGH SPEED Motor** **REVERSIBLE Motor**

SELECTION	MODEL	MOTOR TYPE	CONFIGURATION
A 1 01	**TW90/800** **TW90/820**	/	**800kg IRREVERSIBLE**
A 1 02	**TW90/600/HS** **TW90/620/HS**		**600kg HIGH SPEED** (see chapter 13 "Special Parameters for High Speed Motor")
A 1 03	**TW90/800/R** **TW90/820/R**		**800kg REVERSIBLE** (see chapter 14 "Special Parameters for Reversible Motor")

2. Select the position of the motor relative to the gate with the parameter 7 1. The default setting for this parameter is with the motor installed on the right hand side of the gate (seen from interior side).




3. If limit switches enabled (60 0 1): adjust limit switches so that, after activation, the gate stops slightly in advance of the mechanical stop




4. Check that the operator present function is not enabled (A7 00).




5. Move the gate into the closed position.



6. Press **TEST** (see TEST mode in chapter 9) and check the command signal and safety device states. If any safety devices are not installed, jumper the relative contact or disable the device from the relative parameter (50, 5 1, 53, 54, 60, 73 and 74).

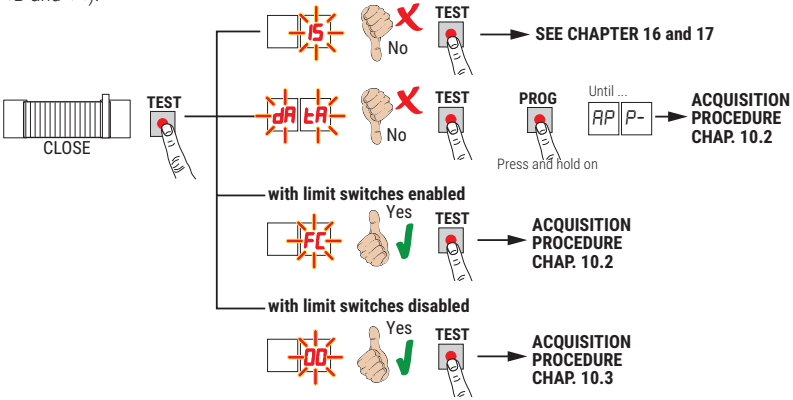

9.2 Acquisition procedure:

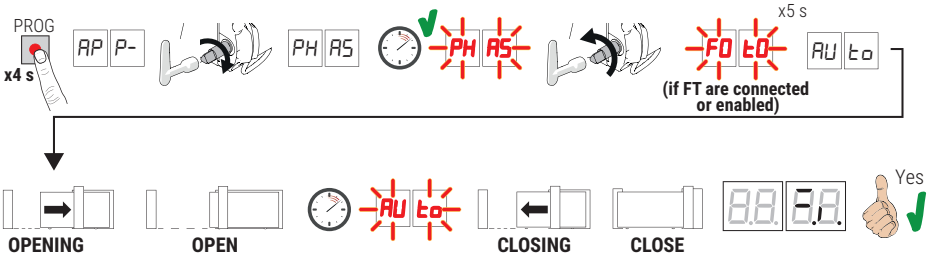

- Press and hold PROG for 4 seconds. AP P- is shown on the display.
- Turn the release pin, the message PH AS appears on the display after a few seconds. The controller unit launches a calibration procedure. The operating parameters of the motor are determined during calibration.
- If the motor calibration procedure is successful, the message PH AS flashes on the display.
- Return release pin. The acquisition procedure now starts.
- FOtO is shown on the display (only if parameters 50, 51, 53, 54 are not disabled). Keep away from the photocell beam within 5 s, to prevent interrupting the procedure.
- AUto is shown on the display and the gate starts opening at low speed.
- The gate stops briefly when it reaches the gate open limit switch. AUto flashes on the display.
- The gate closes until it reaches the gate closed limit switch.


If the acquisition procedure is completed successfully, the display enters the command and safety device state display mode.

If the following error messages are shown on the display, repeat the acquisition procedure:
- no PH: calibration procedure failed.
- AP PE: acquisition error. Press the **TEST** button to clear the error, and check the safety device in alarm state.
- AP PL: travel length error. Press the **TEST** button to clear the error, and check that gate is completely closed.

ATTENTION: if the acquisition procedure was successful **BUT** the space between the leaf (stopped at the limit switch) and the mechanical stop is not as desired (at least 3cm), move the limit switch and **REPEAT THE ACQUISITION PROCEDURE**. Ensure that AT **LEAST** 3 centimetres remain between the leaf stop and the mechanical stop.

For more information, see chapter 16 "Alarms and faults".

9.3 Acquisition procedure without limit switches

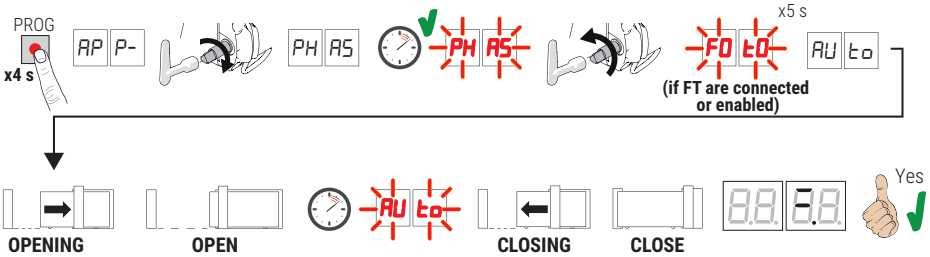

- Press and hold PROG for 4 seconds. AP P- is shown on the display.
- Raise the release lever, the message PH AS appears on the display after a few seconds. The controller unit launches a calibration procedure. The operating parameters of the motor are determined during calibration.
- If the motor calibration procedure is successful, the message PH AS flashes on the display.
- Return release pin. The acquisition procedure now starts.
- FOtO is shown on the display (only if parameters 50, 51, 53, 54 are not disabled). Keep away from the photocell beam within 5 s, to prevent interrupting the procedure.
- When the mechanical opening stop is reached, the gate stops briefly. AUto flashes on the display.
- The gate closes again until the mechanical closing stop is reached.

If the acquisition procedure is completed successfully, the display enters the command and safety device state display mode. The gate retracts by the number of rotor revolutions selected in parameter 26.

If the following error messages are shown on the display, repeat the acquisition procedure:
- no PH: calibration procedure failed.
- AP PE: acquisition error. Press the TEST button to clear the error, and check the safety device in alarm state.
- AP P.L / AP P.M: travel length error. Press the TEST button to clear the error, and check that gate is completely closed.

ATTENTION: if the learning procedure was successful **BUT** the space left between the gate leaf and the mechanical stop is not as desired, increase the value of parameter 26. Check that when fully open, the sash maintains the same distance from the mechanical stop, adjust parameter 25 if necessary. Ensure that **AT LEAST** 3 centimetres remain between the leaf stop and the mechanical stop.


For more information, see chapter 16 “Alarms and faults”.

10 Index of parameters

PARAM.	FACTORY DEFAULT	DESCRIPTION	PAGE
A1	see chap. 12	Selecting automation system model	67
A2	00	Automatic closure after pause time (from gate completely open)	67
A3	00	Automatic gate closing after mains power outage	67
A4	00	Selecting step mode control function (PP)	67
A5	00	Pre-flashing	67
A6	00	Condominium function for partial open command (PED)	67
A7	00	Enabling operator present function	68
A8	00	Gate open indicator / photocell test function and "battery saving"	68
11	04	Setting deceleration during opening (and closing for **TW90/800 - TW90/820**)	68
12	04	Setting deceleration during closing (**High Speed - Reversible** only)	68
13	05	Setting gate open limit switch constant speed approach distance	68
14	05	Setting gate closed limit switch constant speed approach distance	68
15	50	Partial opening adjustment (%)	68
16	10	Adjusting automatic closing time after partial opening	68
20	00	COR output operating mode	68
21	30	Setting automatic closing time	68
22	00	Enabling of management for opening with automatic re-closure exclusion	69
23	03	Tolerance on opening stop	69
24	03	Tolerance on closing stop	69
25	03	Advance on stop on full opening	69
26	03	Advance on stop on full closing	69
27	03	Setting reverse time after activation of sensing edge or obstacle detection (crush prevention)	69
30	05	Setting motor torque	69
31	15	Setting obstacle impact force sensitivity	69
33	04	Setting start acceleration during opening (and closing for **TW90/800 - TW90/820**)	70
34	04	Setting start acceleration during closing (**High Speed - Reversible** only)	70
36	00	Enabling maximum torque boost at start of manoeuvre	70
37	00	Setting motor torque during position recovery	70
40	05	Setting opening speed (and closing for **TW90/800 - TW90/820**)	70
41	05	Setting closing speed (**High Speed -Reversible** only)	70
42	03	Setting end of manoeuvre constant approach speed	70
49	01	Setting number of automatic closure attempts after activation of sensing edge or obstacle detection (crush protection)	70
50	00	Setting photocell mode during gate opening (FT1)	71
51	02	Setting photocell mode during gate closing (FT1)	71
52	01	Photocell (FT1) mode with gate closed	71
53	00	Setting photocell mode during gate opening (FT2)	71

PARAM.	FACTORY DEFAULT	DESCRIPTION	PAGE
54	00	Setting photocell mode during gate closing (FT2)	71
55	01	Photocell (FT2) mode with gate closed	71
56	00	Enable close command 6 s after activation of photocell (FT1-FT2)	71
60	00	Limit switch enabling	72
65	05	Setting motor stop distance	72
71	01	Selecting installattion position of motor relative to gate (seen from interior side)	72
73	00	Configuring sensing edge COS1	72
74	00	Configuring sensing edge COS2	72
76	00	Configuring radio channel 1 (PR1)	72
77	01	Configuring radio channel 2 (PR2)	72
78	00	Configuring flashing light frequency	73
79	60	Selecting courtesy light mode	73
80	00	Clock contact configuration	73
81	00	Enable safeguarded gate closure/opening	73
82	03	Setting safeguarded closure/opening activation time	73
85	00	Selection of the battery operation management	73
86	00	Selection of the battery operation limitations	73
87	00	Selection of the battery type and consumption reduction	74
90	00	Restoring factory default values	74
n0	01	HW version	74
n1	23	Year of manufacture	74
n2	45	Week of manufacture	74
n3	67	Serial number	74
n4	89		74
n5	01		74
n6	23	FW version	74
o1	01	View manoeuvre counter	74
o0	23		74
o1	45		74
h0	01	View manoeuvre hour counter	74
h1	23		74
d0	01	View control unit days on counter	74
d1	23		74
P1	00	Password	75
P2	00		75
P3	00		75
P4	00		75
CP	00	Changing password	75

11 Parameters menu

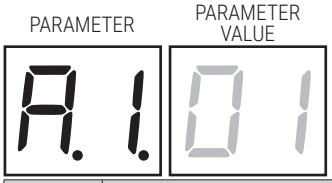

A101	**Selecting automation system model** **WARNING!** If this parameter is not set correctly, the automation system may not function properly. **N.B.:** in the event of a reset to restore the default parameters, this parameter must be set again manually.	
01	**TW90/800 - TW90/820** - IRREVERSIBLE motor for gate leaves up to 800 Kg.	
02	**TW90/600/HS - TW90/620/HS** - IRREVERSIBLE motor for gate leaves up to 600 Kg.	
03	**TW90/800/R - TW90/820/R** - REVERSIBLE motor for gate leaves up to 800 kg	

A200	**Automatic closure after pause time (from gate completely open)**
00	Disabled.
01- 15	From 1 to 15 of gate closure attempts after photocell is triggered. Once the number of attempts set is reached, the gate remains open.
99	The gate tries to close indefinitely.

A300	**Automatic gate closing after mains power outage**
00	Disabled. The gate does not close automatically when mains power is restored.
01	Enabled. If the gate is NOT completely open, when mains power is restored, the gate closes after a 5 second warning signalled with the flashing light (independently of the value set with the parameter A5). The gate closes in "position recovery" mode (see chapter 20).

A400	**Selecting step mode control function (PP)**
00	Open-stop-close-stop-open-stop-close...
01	Condominium function: the gate opens and closes after the set automatic closing time. The automatic closing timer restarts if a new step mode command is received. Step mode commands are ignored while the gate is opening. This allows the gate to open completely and prevents the gate from closing when not required. If automatic closing is disabled (A200), the condominium function automatically attempts a closing manoeuvre A201.
02	Condominium function: the gate opens and closes after the set automatic closing time. The automatic closing timer does NOT restart if a new step mode command is received. Step mode commands are ignored while the gate is opening. This allows the gate to open completely and prevents the gate from closing when not required. If automatic closing is disabled (A200), the condominium function automatically attempts a closing manoeuvre A201.
03	Open-close-open-close.
04	Open-close-stop-open.

A500	**Pre-flashing**
00	Disabled. The flashing light is activated during opening and closing manoeuvres.
01- 10	Flashing warning signal for 1 to 10 seconds prior to every manoeuvre.
99	5 second flashing warning signal prior to closing manoeuvre.

A600	**Condominium function for partial open command (PED)**
00	Disabled. The gate opens partially in step mode: open-stop-close-stop-open...
01	Enabled. Partial commands are ignored during gate opening.

EN

A7 00	**Enabling operator present function**
00	Disabled.
01	Enabled. The open (AP) or close (CH) button must be pressed continuously to operate the gate. The gate stops when the button is released.

A8 00	**Gate open indicator / photocell test function and "battery saving"**
00	The indicator is off when the gate is closed, and steadily lit during manoeuvres and when the gate is open.
01	The indicator flashes slowly during opening manoeuvres, and is lit steadily when the gate is completely open. It flashes quickly during closing manoeuvres. If the gate is stopped in an intermediate position, the lamp extinguishes twice every 15 seconds.
02	Set 02 if the output SC is used for the photocell test. See fig. 10-11.
03	Set to 03 if the output SC is used for the "battery saving" function. See fig. 12-13. When the gate is completely open or closed, the controller unit deactivates any accessories connected to terminal SC to reduce battery consumption.
04	Set to 04 if the output SC is used for the "battery saving" function and photocell test function. See fig. 12-13.

11 04	**Setting deceleration during opening and closing**
12 04	See chapters 13 and 14
01-05	01= the gate decelerates near the mechanical stop/limit switch ... 05= the gate decelerates long before the mechanical stop/limit switch.

13 05	**Setting gate open limit switch constant speed approach distance** **N.B.:** the manoeuvre speed is set with parameter 42. After decelerating, the gate completes the distance to the limit switch at constant speed.
14 05	**Setting gate closed limit switch constant speed approach distance** **N.B.:** the manoeuvre speed is set with parameter 42. After decelerating, the gate completes the distance to the limit switch at constant speed.
05-40	05= Approximate 15 cm distance; ... 10= Approximate 30 cm distance; ... 40= Approximate 120 cm distance.

15 50	**Partial opening adjustment (%)** **N.B.**: This parameter is set to 50% (half of total gate travel) by default.
10-99	From 10% to 99% of total gate travel.

16 10	**Adjusting automatic closing time after partial opening** The countdown starts when the pedestrian opening is reached, as defined in paragraph 15.
00-90	Pause time settable from 00 to 90 s.
92-99	Pause time settable from 2 to 9 min.

20 00	**Type of signaling provided by COR output**
00	STANDARD operation managed by parameter 79
01	Contact closed if the control unit is working properly. Contact open if central locked in alarm.
02	Contact closed if the control unit is powered by the mains or charged battery. Open contact due to a fault: control unit powered by low battery (voltage level set by par. 85) or with error alert bt10 (the control unit no longer accept commands).
03	Closed contact if none of the fault related situations 1 and 2 occurs. Open contact if at least one of the fault related situations 1 and 2 occurs.
04	Closed contact if the gate is not completely open. Open contact if the gate is completely open.
05	Closed contact if the gate is not completely closed. Open contact if the gate is completely closed.

21 30	**Setting automatic closing time** The timer starts from the gate open state and continues for the set time. Once the set time is reached, the gate closes automatically. The timer count restarts if a photocell is triggered.
00-90	Pause time settable from 00 to 90 s.
92-99	Pause time settable from 2 to 9 min.

22 00	**Enabling of management for opening with automatic re-closure exclusion** If enabled, the exclusion of automatic re-closure only applies for the command selected via the parameter. **For example**: if you set 22 01, automatic re-closure is excluded following an AP command, but it is activated following a PP or PED command. **NOTE**: The command has open-stop-close or close-stop-open sequence activation function.
00	Disabled.
01	An AP (opening) command activates the opening manoeuvre. When the gate is fully open, automatic reclosure is excluded. A subsequent AP (open) command activates the closing operation.
02	A PP (step-by-step) command activates the opening manoeuvre. When the gate is fully open, automatic reclosure is excluded. A subsequent PP (step-by-step) command activates the closing operation.
03	A PED (partial opening) command activates the partial opening operation. Automatic reclosure is excluded. A subsequent PED (partial opening) command activates the closing operation.

23 03	**Tolerance on opening stop** **NOTE:** parameter are visible if limit switches are disabled on parameter 60 (60 00); adjust the value of par.23 to be less than or equal to that of par.25
01-05	01= minimum tolerance (rotor revolutions) ... 05= maximum tolerance (rotor revolutions)

24 03	**Tolerance on closing stop** **NOTE:** parameter are visible if limit switches are disabled on parameter 60 (60 00) ; adjust the value of par.24 to be less than or equal to that of par.26
01-05	01= minimum tolerance (rotor revolutions) ... 05= maximum tolerance (rotor revolutions)

25 03	**Advance on stop on full opening** **NOTE:** parameter are visible if limit switches are disabled on parameter 60 (60 00) To set an advance on stop of approx. 3cm set the following values for parameter 25: 04 for TW90/800 - TW90/820 03 for TW90/600/HS - TW90/620/HS 02 for TW90/800/R - TW90/820/R
01-15	01= minimum advance (rotor revolution) ... 15= maximum advance (rotor revolutions)

26 03	**Advance on stop on full closing** **NOTE:** parameter are visible if limit switches are disabled on parameter 60 (60 00) To set an advance on stop of approx. 3cm set the following values for parameter 26: 04 for TW90/800 - TW90/820 03 for TW90/600/HS - TW90/620/HS 02 for TW90/800/R - TW90/820/R
01-15	01= minimum advance (rotor revolution) ... 15= maximum advance (rotor revolutions)

27 03	**Setting reverse time after activation of sensing edge or obstacle detection (crush prevention)** This sets the reverse manoeuvre time after activation of the sensing edge or the obstacle detection system. The gate comes to a stop after reversal dues to activation of the sensing edge or obstacle detection system at the end of manoeuvre deceleration speed. As a result, the effective reversal manoeuvre time is slightly longer than the set time.
00-60	From 0 to 60 s.

30 05	**Setting motor torque** Increasing or decreasing the value of the parameter increases or decreases motor torque and, as a result, adjusts obstacle detection sensitivity. Use values below 03 ONLY for particularly lightweight installations not exposed to severe weather conditions (strong winds or very cold temperatures).
01-09	01= -35%; 02= -25%; 03= -16%; 04= -8% (reduced motor torque = increased sensitivity). 05= default motor torque setting. 06= +8%; 07= +16%; 08= +25%; 09= +35% (increased motor torque = reduced sensitivity).

31 15	**Setting obstacle impact force sensitivity** If the reaction time to obstacle impact force is too long, reduce the value of the parameter. If the impact force exerted on obstacles is too high, reduce the value of parameter 30.
01-10	Low motor torque: 01 = minimum obstacle impact force ... 10 = maximum obstacle impact force N.B.: only use these settings if the medium motor torque values are not suitable for the installation.
11-16	Medium motor torque. **Recommended setting for adjusting force settings correctly.** 11 = minimum obstacle impact force ... 16 = maximum obstacle impact force.
17	70% of maximum motor torque, 1 s of reaction time. Sensing edge is compulsory.
18	80% of maximum motor torque, 2 s of reaction time. Sensing edge is compulsory.

19	Maximum motor torque, 3 s of reaction time. Sensing edge is compulsory.
20	Maximum motor torque, 5 s of reaction time. Sensing edge is compulsory.

33 04	**Setting start acceleration during opening and closing**
34 04	See chapters 13 and 14
01-05	01= the gate accelerates rapidly at start of manoeuvre ... 05= the gate accelerates slowly and progressively at start of manoeuvre.

36 00	**Enabling maximum torque boost at start of manoeuvre** If this parameter is enabled, each time the motor starts a manoeuvre, maximum torque is produced for a maximum of 5 seconds, or for the time necessary for the gate to open by approximately 65 cm. N.B: in the case of HIGH SPEED motors, a motor boost mode is implemented for 2 seconds after each gate start, regardless of the setting of parameter 36.
00	Disabled.
01	Enabled at start of opening manoeuvre only (including position recovery). The motor starting current function is only enabled for closing manoeuvres if the gate position is known and the gate is over to 2 metres from the completely closed position.
02	Enabled for all starts (including position recovery).

37 00	**Setting motor torque during position recovery** Adjust motor torque with parameter 37 if, during position recovery, the values set with parameters 30 and 31 are insufficient to allow the gate to complete the manoeuvre. If position recovery is not completed, normal gate operation will not be resumed.
00	The response of the obstacle detection system depends solely on the values set for parameters 30 and 31.
01	The response of the obstacle detection system depends on the values set for parameters 30 and 31 and on the maximum current value stored during travel acquisition.
02	The response of the obstacle detection system is a 70% reduction in maximum torque for a period of 1 s.
03	The response of the obstacle detection system is a 80% reduction in maximum torque for a period of 2 s.
04	The response of the obstacle detection system is a 100% reduction in maximum torque for a period of 3 s.
05	The response of the obstacle detection system is a 100% reduction in maximum torque for a period of 5 s.

40 05	**Setting opening and closing speed**
41 05	See chapters 13 and 14
01-05	01= 60% minimum speed, 02= 70%, 03= 80%, 04=90%, 05= 100% maximum speed.

42 03	**Setting end of manoeuvre constant approach speed** Once deceleration is complete, the gate continues to the limit switch at constant speed. The distance is set with the parameters 13 and 14.
01-05	01= 250 RPM; 02= 300 RPM; 03= 350 RPM; 04= 400 RPM; 05= 450 RPM; 06= 500 RPM; 07= 550 RPM; 08= 600 RPM **NOTE:** The minimum and maximum approaching speeds vary according to the installed motor model. The settings are divided in constant size steps. Indicative values: TW90/800 - TW90/820 from approximately 2 m/min to 5 m/min TW90/600/HS - TW90/620/HS from approximately 3 m/min to 8 m/min TW90/800/R - TW90/820/R from approximately 5 m/min to 12 m/min

49 01	**Setting number of automatic closure attempts after activation of sensing edge or obstacle detection (crush protection)**
00	No automatic closure attempts.
01-03	From 1 to 3 automatic closure attempts. We recommend setting a value equal to or lower than the value set for parameter A2. Automatic closure is only performed if the gate is completely open.

5000	**Setting photocell mode during gate opening (FT1)**
00	DISABLED. Photocell is not active or not installed.
01	STOP. The gate stops and remains stationary until the next command is received.
02	IMMEDIATE REVERSE. The gate reverses immediately if the photocell is activated during gate opening.
03	TEMPORARY STOP. The gate stops as long as the photocell is obstructed. The gate resumed opening when the photocell is cleared.
04	DELAYED REVERSE. The gate stops if the photocell is obstructed. The gate closes when the photocell is cleared.

5102	**Setting photocell mode during gate closing (FT1)**
00	DISABLED. Photocell is not active or not installed.
01	STOP. The gate stops and remains stationary until the next command is received.
02	IMMEDIATE REVERSE. The gate reverses immediately if the photocell is activated during gate closure.
03	TEMPORARY STOP. The gate stops as long as the photocell is obstructed. The gate resumed closing when the photocell is cleared.
04	DELAYED REVERSE. The gate stops if the photocell is obstructed. The gate opens when the photocell is cleared.

5201	**Photocell (FT1) mode with gate closed** This parameter is not visible if A802, A803 or A804 is set.
00	If the photocell is obstructed, the gate cannot open.
01	The gate opens when an open command is received, even if the photocell is obstructed.
02	The photocell sends the gate open command when obstructed.

5300	**Setting photocell mode during gate opening (FT2)**
00	DISABLED. Photocell is not active or not installed.
01	STOP. The gate stops and remains stationary until the next command is received.
02	IMMEDIATE REVERSE. The gate reverses immediately if the photocell is activated during gate opening.
03	TEMPORARY STOP. The gate stops as long as the photocell is obstructed. The gate resumed opening when the photocell is cleared.
04	DELAYED REVERSE. The gate stops if the photocell is obstructed. The gate closes when the photocell is cleared.

5400	**Setting photocell mode during gate closing (FT2)**
00	DISABLED. Photocell is not active or not installed.
01	STOP. The gate stops and remains stationary until the next command is received.
02	IMMEDIATE REVERSE. The gate reverses immediately if the photocell is activated during gate closure.
03	TEMPORARY STOP. The gate stops as long as the photocell is obstructed. The gate resumed closing when the photocell is cleared.
04	DELAYED REVERSE. The gate stops if the photocell is obstructed. The gate opens when the photocell is cleared.

5501	**Photocell (FT2) mode with gate closed** This parameter is not visible if A802, A803 or A804 is set.
00	If the photocell is obstructed, the gate cannot open.
01	The gate opens when an open command is received, even if the photocell is obstructed.
02	The photocell sends the gate open command when obstructed.

5600	**Enable close command 6 s after activation of photocell (FT1-FT2)** **This parameter is not visible if A803 or A804 is set.** NOTE: in the case of photocells being blanked during opening, the 6 secs. count starts when the wings are completely open.
00	Disabled.
01	Enabled. When the photocell barrier FT1 is crossed, a close command is sent 6 seconds later.
02	Enabled. When the photocell barrier FT2 is crossed, a close command is sent 6 seconds later.

60 00	**Limit switch enabling**
00	Limit switches disabled; programming the stroke and repositioning causes the sash to press on the mechanical stops, par. 25 and 26 adjust the stopping distance from these.
01	Limit switches enabled; stroke programming and repositioning are managed by the activation of the magnetic opening and closing limit switches.

65 05	**Setting motor stop distance**
01-05	01= faster deceleration/shorter stop distance ... 05= slower deceleration/longer stop distance.

71 01	**Selecting installation position of motor relative to gate (seen from interior side)** **N.B.:** in the event of a reset to restore the default parameters, this parameter must be set again manually.
00	Motor installed on left.
01	Motor installed on right.

73 00	**Configuring sensing edge COS1**
00	Sensing edge NOT INSTALLED.
01	NC contact (normally closed). The gate reverses only when opening.
02	Contact with 8k2 resistor. The gate reverses only when opening.
03	NC contact (normally closed). The gate always reverses.
04	Contact with 8k2 resistor. The gate always reverses.
12	Management of two 8k2 sensitive edges connected in parallel (total resistance 4k1). The gate reverses only when opening.
14	Management of two 8k2 sensitive edges connected in parallel (total resistance 4k1). The gate always reverses.

74 00	**Configuring sensing edge COS2**
00	Sensing edge NOT INSTALLED.
01	NC contact (normally closed). The gate reverses only when closing.
02	Contact with 8k2 resistor. The gate reverses only when closing.
03	NC contact (normally closed). The gate always reverses.
04	Contact with 8k2 resistor. The gate always reverses.
12	Management of two 8k2 sensitive edges connected in parallel (total resistance 4k1). The gate reverses only when closing.
14	Management of two 8k2 sensitive edges connected in parallel (total resistance 4k1). The gate always reverses.

76 00	**Configuring radio channel 1 (PR1) N.B.**: With ROGER TECHNOLOGY plug-in radio receiver board.
77 01	**Configuring radio channel 2 (PR2) N.B.**: With ROGER TECHNOLOGY plug-in radio receiver board.
00	STEP MODE.
01	PARTIAL OPENING
02	OPENING
03	CLOSING.
04	STOP.
05	Courtesy light. The output COR is managed from the remote control. The light remains lit as long as the remote control is active. The parameter 79 is ignored.
06	Courtesy light in step mode (PP). The output COR is managed from the remote control. The remote control turns the courtesy light on and off. The parameter 79 is ignored.
07	STEP MODE with confirmation for safety. (1)
08	PARTIAL OPENING with confirmation for safety. (1)
09	OPENING with confirmation for safety. (1)
10	CLOSURE with confirmation for safety. (1)

(1) To prevent gate manoeuvres caused by accidentally pressing a remote control button, confirmation is required to enable the command. Example: parameters 76 07 and 77 01 set:

- Pressing the CHA button on the remote control selects the step mode function, which must be confirmed within 2 seconds by pressing CHB on the remote control. Press CHB to activate partial opening.

78 00	**Configuring flashing light frequency**
00	The frequency is set electronically from the flashing light unit.
01	Slow flash.
02	Light flashes slowly when gate opens, rapidly when gate closes.

79 60	**Selecting courtesy light mode**
00	Disabled.
01	PULSE. The courtesy light illuminates briefly at the start of each manoeuvre.
02	ACTIVE. The light remains lit for the entire duration of the manoeuvre.
03-90	From 3 to 90 s. The light remains lit for the time period set after the manoeuvre is completed.
92-99	From 2 to 9 minutes. The light remains lit for the time period set after the manoeuvre is completed.

80 00	**Clock contact configuration** When the clock function is active, the gate opens and remains open. At the end of the programmed time set with the external device (clock), the gate closes.
00	When the clock function is active, the gate opens and remains open. Any command signal received is ignored.
01	When the clock function is active, the gate opens and remains open. Any command signal received is accepted. When the gate returns to the completely open position, the clock function is reactivated.

81 00	**Enable safeguarded gate closure/opening** Enabling this parameter ensures that the gate is not left open due to an incorrect and/or accidental command. This function is NOT enabled if: • the gate receives a STOP command; • the sensitive edge intervenes, detecting an obstacle in the same direction in which the function is enabled. If instead the sensitive edge detects an obstacle during the movement opposite to the one guaranteed, the function remains active. • the number of closure attempts set by parameter A2 has been reached; • the acquired position is lost (perform position recovery, see chapter 20).
00	Disabled. The parameter 82 is not displayed.
01	Enabled. After a period of time set with parameter 82, the control unit signals a 5 second warning with the flashing light, regardless of the parameter A5, and then closes the gate.
02	Enabled. If the gate is closed as a result of a step mode command, after a period of time set with parameter 82, the control unit signals a 5 second warning with the flashing light (regardless of the parameter A5), and then the gate closes. If the gate is stopped by the obstacle detection system during a closure manoeuvre, the gate closes after a period of time set with parameter 82. If the gate is stopped by the obstacle detection system during an opening manoeuvre, the gate closes after a period of time set with parameter 82.


82 03	**Setting safeguarded closure/opening activation time** **N.B.:** this parameter is not visible if the value of parameter 81 = 00.
02-90	Wait time settable from 2 to 90 s.
92-99	Wait time settable from 2 to 9 min.

85 00	**Selection of the battery operation management** Setting a value different than 00 a battery voltage level check is activated. The desired operation type can be selected via parameter 86 and an error alert can be activated through the COR output via parameter 20.
00	The control unit always accepts commands until the battery is completely exhausted.
01	The command becomes active when the battery voltage drops to the minimum threshold (22V⎓ with B71/BC charger; 24.6V⎓ with B71/PBX external charger)
02	The command becomes active when the battery voltage drops to the medium threshold (23V⎓ with B71/BC charger; 25V⎓ with B71/PBX external charger)
03	The command becomes active when the battery voltage drops to the maximum threshold (24V⎓ with B71/BC charger; 25.4V⎓ with B71/PBX external charger)

8600	**Selecting the battery operation limitations** **N.B.**: the parameter is visible only if par. 85 is different than 00
00	There is no limitation for the commands when the battery voltage drops under the selected threshold. An error alert may be activated via the COR output (if parameters 85 and 20 are adequately set).
01	When the battery voltage drops under the threshold selected with par. 85, the control unit accepts only opening commands and does not perform closing.

02	When the battery voltage drops under the threshold selected with par. 85, after a 5 s pre-flashing, the control unit automatically opens the barrier's boom and accepts only a closing command.
03	It accepts only closing commands even if the ORO input is active and if the parameter is 8001.
04	When the battery voltage drops to the threshold selected with par. 85 the control unit, after a prelamping of 5s, automatically closes the gate and accepts only one opening command

8700	**Selection of the battery type and consumption reduction** **NOTE**: An INCORRECT setting of this parameter, when there is no mains voltage, blocks the functions and the display shows the message bELO (if set to 01 or 02 and the battery is 2x12V⎓) or an error alert bMod.
00	Battery 24V⎓ (2x12V⎓) with B71/BCHP. Acceleration/deceleration/speed reduction enabled, to increase the battery life.
01	Battery 24V⎓ (2x12V⎓) with external battery charger B71/PBX. Acceleration/deceleration/speed reduction enabled, to increase the battery life.
02	Battery 24V⎓ (2x12V⎓) with external battery charger B71/PBX. No performance reduction, maximum battery consumption.
03	Battery 24V⎓ (2x12V⎓) with external charger B71/PBX. No reduction in performance. Maximum battery consumption

9000	**Restoring factory default values** **NOTE** This procedure is only possible is NO data protection password is set.
	 **Warning!** Restoring default settings cancels all settings made previously except for parameter A1, 71, 86, 87: after restore, check that all parameters are suitable for the installation. • Press and hold the PLUS **+** and MINUS **-** button until the unit switches on. • The display flashes after 4 s rES- . • The default factory settings have now been restored. **Note:** it is possible to reset the parameters in a second way: when the control unit is switched on, before the firmware version appears on the display, press and hold down the ▲ (UP ARROW) and ▼ (DOWN ARROW) buttons for 4s.

	Identification number The identification number consists of the values of the parameters from n0 to n6. **N.B.**: The values shown in the table are indicative only.	
n001	**HW version.**	Example: 01 23 45 67 89 01 23
n123	**Year of manufacture.**	
n245	**Week of manufacture.**	
n367	**Serial number.**	
n489		
n501		
n623	**FW version.**	

	View manoeuvre counter The number consists of the values of the parameters from o1 to o3 multiplied by 100. **N.B.**: The values shown in the table are indicative only.
o1 01	**Manoeuvres performed.** Example: 01 23 45 x100 = 1.234.500 manoeuvres.
o023	
o345	

	View manoeuvre hour counter The number consists of the values of the parameters from h0 to h1. **N.B.**: The values shown in the table are indicative only.
h001	**Manoeuvre hours.** Example: 01 23 = 123 hours.
h123	

	View control unit days on counter The number consists of the values of the parameters from d0 to d1. **N.B.**: The values shown in the table are indicative only.
d001	**Days with unit switched on.** Example: 01 23 = 123 days.
d123	

	Password Setting a password prevents unauthorised persons from accessing the settings. With password protection active (CP=01), parameters may be viewed, but the values CANNOT be modified. Only a single password is used to control access to the gate automation system. **WARNING:** Contact the Technical Support Service if you lose your password.
P100 P200 P300 P400	**Password activation procedure:** • Enter the desired values for parameters P1, P2, P3 and P4. • Use the UP ▲ and/or DOWN ▼ buttons to view the parameter CP. • Press and hold the **+** and **-** buttons for 4 seconds. • The display flashes to confirm that the password has been saved. • Switch the control unit off and on again. Check that password protection is activated (CP=01). **Temporary unlock procedure:** • Enter the password. • Check that CP=00. **Password cancellation procedure:** • Enter the password (CP=00). • Save the values P1, P2, P3, P4 = 00. • Use the UP ▲ and/or DOWN ▼ buttons to view the parameter CP. • Press and hold the **+** and **-** buttons for 4 seconds. • The display flashes to confirm that the password has been cancelled (the values P100, P200, P300 and P400 indicate that no password is set). • Switch the control unit off and on again.

CP00	**Changing password**
00	Protection deactivated.
01	Protection activated.

12 Special parameters for High Speed series

The High Speed **(/HS)** series is a family of digital Brushless high speed sliding motor units for sliding gates weighing up to 600 kg (**TW90/600/HS - TW90/620/HS**) and dedicated exclusively to residential applications. High Speed technology makes it possible for the automation system to operate 100% faster than a conventional system, and allows independent management of speed, acceleration, deceleration and the safety devices used in the system.

Note: As the mechanics of the gate is unknown, to guarantee the maximum safety of the installation, we recommended to use sensitive edges.

The additional parameters for enabling High Speed technology are indicated as follows.

A102	**Selecting automation system model** This parameter is factory configured by ROGER TECHNOLOGY. **ATTENTION!** The value of parameter A1 is set at the factory to select the motor model (02, see table below). If this value is incorrectly changed, the automation will not be able to work at full efficiency and malfunctions may occur. **NOTE:** in the case of resetting to the standard factory parameters, the value of the parameter is not changed.
01	~~TW90/800~~ ~~TW90/820~~
02	TW90/600/HS - TW90/620/HS
03	~~TW90/800/R~~ ~~TW90/820/R~~

1104	**Setting deceleration during opening**
1204	**Setting deceleration during closing**
01-05	01= the gate decelerates near the mechanical stop/limit switch ... 05= the gate decelerates long before the mechanical stop/limit switch.

3304	**Setting start acceleration during opening**
3404	**Setting start acceleration during closing**
01-05	01= the gate accelerates rapidly at start of manoeuvre ... 05= the gate accelerates slowly and progressively at start of manoeuvre.

4008	**Setting opening speed** **N.B.:** the speed setting range for the specific motor installed is automatically subdivided into 5 equal segments.
4108	**Setting closure speed** **N.B.:** the speed setting range for the specific motor installed is automatically subdivided into 5 equal segments.
01-05	01= 6 m/min (minimum speed) ... 05= 26 m/min (maximum speed).

N.B.: to set the constant speed deceleration space, see parameters 13 and 14 on chapter 12.

13 Special parameters for Reversible series

The Reversible **(/R)** series is a family of digital brushless motor units for sliding gates weighing up to 800 kg (**TW90/800/R - TW90/820/R**) and dedicated exclusively to residential and industrial applications.
REVERSIBLE technology makes it possible to open and close the gate without releasing the motor even in the event of power failure. When the gate is moved manually, in the absence of supply voltage, the rotation of the motor provides power to the control unit the display lights up and the message 'SELF' appears. **WARNING!** handle the gate by hand with moderation.
The control unit allows independent management of speed, acceleration, deceleration and the safety devices used in the system.
During normal operation (including operation under battery power), the control unit applies a sufficient braking force to impede manual movement of the gate.
As a result, prolonged operation may drain the battery when operating under battery power.
If the braking force applied is not sufficient to impede manual movement of the gate and a gate movement of more than 3 cm is detected, the control unit initiates a position recovery procedure (see chapter 20).
NOTE: Even though it is a REVERSIBLE unit, the motor is equipped with a lock release system.

EN

The additional parameters for enabling REVERSIBLE technology are indicated as follows.

A103	**Selecting automation system model** This parameter is factory configured by ROGER TECHNOLOGY. **ATTENTION!** The value of parameter A1 is set at the factory to select the motor model (03, see table below). If this value is incorrectly changed, the automation will not be able to work at full efficiency and malfunctions may occur. **NOTE:** in the case of resetting to the standard factory parameters, the value of the parameter is not changed.
01	~~TW90/800 –TW90/820 –~~
02	~~TW90/600/HS– TW90/620/HS –~~
03	TW90/800/R - TW90/820/R

1104	**Setting deceleration during opening**
1204	**Setting deceleration during closing**
01-05	01= the gate decelerates near the mechanical stop/limit switch ... 05= the gate decelerates long before the mechanical stop/limit switch.

3304	**Setting start acceleration during opening**
3404	**Setting start acceleration during closing**
01-05	01= the gate accelerates rapidly at start of manoeuvre ... 05= the gate accelerates slowly and progressively at start of manoeuvre.

4008	**Setting opening speed** **N.B.:** the speed setting range for the specific motor installed is automatically subdivided into 5 equal segments.
4108	**Setting closure speed** **N.B.:** the speed setting range for the specific motor installed is automatically subdivided into 5 equal segments.
01-05	01= 6 m/min (minimum speed) ... 05= 26 m/min (maximum speed).

N.B.: to set the constant speed deceleration space, see parameters 13 and 14 on chapter 12.

14 Safety input and command status (TEST mode)

With no currently active commands, press the TEST button and check the following:

DISPLAY	POSSIBLE CAUSE	ACTION BY SOFTWARE	PHYSICAL CORRECTIVE ACTION
88 Sb (00 Sb)	The release handle is open.	-	Close the release handle and turn the key to the close position. Check that the release contact is connected correctly.
88 15	The safety STOP contact is open.	-	Install a STOP button (NC) or jumper the ST contact with the COM contact.
88 13	Sensing edge COS1 not connected or incorrectly connected.	Set the parameter 73 00 if not used or to disable	Jumper contact COS1 with contact COM, if not used or to disable
88 12	Sensing edge COS2 not connected or incorrectly connected.	Set the parameter 74 00 if not used or to disable	Jumper contact COS2 with contact COM, if not used or to disable
88 11	Photocell FT1 not connected or incorrectly connected.	Set the parameter 50 00 e 51 00 if not used or to disable	Jumper contact FT1 with contact COM, if not used or to disable. Check connection referring to relative connection diagram.
88 10	Photocell FT2 not connected or incorrectly connected.	Set the parameter 53 00 e 54 00 if not used or to disable	Jumper contact FT2 with contact COM, if not used or to disable. Check connection referring to relative connection diagram.
88 FE	Both limit switches in open contact state or not connected.	-	Check connection of limit switches. In the absence of limit switches, check that par.60 is set to 00.
88 FA	Gate is at gate closed limit switch.	If the limit switch state indicated is incorrect, check the setting of parameter 71.	-
	Gate open limit switch absent or not connected.	-	Check connection of limit switches. In the absence of limit switches, check that par.60 is set to 00.
88 FC	Gate is at gate closed limit switch.	If the limit switch state indicated is incorrect, check the setting of parameter 71.	-
	Gate closed limit switch absent or not connected.	-	Check connection of limit switches. In the absence of limit switches, check that par.60 is set to 00.
PP 00	If occurs with no voluntary command, the contact (N.O.) may be faulty or one of the buttons may be incorrectly connected.	-	Check PP - COM contacts and connections to buttons.
CH 00		-	Check CH - COM contacts and connections to buttons.
AP 00		-	Check AP - COM contacts and connections to buttons.
PE 00		-	Check PED - COM contacts and connections to buttons.
Or 00	If occurs with no voluntary command, the contact (N.O.) may be faulty or the timer may be incorrectly connected.	-	Check ORO - COM contacts. Contact must not be jumpered if not used.

N.B: press TEST to exit TEST mode.
We recommend troubleshooting safety device and input status errors with "corrective action by software" only.

15 Alarms and faults


PROBLEM	ALARM	POSSIBLE CAUSE	ACTION
The gate does not open or close.	POWER LED off	No power.	Check power cable.
	POWER LED off	Fuses blown.	Replace fuses. Always disconnect from mains power before removing fuses.
	OF St	Input mains power voltage fault. Control initialisation failed.	Disconnect from mains power, wait 10 seconds then reconnect to the mains and switch on. If the problem persists, contact your local authorized dealer for verification and possible assistance. Pressing the TEST button it is possible to hide the alarm temporarily and consult the control unit's parameters.
	Pr Ot	Overcurrent detected in inverter.	Press the TEST button twice or perform 3 command requests in succession.
	dAtA	Travel data acquisition error.	Check that open and closed limit switches are positioned correctly (if limit switches are enabled). Press TEST and check if any safety devices are in alarm state. Repeat acquisition procedure.
		Calibration procedure failed.	Allow the indicated calibration times to elapse during self-acquisition. Before resetting the release pin, ensure that PHAS flashes in the display. Repeat acquisition procedure.
	Not	Motor not connected.	Check the motor cable.
	FE	Both limit switches activated.	Check connections of limit switches or check for foreign objects in limit switch blocks. Check if limit switches are absent that par.60 is set to 00.
	Example: 15 EE 21EE	Configuration parameter error.	Set configuration value correctly and save.
	EnE 1	Encoder not connected.	Check connection to encoder. Replacing the encoder is recommended if the problem persists.
	EnE3	Severe encoder malfunction.	Press TEST button. If the error code is displayed again, switch off the controller unit, wait 5 seconds and switch on again. Replace the encoder if the problem persists.
	EnE5 (EnE5)	Encoder malfunction.	Press TEST button. Replace the encoder if the problem persists.
		Insufficient power supply	If the unit contains dirt, moisture, insects or other foreign matter, disconnect from mains power and clean the board and the encoder. Replace the encoder if the problem persists.
		Batteries functioning	The batteries are almost flat.
	EnE8	Encoder calculation error.	Repeat acquisition procedure.
	tEMP	Inverter thermal overload circuit breaker tripped.	Function is restored automatically within 2 min.
	SEnS	Motor power control anomaly detected.	If the problem persists, replace the control unit.
	btLO (btLO)	Flat batteries.	Wait for mains power to be restored.
	StoP flashing	Release device open.	Reset the release pin and check the connection to the release contact.
	no PH	Motor control anomaly detected	Repeat the acquisition procedure. If the problem persists, replace the control unit.

EN

PROBLEM	ALARM	POSSIBLE CAUSE	ACTION
The gate does not open or close.	no PH	Problems at the encoder circuit or at the connection cable.	Check the integrity of the connection cable. Disconnect and reconnect the power supply. Give a command (opening / step-by-step, ...). If noPH is NOT displayed, repeat the acquisition procedure. If noPH is displayed again, contact the technical service department.
Acquisition procedure does not complete correctly.	no PH	Motor calibration failed.	Repeat acquisition procedure. If the problem persists, check the cable connecting the encoder to the motor.
			Check that the release pin has rotated.
			Check that the motor turns without impediment. Contact technical support in case of any problems.
			Check that the mains voltage is correct and that the mains cable cross-section is adequate.
	AP PE	TEST button pressed accidentally.	Repeat acquisition procedure.
		Safety devices in alarm state.	Press the TEST button and check the safety device/s in alarm state and the connections of the safety devices.
		Excessive voltage drop.	Repeat acquisition procedure. Check mains voltage.
		Incorrect setting of parameters 30 and 31.	Adjust parameters 30 and 31 correctly for the weight and speed of the gate leaf.
	AP PL	Travel length error.	Move gate into completely closed position (the signalling of the limit switch FC if limit switches enabled par.60, must be active) and repeat the procedure.
			Check cable of limit switches (if installed and enabled on par.60). Replace the cable if the problem persists.
			Reset default controller unit parameters and repeat the procedure.
			Stroke length less than the minimum allowed: increase the length.
	APPM	Maximum permitted travel length exceeded	Reduce the ride. Contact technical assistance (travel exceeding the maximum allowed by the technical characteristics).
Remote control has limited range and does not work while automated gate is moving.	-	The radio transmission is impeded by metal structures and reinforced concrete walls.	Install the antenna outside.
	-	Flat batteries.	Replace the transmitter batteries.
The flashing light is not working.	-	Bulb / LED blown or flashing light wires disconnected.	Check LED circuit and/or connector wires.
Gate open indicator lamp does not work.	-	Bulb blown or wires disconnected.	Check the bulb and/or wires.
Gate does not perform desired manoeuvre.	-	Incorrect setting of parameter 71.	Select the correct installation position with parameter 71.
The control unit is switched off and does not start.	-	F2 fuse blown due to overvoltage.	Replace the 2A F2 fuse.
	SELF	**Only for TW90/800/R - TW90/820/R.** The gate is moved by hand without being unlocked, without mains and/or battery voltage	**WARNING:** if B71/BC is used, check the correct connection of the battery charger to the control unit (the red cable [+] must be connected to the POWER IN terminal 5, the black cable [-] must be connected to the POWER IN terminal 4). Otherwise, the manual manoeuvre will not be performed correctly.
The control unit does not accept commands.	SELF ALIM	Incorrect connection of the battery charger to the control unit. After 5 s the display shows ALIM to confirm the incorrect connection of the POWER-IN terminal strip.	Reverse the connection of the (+) and (-) wires on the POWER IN terminal strip of the control unit (see battery connection at fig. 2) By pressing the TEST button, the error can be temporarily hidden to consult the control unit parameters.

N.B.: Press the TEST button to temporarily cancel the alarm.
The next time a command is received, the alarm reappears on the display if the problem has not been resolved.

16 Procedural verifications - INFO Mode

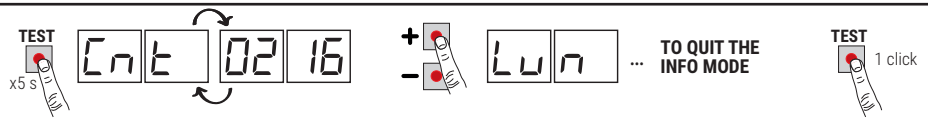

INFO mode may be used to view certain parameters measured by the **B70/1T** controller.
Press and hold the TEST button for 5 seconds from the "View command signals and safety devices" mode with the motor stationary.
The control unit displays the following parameters and the corresponding measured values in sequence:

Parameter	Function
r 1.00	View for 3 s the firmware version of the control unit.
CnE	Displays the position of MOTOR, expressed in revolutions and relative to total length, at the time of the test. (example: 0. 113 = motor installed on the left 7 1 00; 0 113 = motor installed on the right 7 1 01).
Lun	View total length of programmed travel of MOTOR, in motor revolutions.
rPM	View motor speed of MOTOR, in revolutions per minute (rPM).
AMP	View current absorption of motor, in Amperes (e.g.: 001.1 = 1,1 A .... 016.5 = 16,5 A). If the MOTOR is stationary, the current absorption value is 0. Activate a command function to test current absorption.
bUS	System OK indicator. To check for overloading (e.g.: too many utilities connected to 24 V output) or if the mains voltage is too low, compare the parameters read with values indicated as follows with the motor stationary: mains voltage = 230 V~ (nominal), bUS= 28.5 mains voltage = 207 V~ (-10%), bUS= 25.5 mains voltage = 253 V~ (+10%), bUS= 31.6
CAP	Display current, expressed in Amperes, used to compensate for strain detected by MOTOR due, for example, to low external temperatures (e.g.: 0 = 0 A ... 4 = +6 A). At the beginning of a manoeuvre from the completely open or completely closed position, if the control unit detects a strain higher than the value stored in its memory during the travel acquisition cycle, the controller automatically increases the current delivered to MOTOR.
ASC	Display current threshold, expressed in Amperes, at which the obstacle detection function (crush prevention) of MOTOR is triggered. This value is calculated automatically by the controller in relation to the settings of parameters 30 and 31. For the motor to function correctly, AMP must always be lower than the value ASC.
tim	Indicates time taken by MOTOR to detect an obstacle, as set with parameter 31, in seconds. E.g. 1.000 = 1 s / 0. 120 = 0.12 s (120 ms). Ensure that the manoeuvre time is more than 0.3 s.
UP	If the control unit is capable of identifying the position of the gate when the test is conducted, the following is shown on the display: UP__ position known, normal operation. UP 1_ position unknown, position recovery in progress.
OC	Indicates the state of the automation system (open/closed). OC OP automation system opening (motor active). OC CL automation system closing (motor active). OC -O automation system completely open (motor not actives). OC -C automation system completely closed (motor not actives).
UF	UF U_ mains voltage too low or overload. UF _H motors overcurrent.
nPtE	Displays the number of thermal protection interventions of the inverter. If it displays a number different from 0000, check that there are no excessive stress points and if the leaf, coming onto mechanical stops, does not activate the limit switch. Check the settings of parameters 30 and 31.
H ibu	Displays information about the electronic voltage limiter (ROGER TECHNOLOGY's TECHNICAL ASSISTANCE ONLY).

- Use the + / - buttons to scroll through the parameters. When the last parameter in the sequence is reached, press the **-** button to return through the previous parameters.
- In INFO mode, the automation system may be activated to test operation in real time.
- Press and hold the TEST button for a few seconds to exit INFO mode.

16.1 B74/BCONNECT mode

By inserting **B74/BCONNECT** in the **WIFI** connector, all the functions are managed through internet browser and devices such as smartphones, tablets, PCs, exploiting WiFi communication, tablet, PC, all the functionalities of the central unit are managed, using the WiFi communication.

For further information consult the installation manual of the connection module **B74/BCONNECT** connection module.

Remote assistance" mode
Allows access and therefore the management of all the data of the control unit only in cloud mode and therefore with remote management.
When remote assistance is enabled, the message **ASCC** (assistance connect controlled) appears on the display.
By pressing the **TEST** button this message disappears for 10 seconds, and it is possible to access the parameters and other functions of the display.
After 30 minutes the display goes into stand-by, if the display is awakened by pressing a key the flashing ASCC reappears.

"Emergency operation" mode
This mode is used to exclude motor and safety alarms (e.g. photocells and sensitive edges), allowing the automation to open and close at low speed and with the operator present, with movement of the leaves only in the presence of a persistent command (when the command is released, the leaves stop).
Emergency operation is indicated by activation of the flashing light at a higher frequency.
Two types of "emergency" mode are possible: residential or condominium.
1) **residential** (flashing **L-ES** display indication): the PP command (from the terminal board or radio control) is initially managed as an opening command; only when complete opening has been reached will activation of the command send it to closing. Only when complete closure has been achieved will the command be able to open again.
2) **condominium** (flashing **L-EM** display indication): the PP command is initially managed as an opening command, but once it has been fully opened the leaves no longer close.
In this mode the display stand-by is not activated, always indicating the mode in progress.
By pressing the **TEST** button this message disappears for 10 seconds, and it is possible to access the parameters and other functions of the display.

ASCC	"Remote assistance" mode enabled
L-ES	"Residential emergency operation" mode enabled
L-EM	"Condominium emergency operation" mode enabled

17 Operation without limit switches

If magnetic limit switches are not installed (par. *60 00*, limit switches disabled), the stroke programming or position recovery procedure causes the sash to press against the mechanical stops.
Once the procedure has been completed, the sash moves back by the number of revolutions set by parameters *25* and *26*, and in subsequent manoeuvres the sash always stops ahead of the mechanical stops.

Attention! Ensure that the value of par.*23* is always less than or at most equal to par.*25*; the same applies to par.*24* with respect to par.*26*

18 Mechanical release

In the event of a fault or mains power loss, the gate may be released and opened manually. For systems with TW90/800/R - TW90/820/R the gate can be moved by hand without unlocking it.
If the gate releases with the controller unit powered, the message *StoP* flashes on the display.

For further information, refer to the locking/release operation in the manual of the automation system **TW90**.

When the release system is restored to the normal operating position, if the gate is not completely open or completely closed (by activating the corresponding limit switch, if installed and enabled, *600 1*) or if limit switches are not installed (*6000*), the control initiates a position recovery procedure (see chapter 20).

19 Position recovery mode

After a mains power outage or after mechanically releasing the gate, if the gate is not completely open or completely closed the next time a command is received (not activating one of the two limit switches, if installed and enabled), the control initiates a position recovery procedure:
- The gate starts a low speed manoeuvre.
- The flashing light flashes with a different duty cycle than normal (3 s on, 1.5 s off).
- The control unit recovers the installation data during this procedure. **Warning!** During this procedure, do not use any controls until it is completed.

In the presence of limit switches (*600 1*)
- If the gate leaf is in the fully open or fully closed position, the position recovery procedure is as follows: the gate clears the limit switch, stops briefly and resumes operation at the speed set in parameters *40* and/or *41*. Arrival

at the opposite limit switch takes place at the reduced speed set automatically (irrespective of the settings of parameters 13, 14 and 42), recovering position control with maximum precision.
- If, on the other hand, the leaf is in an intermediate position, it runs at reduced speed and the activation of one of the two limit switches allows immediate recovery of the position.

Without limit switch (60 00)
The execution of a complete stroke, from one mechanical stop to the other, allows the position to be recovered. The leaf retracts by the number of revolutions chosen in paragraphs 25, 26.
- Only for **TW90/800/R - TW90/820/R** motor. If the control unit detects a manual movement of more than 3 cm from the initial position, it launches a movement command that returns the sash to the position.

20 Initial testing

The testing must be performed by qualified technical personnel.
The installer is required to measure impact forces and select on the control unit the appropriate speed and torque values to ensure that the motorised door or gate remains within the limits defined by the standards EN 12453 and EN 12445.

Make sure that the provisions in "GENERIC WARNINGS" are observed.
- Turn on the power supply.
- Check that all connected controls are working correctly.
- Check that the release pin works correctly. The message STOP must flash on the display.
- Check travel and deceleration.
- Check that the impact force is correct, in compliance with EN 12453 and EN12445.
- Check that the safety devices are activated correctly.
- If the battery kit is installed, disconnect from mains and check that the batteries are working.
- Disconnect from mains power and disconnect the batteries (if used), then reconnect. Starting with the gate stopped in an intermediate position, check that the position recovery procedure is completed correctly for both the open and closed positions.
- Check that the limit switches are set correctly and function correctly (if installed). If necessary, change the setting of the parameter determining the motor position (right, left).
- Check that there is a gap of at least 2-3 cm between the gate and the mechanical stop at the end of the manoeuvre.
- **Only for TW90/800/R - TW90/820/R.** Check that without mains or battery voltage, when moving the leaf by hand, the control unit is switched on and that the display shows the "SELF" message.
- **Only for TW90/800/R - TW90/820/R.** If there are batteries, disconnect the mains power and check that the display shows bAtt. If SELF is displayed followed by ALIN, change the red and black cables connection to the POWER-IN terminal strips, as indicated in fig 2.

Declaration CE of Conformity

The undersigned Dino Florian, legal representative of **Roger Technology - Via Botticelli 8, 31021 Mogliano V.to (TV)** DECLARES that the **B70/1T** digital control unit is compliant with the provisions established by Community directives:

– 2014/35/UE LVD Standard
– 2014/30/UE EMC Standard
– 2014/53/UE RED Standard
– 2011/65/UE RoHS Standard

and that all the standards and/or technical requirements indicated as follows have been applied:
EN 61000-6-3
EN IEC 61000-6-2
EN 60335-1

Place: Mogliano V.to Date: 03/06/2023 Signature