V01.01 14/01/25


eyevision®

INNOVATIVE INTERCOM SYSTEMS

INTELLI HD SERIES

8" OR 10" TOUCH SCREEN SMART MONITOR

Third Generation 4 Wire Intercom System

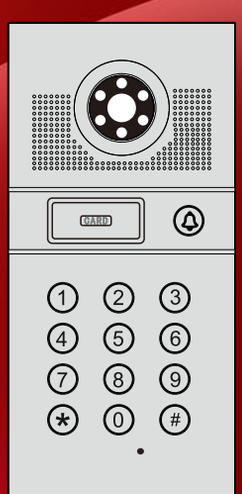

KP-24-SS-HD

KEYPAD VIDEO
INTERCOM CAMERA
170° 2MP HD



WF-8-HD



WF-10-HD

4 Wire Indoor Monitor
With Built-In WiFi For Smart Phone

tuya

Table of Contents

Page 2
Precautions
Quick Reference Diagram for simple installations

Page 3
Indoor Monitor overview, installation and specifications
Outdoor Unit overview, installation and specifications

Page 4
Cabling types and maximum lengths
Power Adapter

Page 5
Cabling Topology

Page 6
Wiring Overview

Page 7
KP 24-HD wiring, LED indicator, exit button electric striker and gate automation connection

Page 8
Keypad Programming

Page 9
Keypad Programming cont.

Page 10
Keypad Programming cont.
Indoor Monitor Touch Button Overview

Page 11
Using the indoor monitor (general use)

Page 12
Indoor Monitor Typical Configurations

Page 13
Indoor Monitor Typical Configur

Page 14
Multimedia


Page 15
Multimedia cont.,Common Door lock Output

Page 16, 17, 18, 19
Tuya APP and Configuration

Precautions

- Due to our constant developments, your purchased model functions may vary slightly to the instruction manual provided.
- We always endeavor to try to update our manuals regularly in accordance with the level of new development.
- Connect this unit ONLY to other compatible units specified within this manual,
- Connecting anything else to this unit may damage it or prevent it from operating correctly.
- Do not place the power cords from the AC/DC adapters, camera or monitor where they can be pinched or cut.
- Keep cords away from children's, pets and routine household traffic.
- Do not place heavy objects on power cords or cover cords with rugs or carpet.
- When the system is not in use, please unplug the AC/DC adapters from the wall outlet.
- Slots or openings in the back of the monitor are provided for ventilation and to ensure reliable operation of the video monitor or equipment and to protect it from overheating.
- These openings must not be blocked or covered.
- The monitor should never be placed near a heater and should not be placed in a built in installation such as a bookcase unless proper ventilation is provided.
- All parts of the system should be protected from shocks and vibrations.
- For cleaning the Lens & Screen please do the cleaning with a soft cotton cloth, do not use organic or chemical impregnate cloths. If necessary please use a damp soft cloth to clean dust.
- Image distortion may occur if the video door phone is mounted too close to magnetic field e. g. Microwaves, TV, computer etc.
- Please keep the indoor monitor away from wet areas, high temperature, dust, caustic and oxidation gas in order to avoid any

Quick Reference Diagram for Simple Installations

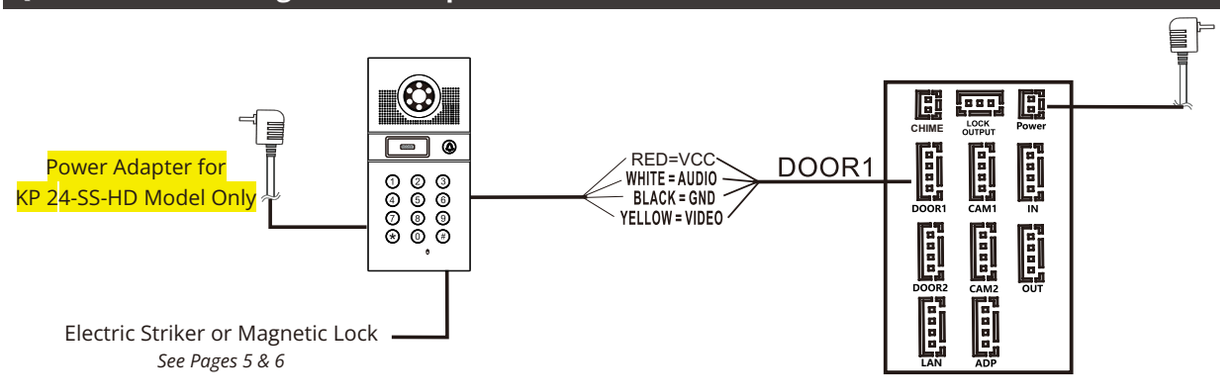

Indoor Monitor Specifications

Screen Size 8" or 10" (1024*600)

Power Consumption Maximum 1200 mA

Power supply External power supply DC 12-15V


Operating Temp 0~+50℃

SD Card Requirement 2GB~128GB Class 10 micro SD Read/Write 10MB/S Min.

Video Input Signal CVBS, CVI, TVI, AHD2.0, 1080P


System Capacity 6 indoor monitors + 2 outdoor stations + 2 cameras (1MP MAX.)

Indoor Monitor Overview

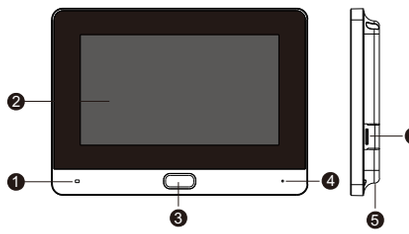


1 Power Indicator LED
2 TFT display
3 Mechanical Button
4 Microphone
5 Speaker
6 SD card slot

Indoor Monitor Installation

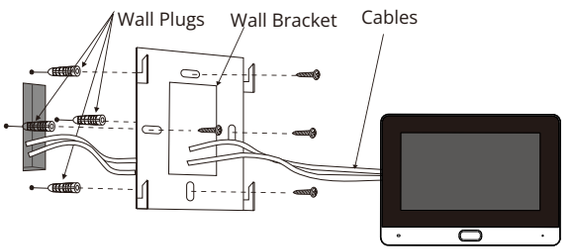

- Avoid installation near magnetic fields such as AC motors or Lifts
- Avoid facing the camera to direct sunlight
- Install the camera lense equal with average height eye level
- Always ensure power is off when connecting and disconnecting
- Ensure that the AC power supply is at least 30cm from the unit to avoid interference.

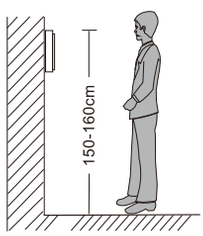

Outdoor Unit Specifications

Camera Sensor 1/3" CMOS Camera

Viewing Angle 170°

Definition 2 MP

Night Viewing IR LED

Operating Temperature -20°C to +50°C


Operating Voltage 12-15V DC

Operating Current 30mA Standby 70mA Operational

Card Type IC Card (Intelli Series 13.56 MHZ Only)


IP Rating IP65

Outdoor Unit Overview

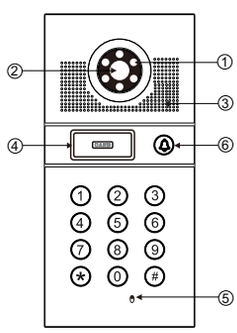


KP 24-SS-HD

1 IR LED's
2 Camera
3 Speaker
4 IC Tag Sensor
5 Microphone
6 Call Button
7 Wiring

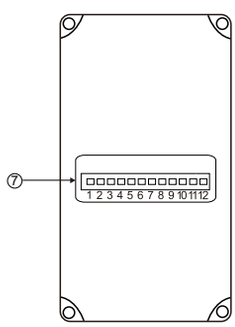


Outdoor Unit Installation

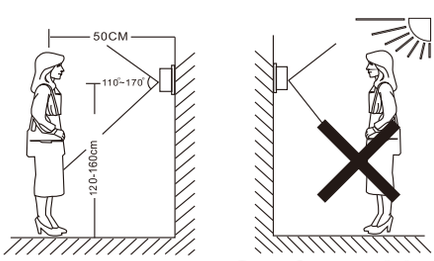


- Avoid installation near magnetic fields such as AC motors or Lifts
- Avoid facing the camera to direct sunlight
- Install the camera lense equal with average height eye level where possible
- Always ensure power is off when connecting and disconnecting
- Ensure that the AC power supply is at least 30cm from the unit to avoid interference.

Surface Mount

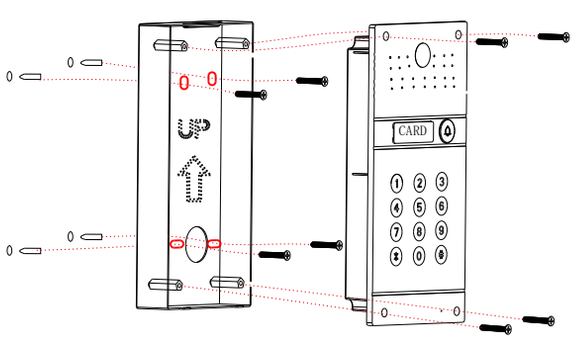

Flush Mount

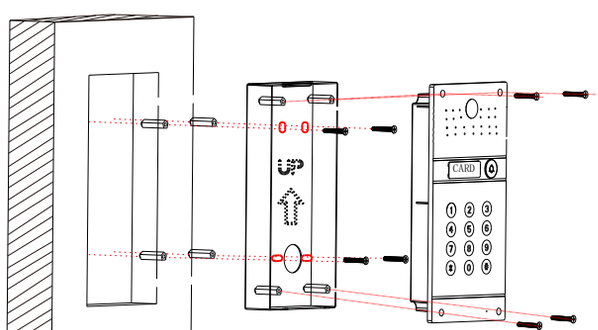

Cabling


4C ordinary unshielded wire and shielded wiring

⩽50m（4*0. 3mm²）
⩽80m（4*0. 5mm²）




3C ordinary unshielded + video cable(RG-59) connection method

⩽100 meters

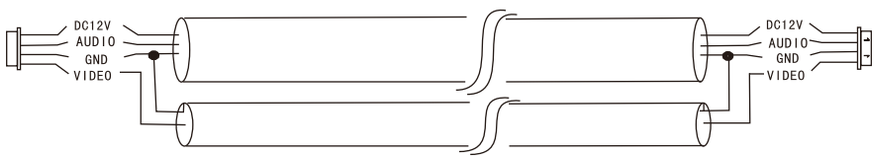

CAT5/CAT6 network cable connection (not recommended)

⩽50 meters

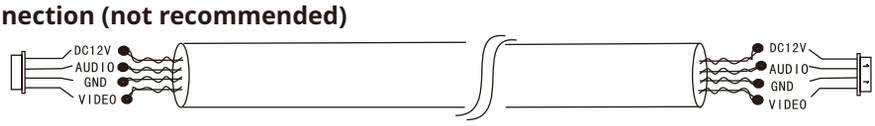

Power Adapter Limitations




15V 1A Power Adapter For Indoor Monitor
15V 2A Power Adapter For Door Station

* Max extendable distance is 3m
* Recommended cable to extend length is 14/020 pair
* Only one unit per power supply


Cabling Topology

Through the settings menu each monitor MUST be set with an ID number. The **DEVICE ID** Setting can be found in the monitors **MODE** menu.

First Monitor (Master) is addressed **01**
Second Monitor (Slave 1) is addressed **02**
Third Monitor (Slave 2) is addressed **03**
Fourth Monitor (Slave 3) is addressed **04**
Fifth Monitor (Slave 4) is addressed **05**
Sixth Monitor (Slave 5) is addressed **06**

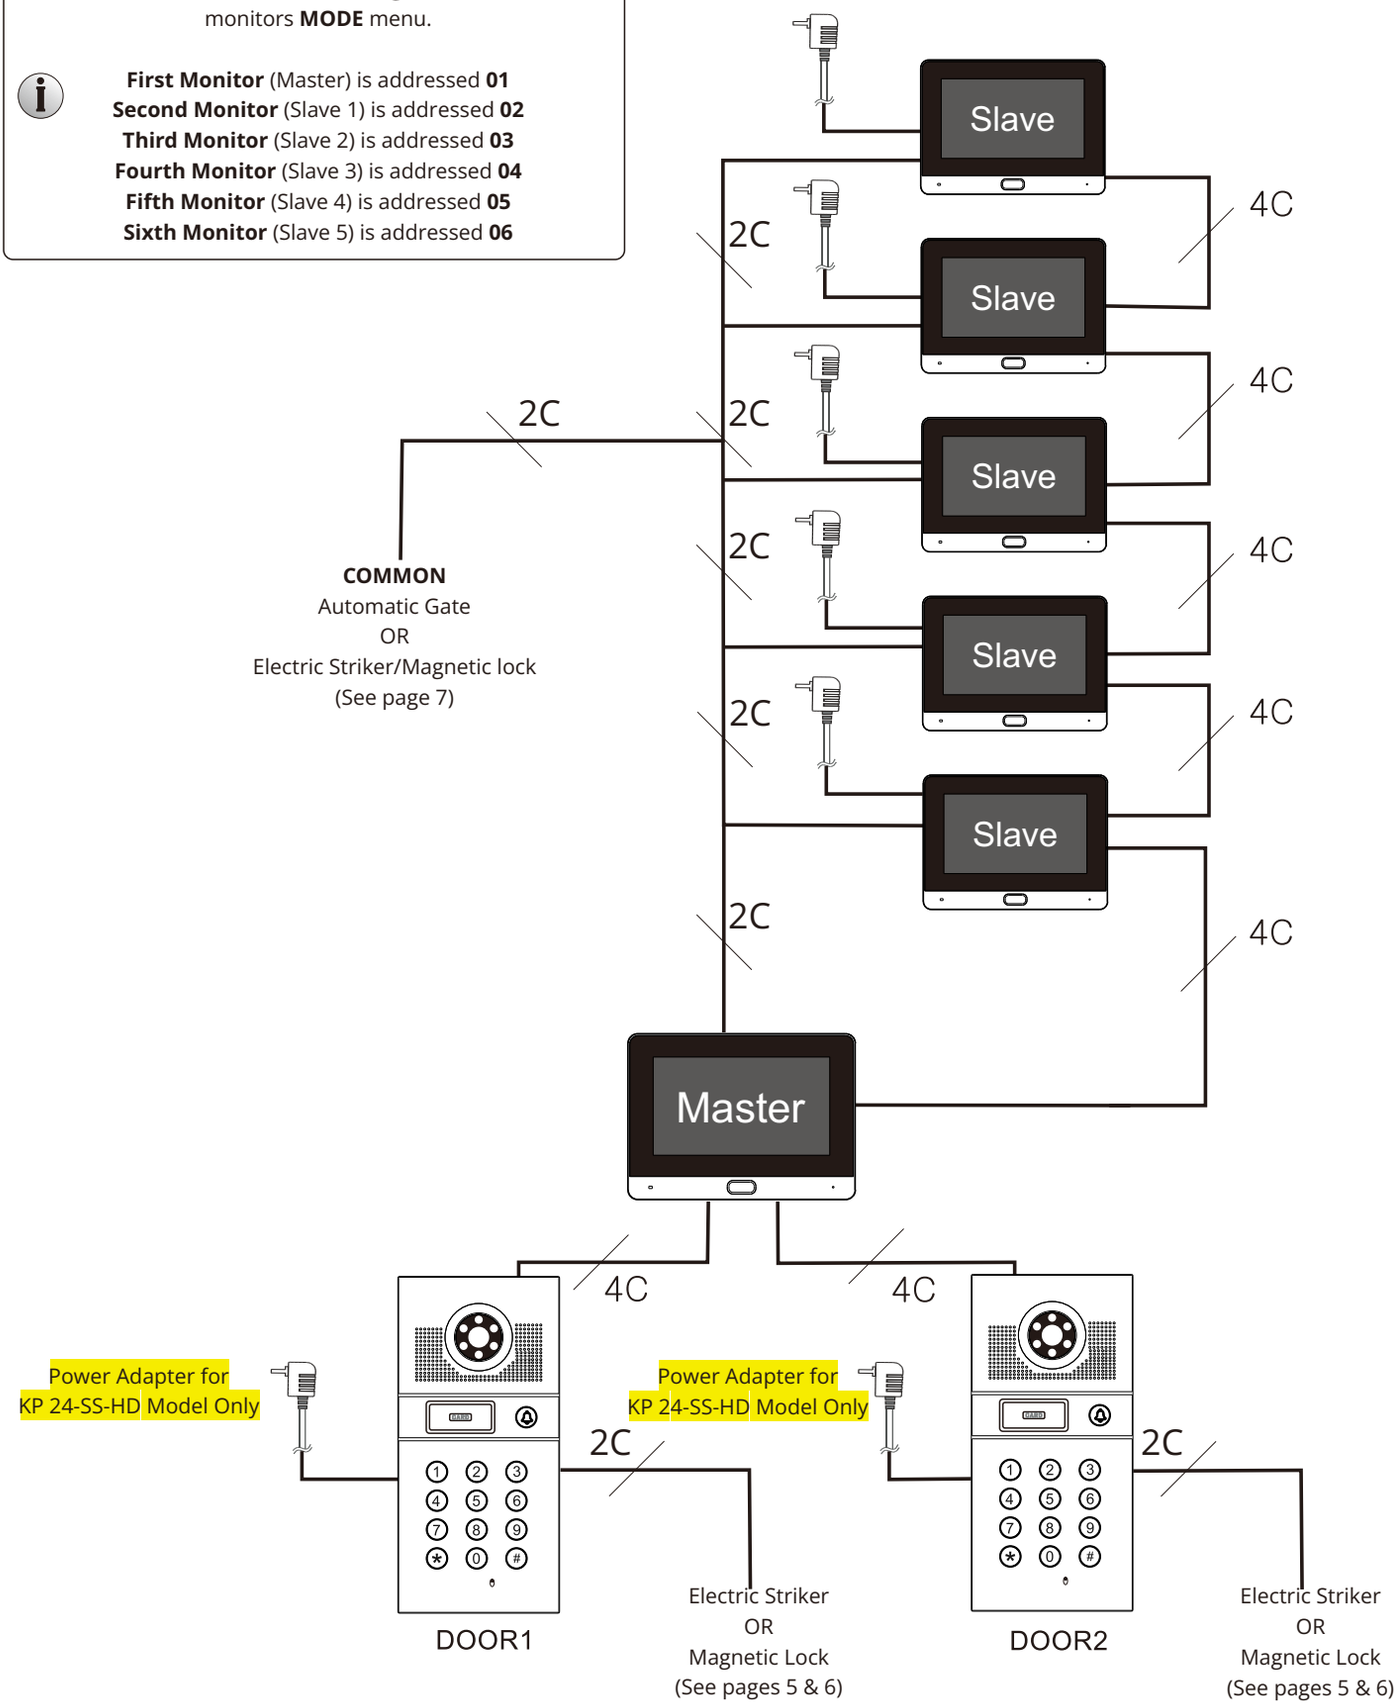


Wiring Overview

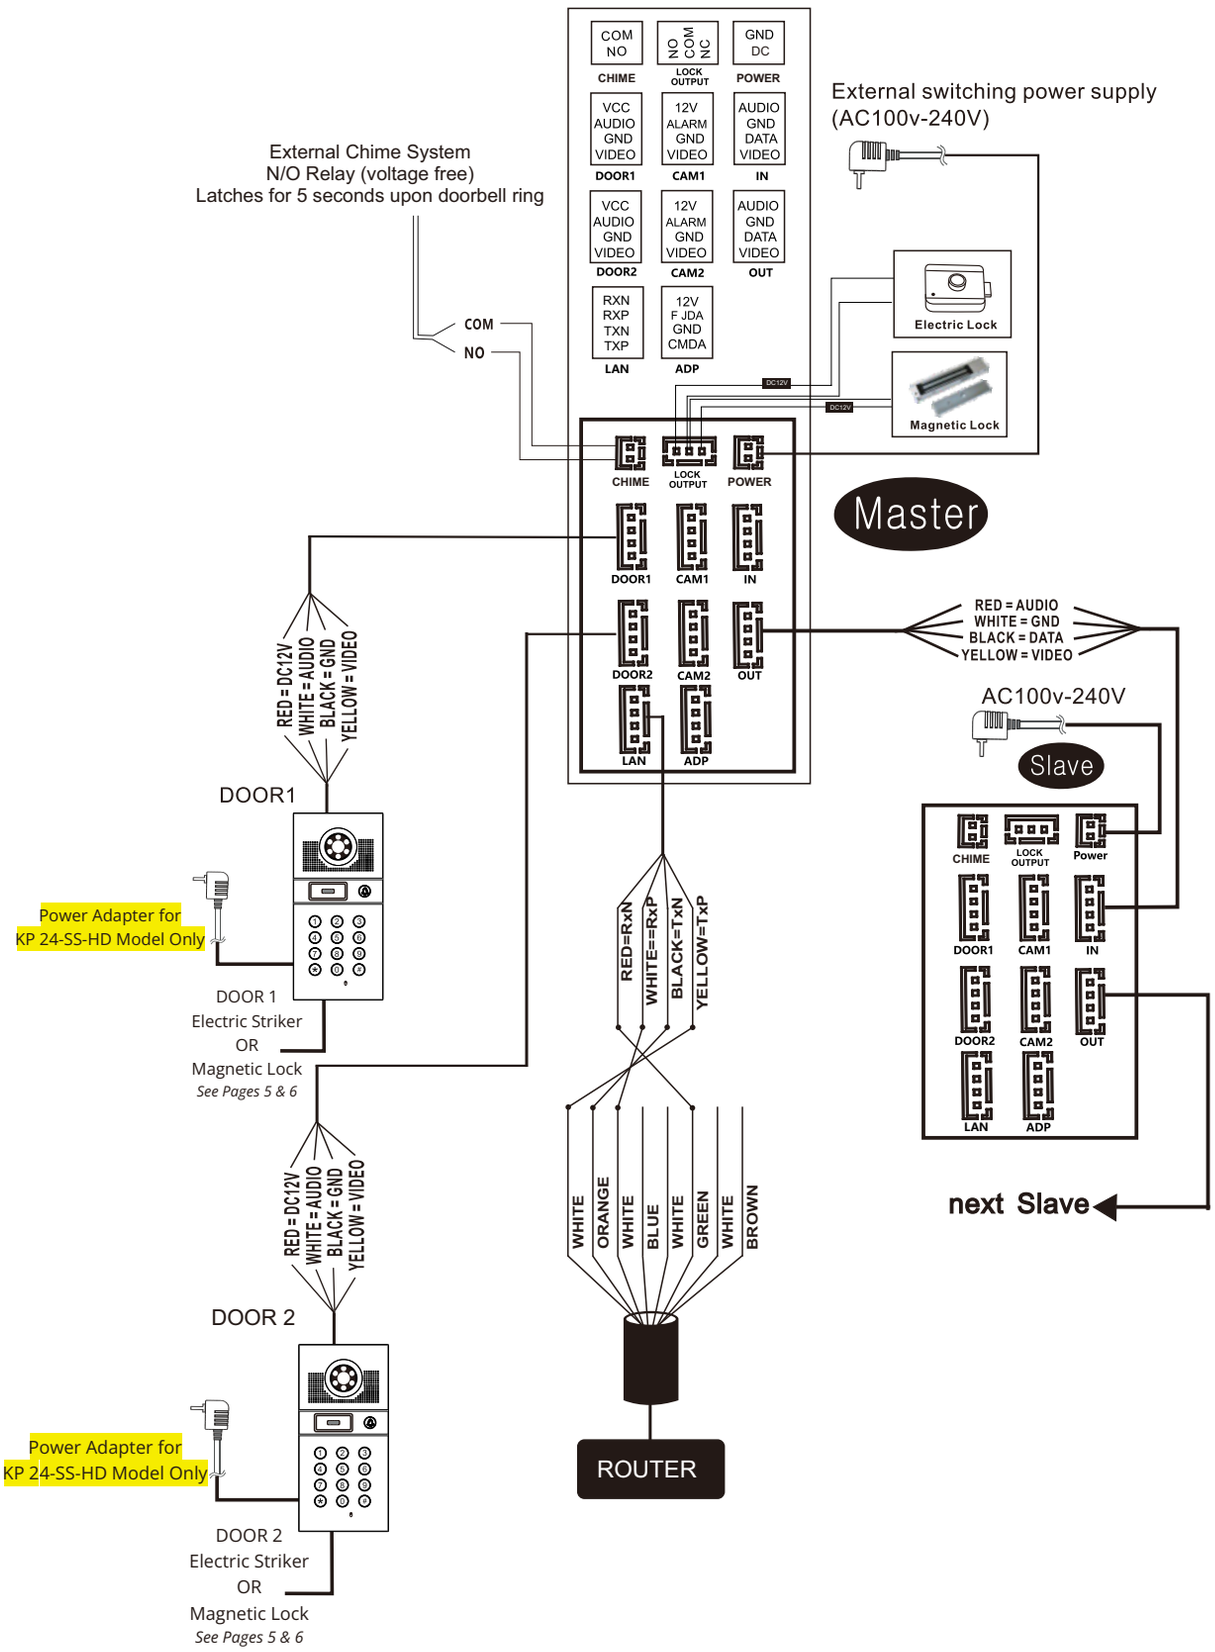


KP 24-HD Outdoor Station


Wiring Overview

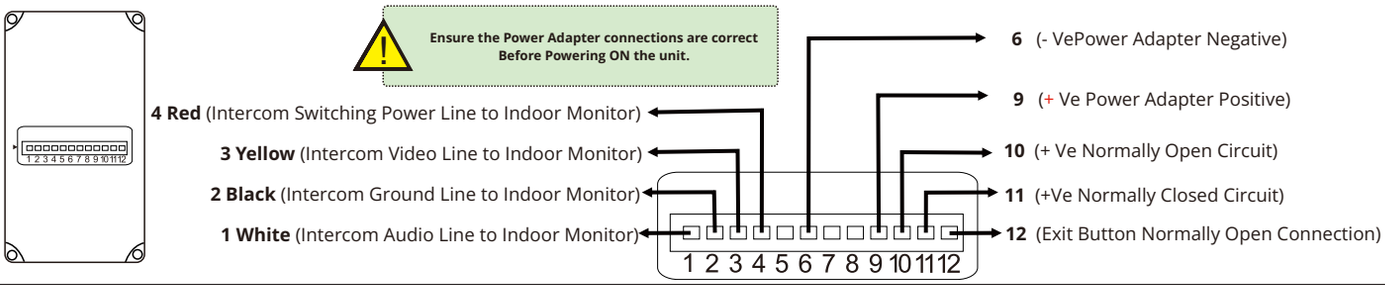


Fail Secure Electric Striker Connection (Power ON to Unlock)

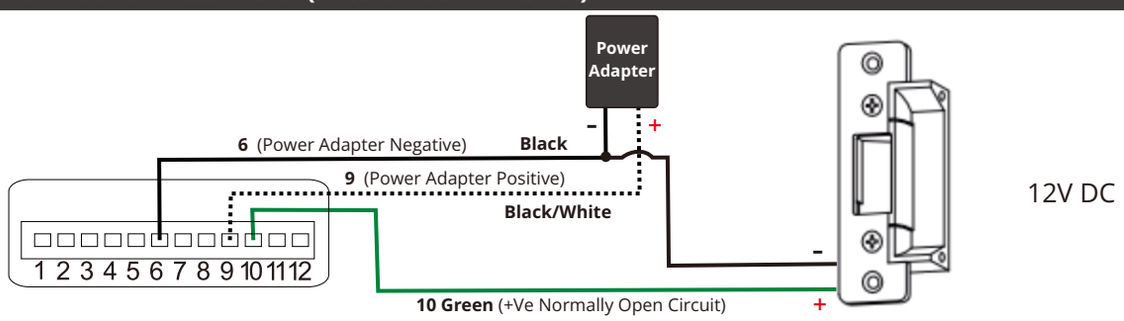


Fail Safe Electric Striker Connection (Power OFF to Unlock)

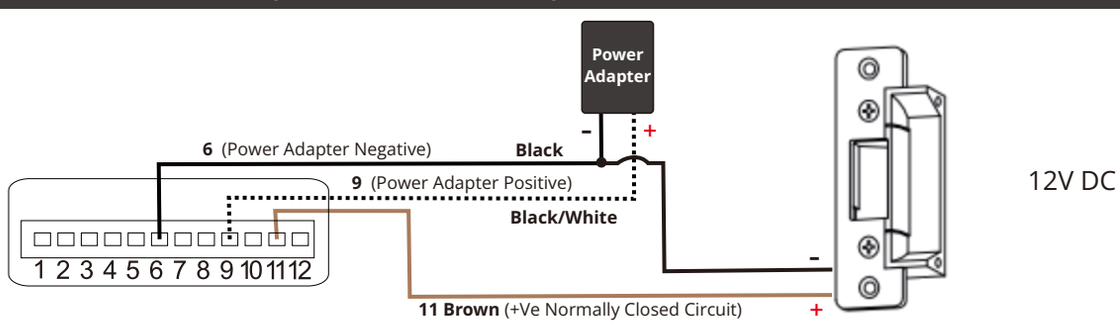

Exit Button Connection

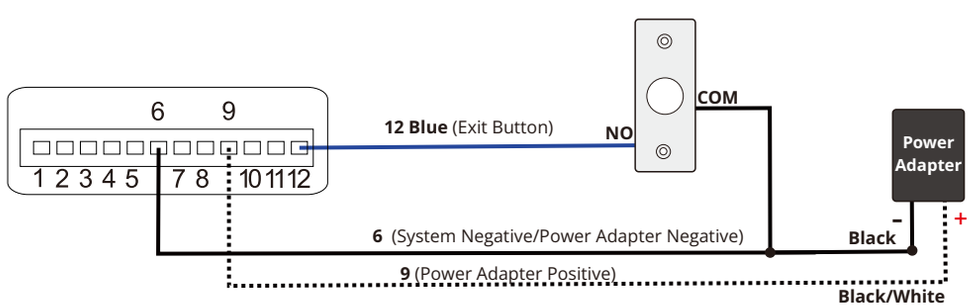

280kg Magnetic lock Connection

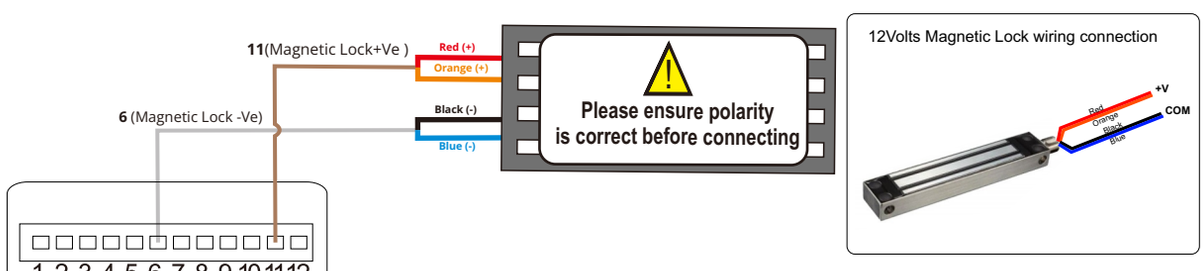

Entering and Exiting Admin

*1234#	Default PIN is 1234, if the PIN has been changed in the past then use the current PIN
**#	Press *, * then # to exit

Buzzer Alerts

Bi! Bi!	Successful Command
Bi! Bi! Bi!	Returned one step in Menu
Bi! Bi! Bi! Bi!	Failed Command

Changing the Admin PIN

*1234#	Default PIN is 1234 , if the PIN has been changed in the past then use the current PIN
0	Type 0 to enter the PIN programming menu
77#	Type 77# to enter the admin PIN menu
6666#	Type the new PIN and press # (4 Digits)
6666#	Repeat the new PIN and press #
**#	Press *, * then # to exit

Changing the Common Unlock PIN

*1234#	Default PIN is 1234, if the PIN has been changed in the past then use the current PIN
0	Type 0 to enter the PIN programming menu
11#	Type 11# to enter the common PIN menu
1111#	Type the new PIN and press # (4 Digits)
1111#	Repeat the new PIN and press #
**#	Press *, * then # to exit

Adding a User Tag

*1234#	Default PIN is 1234, if the PIN has been changed in the past then use the current PIN
1	Type 1 to enter the Tag programming menu
001#	Type in a user position between 001 and 200
SWIPE #	Swipe the tag
**#	Press *, * then # to exit

Providing a User with a Tag (or changing) there PIN number

* SWIPE	Type * then swipe an already working tag
0000#	Type the current PIN (The default which cannot unlock is 0000)
4444#	Type the new PIN and press # (4 Digits)
4444#	Repeat the new password and press #

Adding User Tags using the Admin Add Tag

SWIPE ADD TAG	Swipe the add tag
SWIPE ADD TAG	Swipe the add tag a second time
SWIPE ADD TAG	Swipe the add tag a third time
SWIPE NEW USER TAG	Swipe the new users tag, you can swipe through multiple one after the other
SWIPE ADD TAG	Swipe the add tag to complete programming

Note: Adding tags using this method does not give each tag a USER ID number, this means the tags can only be deleted by a complete clear of all user tags OR the tag being available and present for deleting.

Adding Administrator ADD/DELETE tags

*1234#	Default PIN is 1234, if the PIN has been changed in the past then use the current PIN
6#	Type 6#
SWIPE ADD TAG	Swipe the tag to be nominated as the add tag
SWIPE DELETE TAG	Swipe the tag to be nominated as the delete tag
**#	Press *, * then # to exit

Setting the Unlock Time for PIN number and Tag Users

*1234#	Default PIN is 1234, if the PIN has been changed in the past then use the current PIN
4	Type 4 to enter the unlock time setting menu
05#	Type the amount of seconds (00-99) then press #
** #	Press *, * then # to exit

Note for the monitor its unlocking time can be set via the monitor itself

Changing the Access Control Method

*1234#	Default PIN is 1234, if the PIN has been changed in the past then use the current PIN
3	Type 3 to enter the Access Control Setup Method
xx#	Type the setting number and press # →
** #	Press *, * then # to exit

00#	Only unlocking by Tag
01#	Unlocking by PIN or Tag (Default)
02#	Unlocking by Tag first followed by PIN

Changing the Security Settings

*1234#	Default PIN is 1234, if the PIN has been changed in the past then use the current PIN
5	Type 5 to enter the Security Settings
xx#	Type the setting number and press #
** #	Press *, * then # to exit

00#	No Security (Default)
01#	Swiping non-registered card or 10 incorrect PINS within a 5 minute period results in 2 minute shut down of the unlocking system from the outdoor station along with a doorbell call to the monitor.
02#	Swiping non-registered card or 10 incorrect PINS within a 5 minute period results in an alarm output from the buzzer for 1 minute along with a doorbell call to the monitor.

Deleting a User by there ID number

*1234#	Default PIN is 1234, if the PIN has been changed in the past then use the current PIN
2	Type 2 to enter into deleting state
001#	Type in the used user ID to be deleted between 001 and 200
** #	Press *, * then # to exit

Deleting a User by using there tag

*1234#	Default PIN is 1234, if the PIN has been changed in the past then use the current PIN
2	Type 2 to enter into deleting state
SWIPE #	Swipe the tag
** #	Press *, * then # to exit

Deleting User Tags using the Admin Delete Tag

SWIPE DELETE TAG	Swipe the delete tag
SWIPE DELETE TAG	Swipe the delete tag a second time
SWIPE DELETE TAG	Swipe the delete tag a third time
SWIPE USER TAG	Swipe the users tag you wish to delete, you can swipe through multiple one after the other
SWIPE DELETE TAG	Swipe the delete tag to complete programming

Deleting ALL User Tags

*1234#	Default PIN is 1234, if the PIN has been changed in the past then use the current PIN
2	Type 2 to enter into deleting state
SWIPE USER TAG #	Swipe any programmed tag
88#	Type in a 88#
** #	Press *, * then # to exit

Note This will not reset the common PIN.

Reset Process (with admin PIN)

This process will reset back to default parameters as listed below

- Admin PIN to 1234
- Public unlock PIN to 2580
- Unlock time to 5 seconds
- Security mode to No Security

*1234#	Default PIN is 1234, if the PIN has been changed in the past then use the current PIN
0	Type 0 to enter the menu
99#	Type 99# to perform the reset
** #	Press *, * then # to exit

Reset Process (without admin PIN)

This process will reset back to default parameters as listed below

- Admin PIN to 1234
- Public unlock PIN to 2580
- Unlock time to 5 seconds
- Security mode to No Security

1. Outdoor station power should be OFF

2. Press and hold the # Button while holding the button Turn the outdoor station power adapter to ON.

3. A Bi Bi Bi sound will be heard from the keypad to indicate reset complete

Button Overview



Monitoring	Monitor Door 1/Cam 1/Door 2/Cam 2
Snapshot	Snap the screen displayed by the door station and camera.
Recording	Start or stop recording the screen displayed by the door station and camera.
Unlock	Unlock the COMMON door striker/gate by press this button
Gate Unlock	Unlock the door striker/gate related to the outdoor station
Setting	Adjust the volume, brightness, contrast and color saturation.
Transfer call	During the conversation between the door station and the indoor monitor, click on this icon to transfer and select a certain device to transfer the call.
Answer	Press this button to answer and talk to the visitors. when monitoring, press the answer key to talk to the door station.
Hang up	Press this button to hang up and return to the standby interface.

Visitor Calls

When a visitor presses the doorbell the indoor monitor(s) will ring for a total of 30 seconds before returning to standby. At anytime during the ringing time a user can answer from any of the monitors by pressing the button. At this point there is hands free communication in both directions.
If required he user can press to operate the gate connected to the outdoor station that is in communication or can press to operate the gate that is connected to the common release.

Call Transfers

In a Multi indoor monitor installation if the user answers on one of the indoor monitors but decides the call is for another user within the home or another room the call can be transferred by pressing during the call then choosing the extension from the displayed list . they wish to transfer.

Once a call is transferred the indoor monitor will return to standby and the target monitor will ring with the guest showing.

Intercom Call

Whilst in standby click on the monitor to enter the main menu page, click on the Intercom button then select the target monitor from the list . . Now answer the call on the Target Monitor, Press the talk button of the receiving monitor to answer the incoming call there will be hands free audio communication between both points. Either party can end communication by pressing the button.


Monitoring

Whilst in standby click on the monitor to enter the main menu, click on the Monitor interface Button which will display four icons of Door 1,Door 2, Camera 1 And Camera 2 Select one of them to monitor and respective image will be displayed on the screen.
can monitor the door station for 1 min and camera duration time for 5 min, After that monitor will time up and goes back to standby status automatically.
While on Monitor status, Click on monitor key in order to change the Monitor interface(Door1,Cam1,Door2,Cam2) to switch image.
Press the Hang up button to end monitoring and return to standby mode.

Note that by default Door 2, CAM 1 and CAM 2 are all disabled. They can be enabled by entering into the main menu and the click on the setting, choose Door or camera and activate the respective status to ON.


Standby

There are three different modes of standby that can be used, option 1,option 2 and option 3. this can be changed in Main menu Setting
Option 1: Indoor monitor will not display anything and shows a blank screen and by touching on the screen will display Main menu. *The clock settings are DISABLE* in this Option*. It will timeout after TWO minutes.*

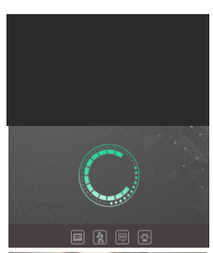

Option 2: Indoor monitor display the time and date. *See clock switch settings and ENABLE It will timeout after TWO minutes.*


Option 3: Digital photo frame which is when the indoor monitor is in an idle state it will loop through stored photos on the SD card. *See Digital photo frame*

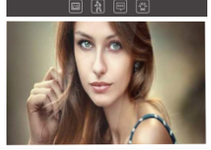

Note: When using digital photo frame mode motion detection will automatically be disabled.

Enable/Disable Digital Photo Frame


Digital photo frame mode will display photo from Sd card in standby mode. First insert the SD card (2GB ~128GB) in the indoor monitor which automatically create a “DigitalFrame” folder. Images will only be played if the pictures are placed in this folder. Once the pictures are copied place the SD card back in the monitor and then go to **Main menu** then click on **settings** and then select **Scene**, Now turn ON the Digital Photo

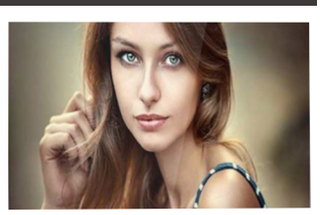

Note : when motion detection turns on, the digital frame disable.


Realtime Monitoring Adjustments

clicking in the main menu and enter the monitoring interface will display four device icons select one of them to monitor and now click on the image settings symbol to see call Volume, brightness, contrast and saturation. Click the add or subtract on the left or right side of the any parameter to adjust the value of the parameter.
Note: Color parameter can be set during monitoring, calling, alarm, motion detection and other images.

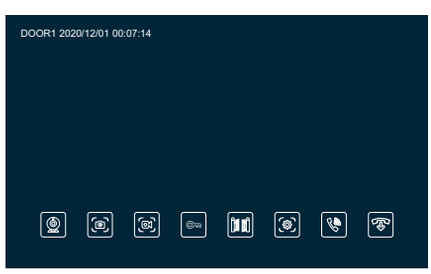


[Talking Volume]: Values adjustable from 0 to 10(Default: 7).
[Bright]: Values adjustable from 0 to 50. (Default: 25).
[Contrast]: Values adjustable from 0 to 50. (Default: 25).
[Saturation]: Values adjustable from 0 to 50. (Default: 25).
[Return]: Press to return to Standard mode.

Setting Indoor Monitor Number (Device ID)

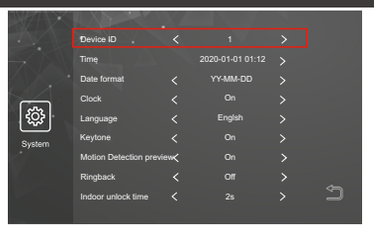


Click on screen to enter the main interface then select settings and now select system, Now select Device ID setting you can cycle from 01 to 06. This number directly corelates to the call transfer and intercom function when selecting a target indoor monitor.
Notes
1. The first monitor in the intercom in the line should always be set to 01
2. No two monitors should share the same ID number to avoid conflicts

Enabling/Disabling a Second Outdoor Station

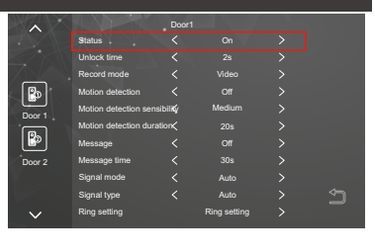

Navigate to the main interface and select ‘Setting’ and then ‘Door’ Now select the Door station 2 and keep the status to ON as shown in the Figure. To Enable a second outdoor station this setting should be turned ON for the FIRST monitor in the intercom line ONLY (Device ID 01).

Door 1 and Door 2 Unlock Time

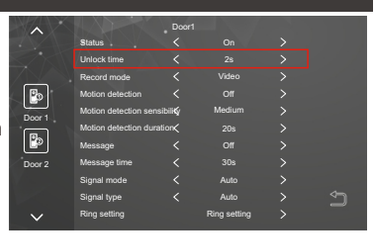


Navigate to the main interface and the to settings and select door parameter. Now select the particular door station and now change unlock time to your required time between 2 seconds to 10 seconds.

This is the respective unlocking time of each indoor monitor and should only be set on the FIRST monitor in the intercom line (Device ID 01).

Note: KP 21 Keypad models also need the unlock time set on the outdoor station itself (see keypad


Indoor Unlock Time

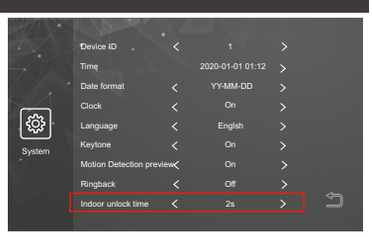

Navigate to setting and then system now change the indoor unlock time between 1 second to 10 seconds . This is the time setting for the unlocking time of the common gate which is connected directly to the monitor.

Note that this is NOT the outdoor station unlock time.


Record Mode

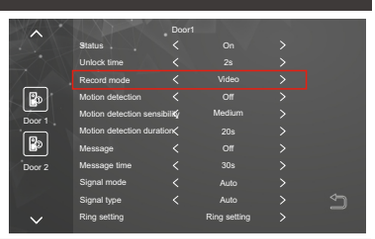

Navigate to “Door settings” then select the door station and set the type of recording for the systems automatic *when a guest rings the door bell) and manual captures wether it be a video recording or a photo snapshot.


Note that a micro SD card must be installed to use this feature.

Motion Detection

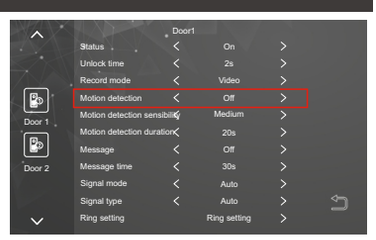

Navigate to “Door setting” then select the door station and the select motion detection. Motion detection can be enabled for one specific camera of the two outdoor station inputs. When enabled it will automatically call up the video for the chosen motion detection camera and take a capture based on the record mode setting.
Note that for the outdoor station it is considered sensitive and good for enclosed front door areas which would not see any movement normally. It should not be enabled when it could see any movement normally from trees, pedestrians etc.


Message

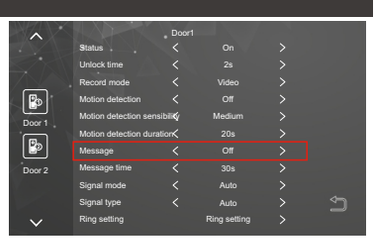

Navigate to “Door setting” then scroll to motion message. If enabling the message feature after no answer from any user on any indoor monitor and once the ringing duration times out (see volume menu) then the guest will be prompted with a message “no one is at home could you please leave a message”
Note that a micro SD card must be installed to use this feature.

Language

Navigate to “System” then Language. You can choose from English, Hebrew, French, Spanish, Portugese, Russian, Turkish, Chinese, Polish, Arabic and German.

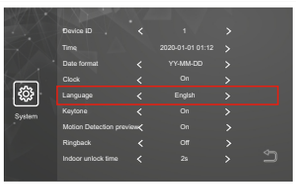


Time and Date

Navigate to “System” then Time.

Here you can set the date and time (in 24 Hr format). This is critical for any system recording as well as the clock display.

You can also ENABLE-DISABLE the Clock Switch Setting for the standby screen. Enabling Clock Switch will set the system standby to Clock Mode, Disabling will set the system Standby into Simple Mode.

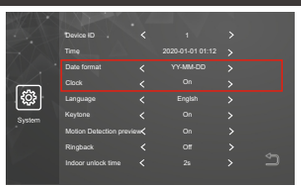


Intercom Ring Volume & Enabling Ringtone outside

Navigate to “Door setting” then select ring tone now select the volume. From this menu you can set the scheduled time for different ring volume levels (1-10) for Morning (Volume 1)/Afternoon(Volume 2)/Evening(Volume 3) and the duration of the ringing time..

Button Voice sets the audible feedback ON/OFF per touch button press on the indoor monitor..

Ringback Enables the ringtone to be audible at the outdoor station.

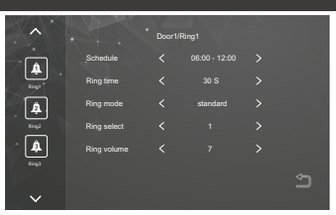


Ringtone

Navigate to “Door System” then ring tone. From this menu you can through the mode setting choose wether to use from one of the default twelve ring tones or choose a custom ring tone from Ring Mode.

Note: When choosing the mode it will be common to both outdoor stations. Meaning if default both will need to use a default ring tone if custom both will need to be a custom ring tone.

If using a custom ring tone the mp3 file(s) must be stored on the micro SD card in the folder structure USER\ring noting that the directory is case sensitive.

Each custom ring tone must be named ring_x.mp3 replacing the x with a numerical number in consecutive sequence. Example: The first is ring_1.mp3 and the second is ring_2.mp3.

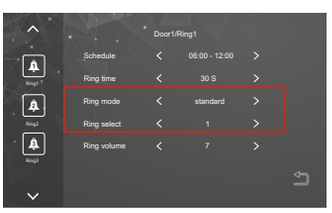

Information

Navigate to “System” then system info.


This screen will display Firmware and MCU version Mac address and ID number.

It will also display the micro SD card capacity, used space and allow formatting of the micro SD.

Furthermore GET ID can be used for an address ID Update/Change.




Media Menu

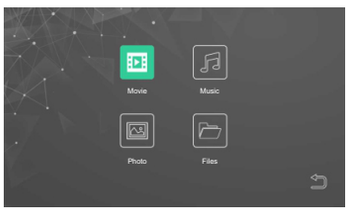

Navigate to “Media”. You can choose from within this menu the type of file you wish to view wether it be Music for audio files, photo for images or file for general navigation along with firmware upgrade files.

Note: ALWAYS disconnect the power to the indoor monitor whenever inserting or removing the micro SD card.

Music

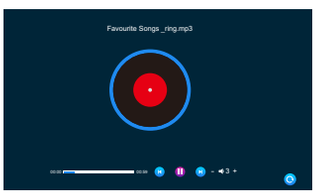


Navigate to “Media” then “Music”.
Click the music file to play. while playing you can perform operation as last track, pause, next track, increase or decrease the playing volume from 0-10 and return.

To play the music, Mp3 music files need to be copied in “Bgmusic Folder” on micro SD card.

If a visitor call the indoor monitor, the play will stop and switch to the door station screen.

Photos

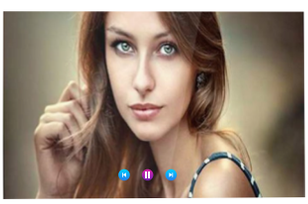

Navigate to “Media” then “Photo”.see the list of photo files.


Now click on any of the picture the next photo will automatically played, unless it is paused.

For .jpg photo file placement on the micro SD card the folder structure should be “Digital Frame”.

Note: ALWAYS disconnect the power to the indoor monitor whenever inserting or removing the micro SD card.

Maximum photo is 1920x1080 resolution and 3MB or less.

File Managment

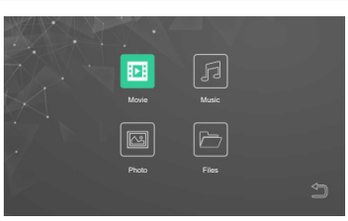


Navigate to “Media” then “File Management”.
In the media interface, click the Files menu to see the SD card folder. Enter the SD card to see the automatically created folder. Folders automatically created are “Digital frame” folder, “Bg Music” folder, “Ring” folder, “Message Import” folder, and “DOORBELL” folder(This folder is hidden in the indoor monitor and can only be seen if the SD card is plugged into the computer.
[“Digital Frame” folder?]Save the picture of the digital photo frame

[“Bg Music” folder] Store background music files for indoor units.
Note: The voice file request is in mp3 format, and the file size is up to 2M.
All the records of the above four folders can be seen in the event menu.
1. Store the recorded voice file in this folder.
2. In the file manager, find and click the file, and then automatically import it to flash to replace the default message alert tone.

[“Message Import” folder] The message customization function allows the user to set the user defined leave message alert tone.
[“Ring” folder] Store user defined ringtone files for indoor units.
[“ALARM” folder] Store the records after the indoor unit triggers the alarm.
[“CALL” folder] Store the call history of the indoor unit and the outdoor station.
[“MD” folder] Store the motion detection record of outdoor station.
[“MSG” folder] Store the message record of the indoor unit

All the record of the above four folders can be seen in the event menu.

Event

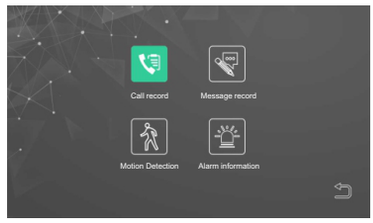

Navigate to the main interface, Click on the Events. In this interface we can see Call record, message record, motion detection and Alarm.
can see the record type, time, device, and whether it has been read or unread.

Call record:
Automatic snapshot or recorded video when any outdoor unit calls.
Any outdoor station call or under calling, manually captured the picture or recorded video.

Message record:
when the message switch is turned on, the video is automatically recorded from the beginning of the call when the call is not answered.

Motion detection record:
Automatically captures pictures or record when a motion detection occurs on outdoor station. manually captured pictures or video recorded in the motion detection process off all outdoor stations.

Home, Away and sleep mode

In Main interface mode identify one of the following modes.

At home mode : normal working mode.

Not at home mode : the visitor enters the message mode directly after making a call.


Dormant : In normal Woking mode, there is no ringing tone and prompt tone when calling.

Common Door Lock Output (From monitor only)

Open the lock connecting to the indoor unit.


Monitor can provide a Dry contact of NO and NC combination to trigger the Automatic gates, Locks and Magnetic Locks.

For Automatic Gates

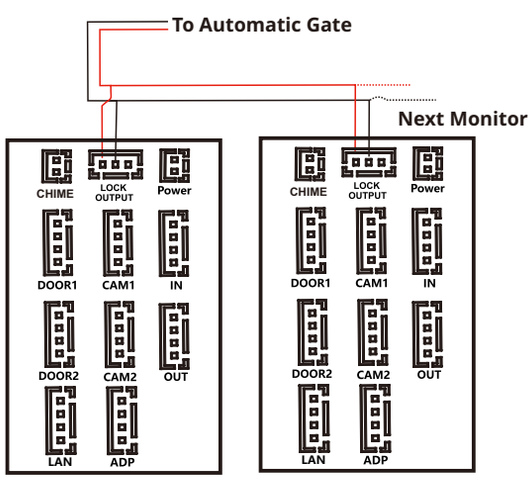

APP Interface

① Hang up / Exit.
② Audio Status
③ Snapshot: During talking/monitoring mode, press the icon snapshot image(Android system smart phone save snapshot picture on App; IOS system smart phone save snapshot picture on mobile phone photo albums.
④ Mute
⑤ Unlock (Connected to outdoor station)
⑥ Switch camera image: During talking/monitoring, press the button view door1, door2, camera1, camera2.
⑦ Playback: Make sure monitor insert MicroSD card, and support playback calling/monitoring video record.
⑧ Common Unlock (Connected to the monitor)
⑨ Video record: During talking/monitoring, press the button start video recording.
Full screen: Press the button display full screen
Setting:

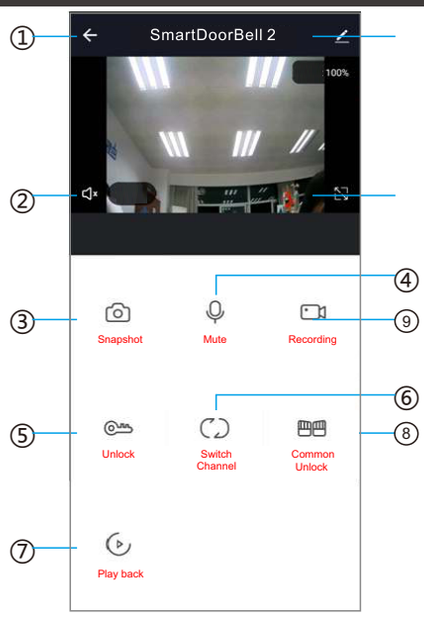


APP Configuration

APP Install and Registration (All Users)


1. Download Tuya Smart from the APP Store on your Android/Apple Device.
2. Open the App and register an account ensuring you select “Australia” as the country
3. Login after registration. NOTE: Each user must register there own account.

APP Preparation (Home Owners Device)

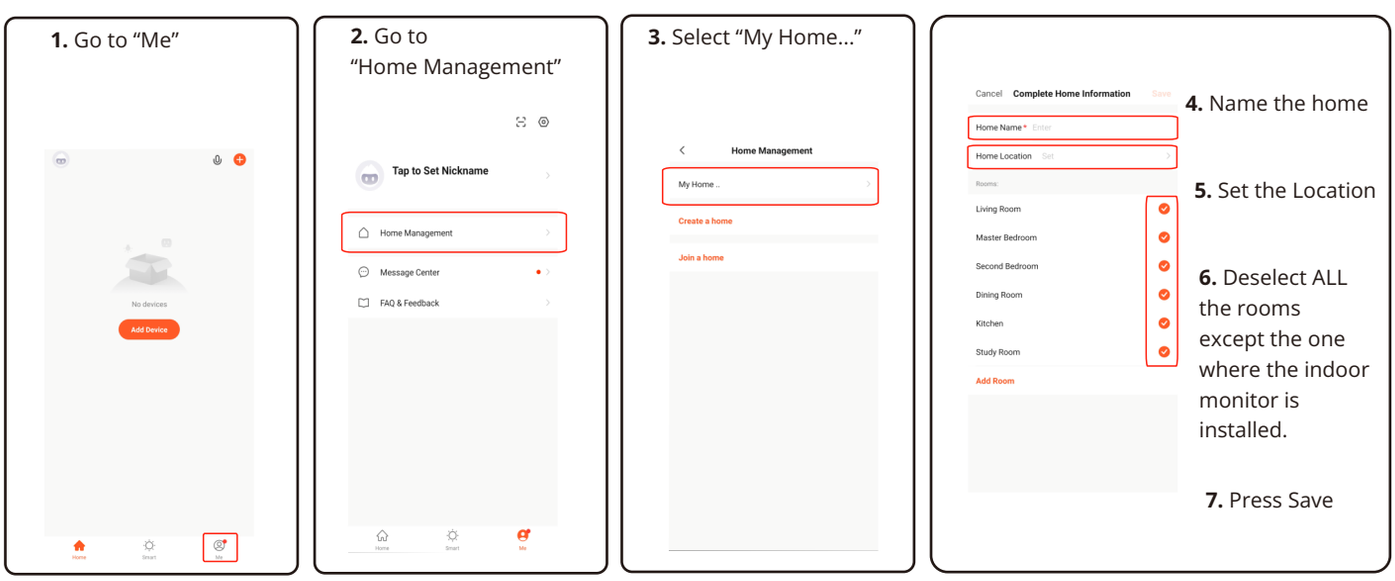

Monitor Preparation for Wi-Fi Connection

There are two types of connecting modes AP mode and Cable mode.

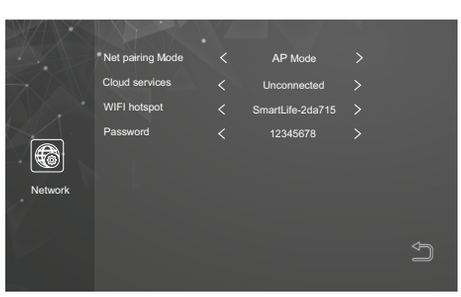

AP Mode:
Monitor need to be prepared for the AP mode.


Click on the screen and enter the main interface then Settings > Network, Select AP mode,
Press the back button ⮌, the indoor monitor will ask for reboot, Now reboot and start Ap mode.
It will create a hotspot named “Smartlife-xxxxxx”.

Monitor to APP Connection (Home Owners Device)

ENSURE you are connected to your home Wi-Fi 2.4GHZ network

If at anytime you are prompted to accept permission including location please accept

1. Ensure you are on the correct home then go to "Add Device"

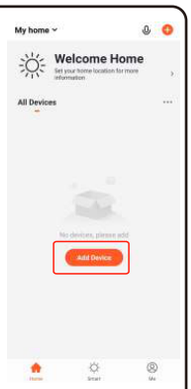


2. Select Video Surviellance then Smart Doorbell




3. From the top right change from QR CODE to AP MODE

Then Check the prompt tone checkbox and press next.

No tone or LED is expected with this system.

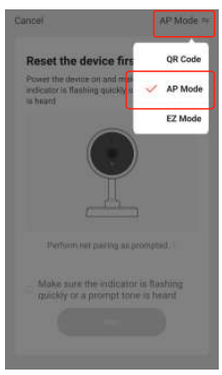

4. Select the home WiFi network (2.4GHZ) and input the password

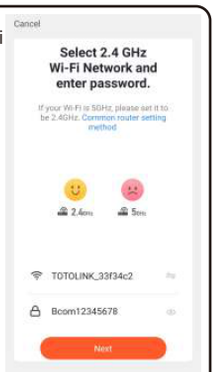


5. Select go to Connect and choose the SmartLife-xxxxx hotspot created by the indoor monitor
then press back



6. Once it reaches 100% it has been added successfully



7. Successfully Completed

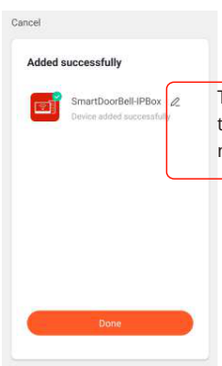


Touch the pen to edit the name

1. In a case where the phone tries to reconnect to SmarLife-xxx hotspot then from your Wi-Fi settings choose to forget this network.

2. After successfully completing the Tuya Smart App will provide further instructions to set the phone to always receive the notifications, these must be followed for reliable notifications.

3. If you are receiving notification without audio try turning off your bluetooth as it may be sent to another device such as car audio, smart watch etc.

Cable mode Connection:

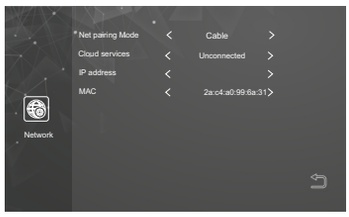


We can use cat5 cable to connect indoor monitor to a router, and connect cell phone WiFi to this router.

prepare the monitor to cable mode

click on Setting > network setting, select cable mode , press back button the indoor monitor will ask for a reboot and start then click on the reboot and start cable mode.

1. Ensure you are on the correct home then go to “Add Device”

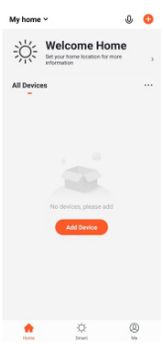


2. Select Video Surviellance then Smart Doorbell




3. From the top right change from QR CODE to Cable

Then Check the prompt tone checkbox and press next.


No tone or LED is expected with this system.

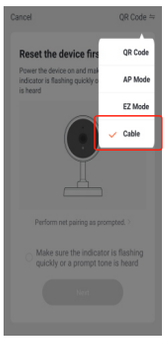


4. Connect Device window will appear. search process may take 2 min. please don't perform and operation during this time.

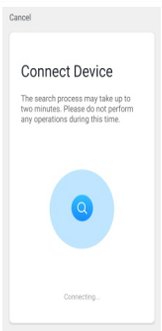


5. Select the device to Add

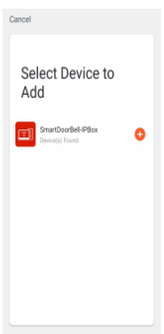

6. Once it reaches 100% it has been added successfully

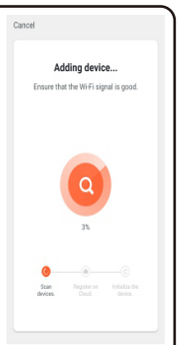

7. Successfully Completed

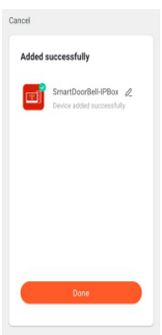


1. After successfully completing the Tuya Smart App will provide further instructions to set the phone to always receive the notifications, these must be followed for reliable notifications.

2. If you are receiving notification without audio try turning off your bluetooth as it may be sent to another device such as car audio, smart watch etc.

Sharing with another user (Low Privileges - No unlock feature)


Note that the only way for the device to be removed from the users APP is for the user to delete it themselves, i.e no Admin Managment

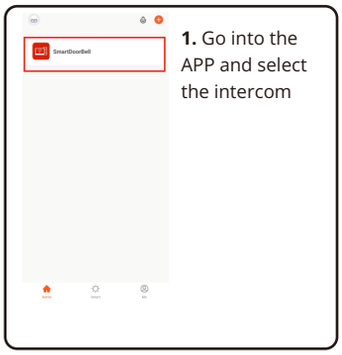

1. Go into the APP and select the intercom




2. Press the edit icon

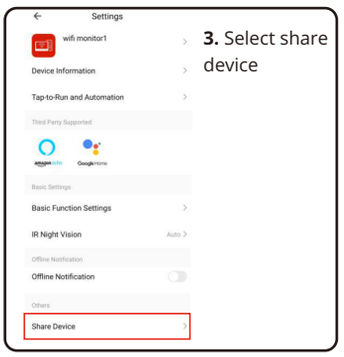

3. Select share device




4. Select Add Sharing

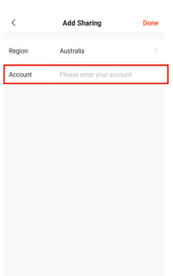


5. Enter the users Tuya account email address then press Done, an invitation will be sent to the user


Sharing with another user (High Privileges - with unlock feature)

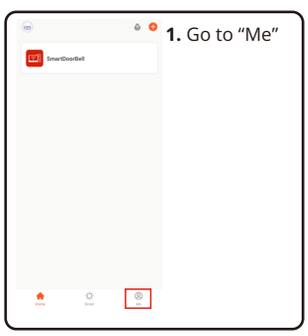


1. Go to "Me"

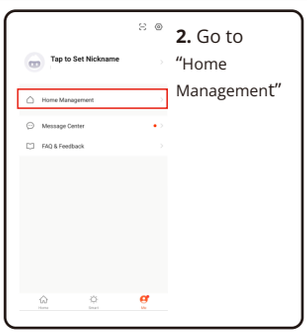

2. Go to "Home Management"

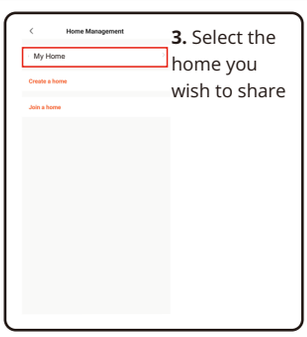


3. Select the home you wish to share

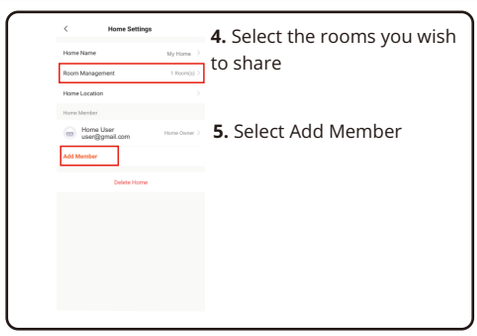


4. Select the rooms you wish to share

5. Select Add Member

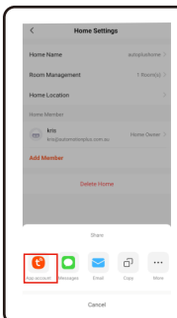

6. Select Tuya APP Account

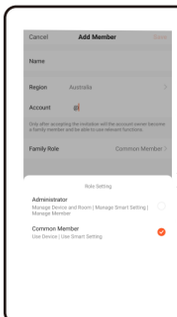

7. Input the User Name

8. Input the Users Account email

9. Set the Users role

Administrator
Total Control over intercom communication including unlocking and adding/deleting users

OR


Common Member
Total Control over intercom communication including unlocking only

Press **SAVE** an invitation will be sent to the user


Important for re-setup (if required)

If the intercom has been installed to another device already AS THE FIRST USER then it must be deleted from the users APP by following the instructions.


If you would like to add the device to other users devices follow the sharing methods above (two methods).

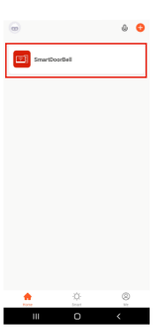

1. Go into the APP and select the intercom

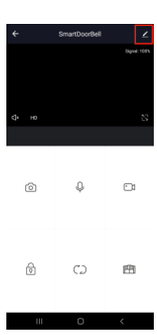

2. Press the edit icon

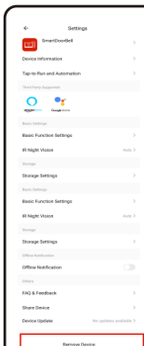

3. Press the remove device button

Third Generation 4 Wire Intercom System



KP-24-SS-HD

KEYPAD VIDEO
INTERCOM CAMERA
170° 2MP HD



WF-8-HD



WF-10-HD

- 4 Wire Indoor Monitor With Built-In WiFi For Smart Phone
- 8" or 10" Touch Screen, IPS Screen, Resolution 1024*600
- Anti-Tempered Glass Front Panel
- Easy-to-Use UI(User Interface) Menu
- Supports Video Recording and Snapshot With SD Card
- Customized Ring Tone, by Selecting Music From SD Card.
- Photo Frame / MP3 & MP4 Player / Clock & Voice Message
- Talk / Unlock / Monitor / Internal Call / Transfer Call

WiFi

tuya

GET IT ON Google Play

Download on the App Store

eyevision®

INNOVATIVE INTERCOM SYSTEMS